# EchoPod® DL14

Multi-Function Ultrasonic Liquid Level Transmitter



# **Application**

The general purpose ultrasonic transmitter provides continuous level measurement up to 49.2" (1.25m) with a 4-20 mA signal output and four relays, and is configured via our free WebCal® software. Each relay is fully configurable for automatic fill, empty or alarm functions, and the embedded level controller may lower cost by replacing external control hardware. This non-contact liquid level sensor is well suited for corrosive, sticky or waste liquids, and is selected for chemical feed, IBC or drum, skid or machine and cooling tower applications.











#### **Features**

- Level measurement, switch and control functions up to 49.2" (1.25m)
- Configuration is fast and easy via WebCal software and USB adapter
- Narrow 2" beam width and short 2" dead band optimized for small tanks
- Four (4) programmable relays rated @ 1A / 60VA for switch, pump or valve control and fail-safety
  - 1 pump or valve with 3 alarms
  - 2 pumps lead-lag with 2 alarms
  - 2 pumps duplexing with 2 alarms
  - 4 independent switch point alarms
- PVDF transducer and 6P polycarbonate enclosure for corrosive liquids
- Automatic temperature compensation for accurate measurement

#### Success

EchoPod is featured in what FOX News calls, "The greenest house in the world". Florida's Green House spotlights residential conservation technologies for EPA, university, engineer and architect study. As the nations water resources decline, reclamation is core to the solution. The average US citizen consumes 88 gallons of water



per day. About 65% of indoor use occurs in the bathroom and 1/3 of that flushes down the toilet. The Green House reclamation system collects and filters grey water from sinks, showers, baths, laundry and the yard for reuse in toilets and irrigation. The system includes a 120 gallon underground water cistern. EchoPod measures the level, and opens the fill valve to replenish the system with tap water, if necessary.

# Compatible Products



**DATALOOP™** 

Level Indicator



**DATAVIEW**<sup>TM</sup>

Level Controller



LI40

**PODVIEW<sup>TM</sup>** Level Indicator

# EchoPod® DL14

Multi-Function Ultrasonic Liquid Level Transmitter



# **Specifications**

Configuration:

 Range:
 49.2" (1.25m)

 Accuracy:
 0.125" (3mm)

 Resolution:
 0.019" (0.5mm)

 Dead band:
 2" (5cm)

 Beam width:
 2" (5cm)

Windows® USB 2.0

WebCal® PC

Memory: Non-volatile
Supply voltage: 24 VDC (loop)

**Consumption:** 0.5W **Loop resist.:**  $400\Omega$  max

Signal output: 4-20 mA, two-wire
Signal invert: 4-20 mA or 20-4 mA
Signal fail-safe: 4 mA, 20 mA, 21 mA,

22 mA or hold last

Contact type: (4) SPST relays, 1A
Contact fail-safe: Power loss: Hold last

Power on: Open, close

or hold last

**Hysteresis:** Selectable **Process temp.:** F: 20° to 140°

C: -7° to 60°

Temp. comp.: Automatic

Ambient temp.: F: -31° to 140°

C: -35° to 60°

Pressure: MWP = 30 PSI (2 bar)

Enclosure rating: Type 6P, encapsulated,

corrosion resistant &

DL14 -

submersible Polycarbonate

Encl. material: Polycarbonal
Strain relief mat.: Santoprene
Trans. material: PVDF

Cable jacket mat.: Polyurethane

Cable type: 9-conductor, shielded


Cable length: 48" (1.2m)

Process mount: 1" NPT (1" G)

Mount gasket: Viton®

Classification: General purpose
Compliance: CE, RoHS
Approvals: cFMus

### **Dimensions**

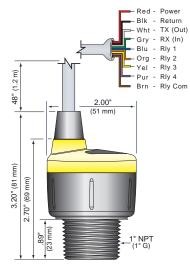

### Configuration





The level sensor is configurable via our free WebCal PC software and Fob USB adapter. The sensors are offered with and without Fobs. Fobs are universal and can be used to configure any WebCal compatible product. Download your free copy of WebCal in English or Chinese.

## **Fittings**

For optimum performance, install the level sensor using the below recommended or direct equivalent fittings.

#### P/N DESCRIPTION

**LM52-1400** 2" NPT x 1" NPT, PVC, schedule 40 **LM52-1800** 2" NPT x 1" NPT, PVC, schedule 80



**LM52-1410** 2" socket x 1" NPT, PVC, schedule 40 **LM52-1810** 2" socket x 1" NPT, PVC, schedule 80



1" ANSI x 1" NPT, CPVC, schedule 80



LM50-1001-1

LM52-1850

1" NPT side mount bracket, PP

# **Ordering**

#### PROCESS MOUNT (1) -

0 NPT (US)

1 G (Metric)

#### FOB USB ADAPTER (2)

- 0 Without Fob
- 1 With Fob

#### **NOTES**

- 1) Install the level sensor using Flowline installation fittings or equivalents.
- 2) The level sensor is configured via our WebCal software and one LI99-1001 Fob USB adapter. The level sensor is offered with and without a Fob. Fobs are universal and can be used to configure any WebCal compatible product. WebCal is a free download from our website.