

# Programmable DC Electronic Load

PEL-2000A Series

---

## USER MANUAL

GW INSTEK PART NO. 82EL-2004AEA1



ISO-9001 CERTIFIED MANUFACTURER

**GW INSTEK**

January 2016

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of the Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the right to change specification, equipment, and maintenance procedures at any time without notice.

# Table of Contents

<b>SAFETY INSTRUCTIONS .....</b>	<b>5</b>
<b>GETTING STARTED .....</b>	<b>10</b>
Main Features .....	12
Series Overview .....	13
Package Contents and Accessories.....	15
Measurement Overview .....	16
Front Panel Overview .....	17
Display Overview – Mainframe .....	23
Rear Panel Overview .....	27
Front Panel Overview – Load Module...	30
LED Display Overview – Load Module..	34
Installation .....	37
Load Connections .....	45
Frame Link Connection .....	57
Channel Control Connection .....	59
Go/NoGo Connection .....	62
<b>OPERATING DESCRIPTION.....</b>	<b>63</b>
Operating Mode Description .....	64
Parallel Unit Mode .....	75
Run Program.....	77
Sequence .....	80
OCP Test Automation .....	85
Parallel Dynamic Loading .....	86
Configurations Description .....	87
Interface and File System.....	97
<b>TUTORIALS.....</b>	<b>104</b>
Local loads .....	105
Single Channel Load .....	107

Parallel Load Modules.....	109
Programming .....	111
Sequences.....	113
Frame Link.....	114
Channel Control .....	116
General Configuration Options .....	118
<b>OPERATION.....</b>	<b>119</b>
Local Mode Operation .....	123
Mainframe Basic Operation .....	130
Creating a Program Sequence .....	156
Edit Sequence .....	169
OCP Test Automation.....	179
Channel Configuration .....	186
Mainframe Configuration .....	215
Interface Configuration (settings) .....	230
Save / Recall .....	236
<b>INTERFACE .....</b>	<b>267</b>
Interface Configuration .....	268
<b>FAQ .....</b>	<b>276</b>
<b>APPENDIX .....</b>	<b>277</b>
Fuse Replacement.....	277
Firmware Update .....	278
Calibration .....	279
Range Chart .....	280
Default Settings .....	285
Specifications .....	287
Dimensions .....	298
EC Declaration of Conformity.....	300
<b>INDEX.....</b>	<b>301</b>

# S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow when operating the PEL-2002A/PEL-2004A, and when keeping it in storage. Read the following before operating the PEL-2002A/2004A to ensure your safety and to keep the PEL-2000A series in the best possible condition.

## Safety Symbols

These safety symbols may appear in this manual or on the PEL-2002A/2004A.

---



**WARNING**

Warning: Identifies conditions or practices that could result in injury or loss of life.



**CAUTION**

Caution: Identifies conditions or practices that could result in damage to THE PEL-2002A/2004A or to other properties.



**DANGER** High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

## Safety Guidelines

---

### General Guideline



### CAUTION

- Do not place any heavy object on the PEL-2002A/2004A.
- Avoid severe impact or rough handling that leads to damaging the PEL-2002A/2004A.
- Do not discharge static electricity to the PEL-2002A/2004A.
- Do not block or obstruct the cooling fan vent openings.
- Do not perform measurement at circuits directly connected to Mains (Note below).
- Do not disassemble the PEL-2002A/2004A unless you are qualified as service personnel.
- The equipment is not for measurements performed for CAT II, III and IV.

(Measurement categories) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The PEL-2002A/2004A falls under category I.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
  - Measurement category III is for measurement performed in the building installation.
  - Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
  - Measurement category I is for measurements performed on circuits not directly connected to Mains.
-

## Power Supply



## WARNING

- AC Input voltage: 115V/230V switchable, 50/60Hz
  - The power supply voltage should not fluctuate more than 15%.
  - Connect the protective grounding conductor of the AC power cord to an earth ground, to avoid electrical shock.
- 

## Fuse



## WARNING

- Fuse type: T3.15A/250V
  - Make sure the correct type of fuse is installed before power up.
  - To avoid fire, only replace the fuse with the specified type and rating.
  - Disconnect the power cord before fuse replacement.
  - Make sure the cause of a fuse blowout is fixed before replacing the fuse.
- 

Cleaning the  
PEL-2000A

- Disconnect the power cord before cleaning.
  - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
  - Do not use chemicals or cleaners containing harsh material such as benzene, toluene, xylene, and acetone.
- 

Operation  
Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Temperature: 0°C to 40°C
- Altitude: Up to 2000m
- Transient Overvoltage on the main supply is 2500V.

(Pollution Degree) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. THE PEL-2002A/2004A falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

---

Storage  
environment

- Location: Indoor
- Relative Humidity: < 80%
- Temperature: -10°C to 70°C

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.



## Power cord for the United Kingdom

When using the PEL-2002A/2004A in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons



**WARNING: THIS APPLIANCE MUST BE EARTHED**

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow:	Earth
Blue:	Neutral
Brown:	Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol (⏏) or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm<sup>2</sup> should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

# GETTING STARTED

This chapter describes the features and functions of the PEL-2002A/2004A, including the front and rear panel appearance, panel installation and connection types. Use the Tutorial section for quick access to step by step instructions on the main functions.



---

Main Features .....	12
Series Overview.....	13
Package Contents and Accessories .....	15
Measurement Overview .....	16
Front Panel Overview .....	17
Display Overview – Mainframe .....	23
Rear Panel Overview.....	27

---

Front Panel Overview – Load Module.....	30
LED Display Overview – Load Module .....	34
Installation .....	37
Load Module Installation .....	37
GPIB Installation .....	40
Rack Mount Installation.....	41
Channel Number.....	42
Power Up & Self Test .....	43
Load Connections .....	45
Precautions and Procedures .....	45
Remote (Sense) Connection.....	50
Single Load Connections.....	52
Parallel Load Connections.....	54
Frame Link Connection.....	57
Channel Control Connection.....	59
Go/NoGo Connection .....	62

---

## Main Features

---

Description	<p>The PEL-2002A and 2004A are multichannel programmable DC electronic load mainframes. The PEL-2002A mainframe is able to hold 2 load modules, whilst the PEL-2004A is able to hold 4. The flexible module configuration allows the mainframes to either sink multiple loads independently or large loads when used in parallel.</p> <p>The PEL-2000A series support four operation modes: constant current (CC), constant voltage (CV and CV+CC), constant resistance (CR) and constant power (CP). Constant current and constant resistance mode can operate in either static or dynamic mode.</p>
Feature Overview	<ul style="list-style-type: none"><li>• Flexible operation with removable load modules</li><li>• Multiple independent isolated channels</li><li>• High performance, up to 5 digit resolution</li><li>• High slew rate enabling a high response speed</li><li>• High capacity when frame linked</li><li>• Different load module types can be used in the same mainframe</li><li>• Dedicated parallel mode.</li><li>• Supports rack mount installation (PEL-2004A)</li><li>• Supports frame link connections, with up to 4 slave units</li><li>• Color LCD display</li><li>• 120 different sets of programmable sequences</li><li>• Accurate load simulation using Sequences</li><li>• 4 panel setups</li><li>• USB flash drive support</li></ul>

---


Interface	<ul style="list-style-type: none"><li>• USB</li><li>• RS-232C</li><li>• GPIB (optional)</li></ul>
-----------	---

---


## Series Overview

The PEL-2000A series comprises of two different Mainframes: the PEL-2002A and the PEL-2004A. The Mainframes differ by the number of load module slots that can be accommodated. The PEL-2002A has two load module slots whilst the PEL-2004A has 4. There are 4 different load module models, the PEL-2020A, PEL-2030A, PEL-2040A and PEL-2041A.

PEL-2004A Mainframe

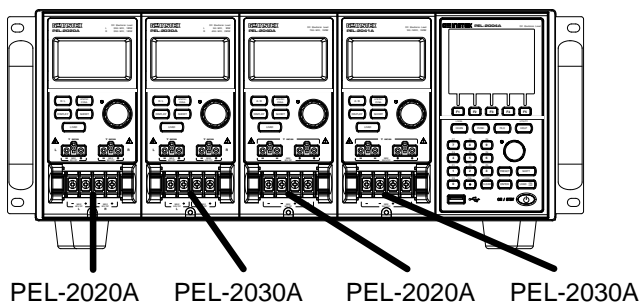

PEL-2002A Mainframe

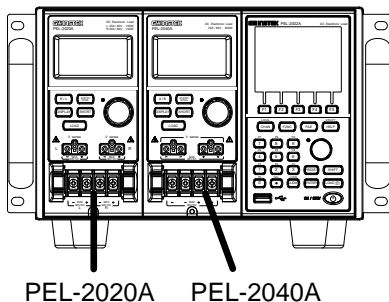

The 4 different load module models each differ in the amount of current, voltage and power and the number of channels that the load module can accommodate. The procedures in this manual will be load module model independent unless specifically stated. Below is a table showing the basic differences between each load module model. For detailed specifications, please see page 287.

Load Module	Channels	Power (W) CH L/R (low/high range)	Current (A) Range Low/High	Voltage (V)
PEL-2020A (100Wx2)	2	100/100	2/20	1-80
PEL-2030A (30/(25/250W))	2	30/(25/250)	5/4/40	1-80
PEL-2040A	1	(35/350)	7/70	1-80
PEL-2041A	1	(35/350)	1/10	2.5-500

## Package Contents and Accessories

The PEL-2000A electronic load generator has a number of standard and optional accessories that can be ordered. For more information please visit the GW Instek website at [www.gwinstek.com](http://www.gwinstek.com) or consult your authorized distributor for details.

Standard Accessories	Description
Power Cable	Mains power cable (region dependent)
CD ROM	Contains PEL-2000A Series Electronic DC Load User Manual, Programming Manual and USB Driver
GTL-120	Load cables 2X red, 2X black (per load module)
GTL-121	Remote sense cables , 1X red, 1X black (per load module)

Options	Description
PEL-2020A	Load Module
PEL-2030A	
PEL-2040A	
PEL-2041A	
PEL-001	GPIB interface (Factory installed)

Optional Accessories	Description
PEL-002	PEL-2000A Rack Mount kit (handle only)
GTL-232	RS-232C
GTL-246	USB
GTL-248	GPIB cable
GTL-249	Frame link

## Measurement Overview

The PEL-2000A series has a number of different operating modes that are completely configurable. All the modes have customizable Go/NoGo limits, range limits, timers, slew rates, alarms and protection limits. For parallel loads, there is a dedicated Parallel configuration mode. To make tests, Programs and Sequences can be created.


---

Function	Description
Constant Current Mode (CC)	In constant current mode, the PEL-2002A/2004A will sink a constant amount of current, regardless of the voltage.
Constant Voltage Mode (CV)	Under constant voltage mode, the voltage remains unchanged, regardless of the current.
Constant Resistance Mode (CR)	In constant resistance mode, the resistance load will remain unchanged as the voltage and current remain proportional.
Constant Power Mode (CP)	In constant power mode, the PEL-2000A will ensure the power consumed is constant.
Programmable Sequences (Prog.)	The PEL-2000A series supports programming sequences. With up to 120 different memory settings in 12 programs with 10 sequences.
Sequences (Seq.)	Used to create load profiles to accurately simulate a load. Sequences can be created for each channel.
Parallel Unit Mode	Parallel Unit Mode enables the PEL-2000A mainframes to easily use load modules (of the same type/rating) in parallel. Parallel mode is used in conjunction with CC or CR modes. CP and CV mode cannot be used with this mode.

---



## Front Panel Overview

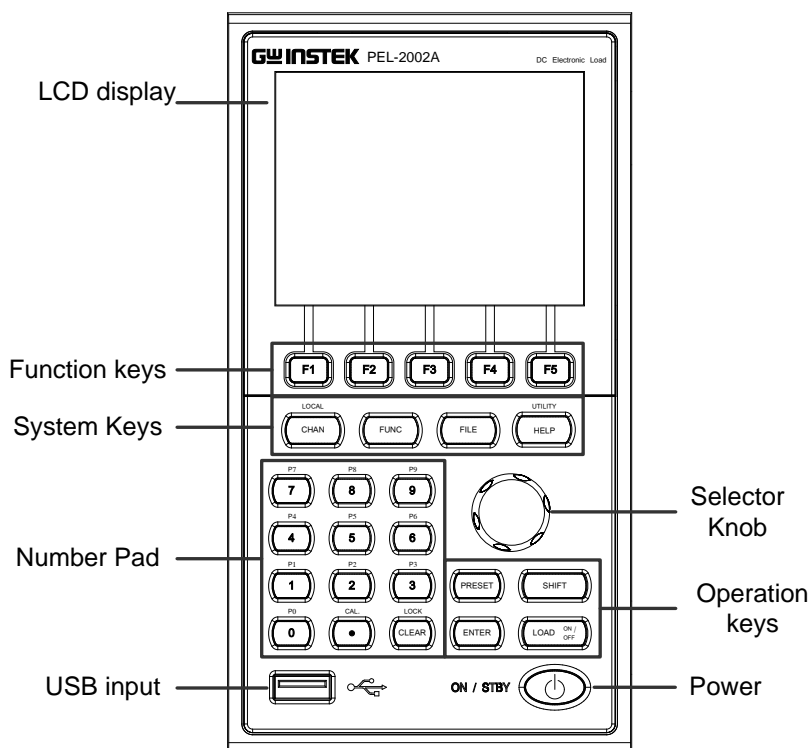


LCD display      320 by 240, TFT LCD display.

Function keys      Assigned to the menu functions on the bottom of the display.




System Keys

 LOCAL




CHAN/LOCAL is used to select the load channel. Combined with the shift key, Local is used to activate/deactivate local control (during remote control via the interface or frame link connections).

 LOCAL




Brings up the Channel Menu.

 

Used to activate local control mode during remote control via the interface

 FUNC




Used to access the Program, Sequence or Parallel menu.

FILE




Used to access the File menu.

 UTILITY




Brings up the Help menu and utility menu.

 UTILITY




 Provides help for the last function /key pressed.



Activates the Utility Menu.

Number pad

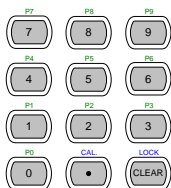


Enter numerical values, or to save/recall presets (P0-P9).

P0


Number values.



 Preset numbers P0-P9.



Decimal point and Calibration key

 

Decimal point.



Activate calibration mode.



Note

Please note, calibration mode is not supported. Please see your distributor for calibration needs.



Clears current values. Alternative function locks the keys and the Selector knob.



Clears the current value.




Locks all the keys and Selector knob.

USB Input




USB flash memory slot.


**Selector Knob**

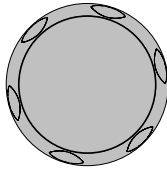

Used to select operations and to increase/decrease values.

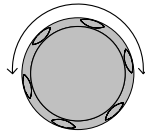

 When turned left or right moves the cursor in menus or changes the selected item or value.



When pushed down, acts as the Enter key.

**Operation Keys**



Saves and recalls preset settings and values.

When pressed in combination with the number pad, Presets P0-P9 can be recalled or saved.



Inactive

 


Active. Used in combination with the number pad and/or shift key.




Press to recall a channel preset

Hold to save a channel preset




Press to recall all channel presets.

 Hold to save all channel presets.




The shift key is used to access alternate functions assigned to select keys.

 
The shift key is also used to toggle between coarse and fine control mode when used in conjunction with the selector knob to adjust parameters.




Inactive mode.

 

 Active. When active the shift key can be used to access the Local and Utility menus.



Coarse control mode.

 

Fine control mode



 
Confirms selections.



Turns the current load/channel on or off



Load is currently off. (unlit)



Load is currently on. (orange light)

Power

ON / STBY



Turns the unit on or into standby mode.

ON / STBY




Standby mode.

ON / STBY




On.

## Display Overview – Mainframe

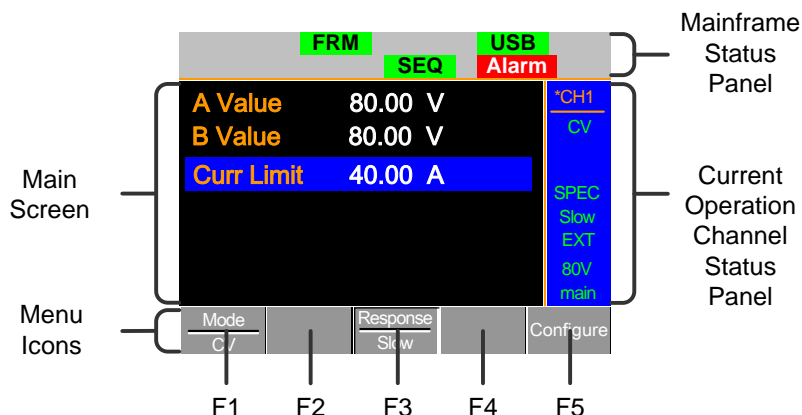

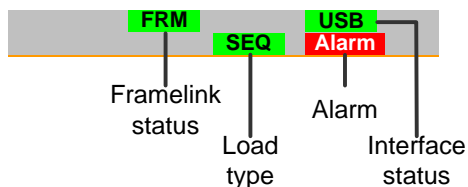


**Mainframe Status Panel** The Mainframe Status Panel displays the status of the Mainframe interface, programs and alarm status.






**Frame Link Status**





 




Indicates Frame Link is turned on and that the mainframe is set as either a master (FRM) or slave (FRS) unit.

Load Type		The Load Type Icon indicates if a Sequence (SEQ) or Program (PROG) is turned on. If not then LOAD is displayed as default. When any Load type is running, their icon will turn orange.
	↕	
		
	↕	
		

Interface Status		The interface status icon displays which interface type is set.
	↕	
		
	↕	
		

Current  
Operation  
Channel Status  
Panel

The Current Operation Channel Status panel generally displays the status of the current channel.

Channel		Mode
		
Go/NoGo		Response Speed
		
Channel Control		Voltage Range
		
Menu		

Channel	CH1~ CH8	Displays the current channel.
	*CHx	* = independent mode
	CHxS	S = Parallel Sync mode
	CHxP	P = Parallel mode



Mode	Displays the current mode.	
	CCL	CC Static Low Range
	CCH	CC Static High Range
	CCDL	CC Dynamic Low Range
	CCDH	CC Dynamic High Range
	CRL	CR Static Low Range
	CRH	CR Static High Range
	CRDL	CR Dynamic Low Range
	CRDH	CR Dynamic High Range
	CV	CV Mode
	CPL	CP Low Range
	CPH	CP High Range
Go/NoGo	SPEC	If Go/NoGo is turned on, SPEC will be displayed.
Response Speed	Slow Fast	In CV mode the response speed will be shown, Slow or Fast.
Channel Control	EXT	When Channel Control is set to External, EXT will be displayed.
Voltage Range	Displays the voltage range of the current setting.	
Menu	Shows the current menu.	
	main	= Chan menu
	conf	= Chan→Configure menu
	s_edit	= Chan→Seq.Edit menu
	file	= File menu
	s_loop	= Chan→Seq.Edit→Loop menu
Main Screen	Main display screen.	


---

Menu Icons	F1~F5	Each Menu Icon is controlled by the F1~F5 function keys directly below.
------------	-------	---


---

## Rear Panel Overview

PEL-2004A

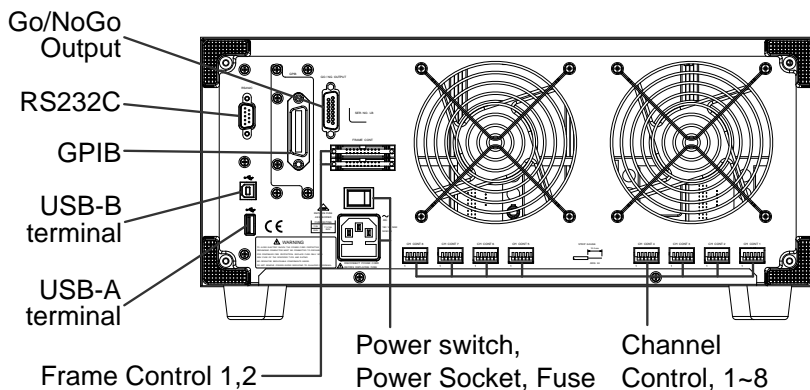


PEL-2002A

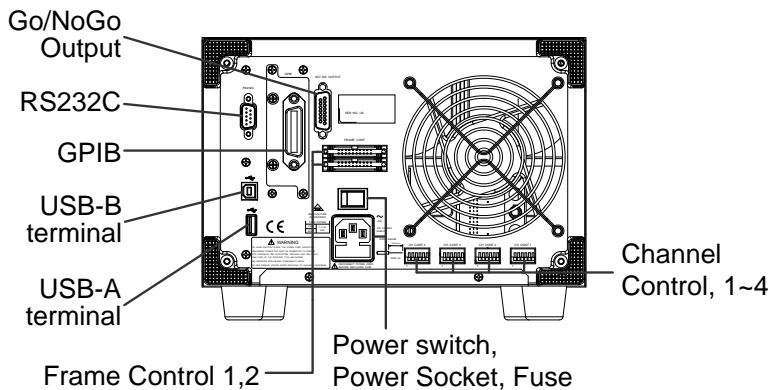

Go/NoGo Output

 
GO / NG OUTPUT



The Go/NoGo Output terminal outputs a pass (high)/fail (low) voltage for each channel.

See page 274, 62 for details.

RS232 port/  
 GPIB port

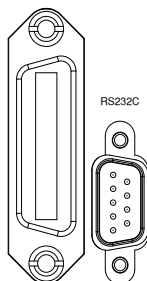


The RS232 and GPIB port is used for remote control connections.

RS-232C: DB-9 pin male

GPIB: 24-pin female

See pages 268, 269 for remote control details.

 
USB-A(host)/  
 USB-B (device)  
 port



The USB-B (device) port, like the RS232/GPIB port is used for remote control. Like the front panel, the USB-A port is used for data storage.

See page 97 for interface details.

Frame Control  
 Port

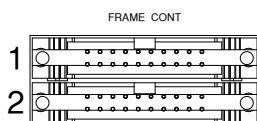

The Frame Control port is used for Frame Link connections. Mainframes are daisy-chained together. There are two Frame control ports.

 
1: Slave

2: Master

Connection type: MIL 20-pin connector.


For details about frame link connections see page 57, 271.

Power Switch



External Power Switch

Power Socket/  
Fuse

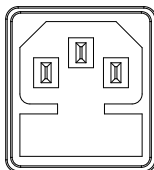

The power supply socket accepts the AC mains Voltage. The fuse holder is located below the power socket.

Power: 50/60 Hz (180 VA)

Fuse: T3.15A/250V

For fuse replacement details see page 277.

---

Channel  
Control port  
(1~8)




Each channel has a dedicated Channel control port to enable external monitoring and control. The channel control port has 6 wire sockets that are screw-less and self clamping.

Required wire gauge: 24  
AWG

For connection or specification details see pages 59 & 270.


---

# Front Panel Overview – Load Module

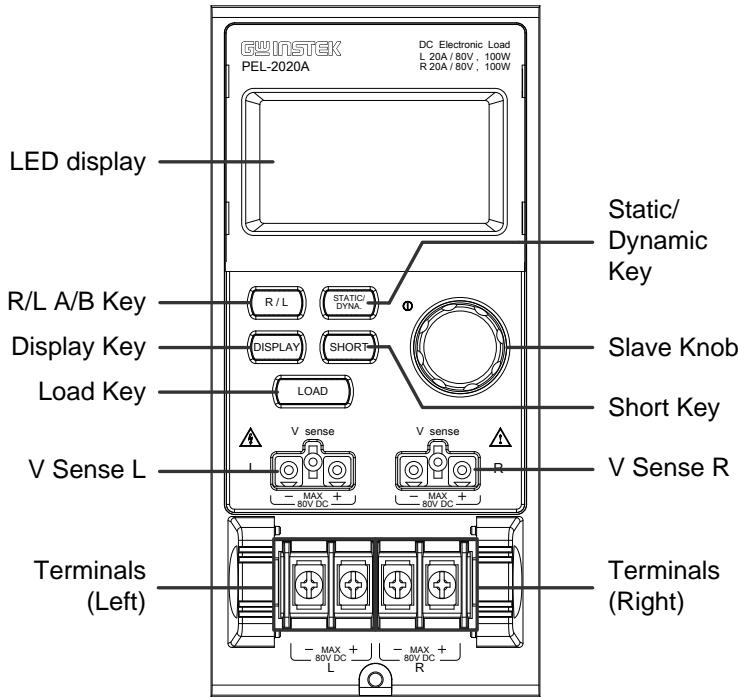

LED display      2x5 digit custom LED display.

Right/Left Key  
or  
A/B Key

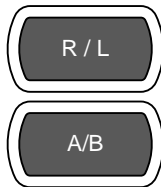

The L/R key is used to switch between the right and left load channel on a dual channel load module. The A/B key is used to switch between A&B Values for single channel load modules.

Display Key



Used to alternate the display output on the load module.

**00000** <sub>A</sub> Current

**0.000** <sub>V</sub> Voltage

**0.00** <sub>W</sub> Power


**0.0** <sub>s</sub> Load time

Load Key




Activates the load for the active channel. (Right or Left)(A or B)

Left Voltage Sense

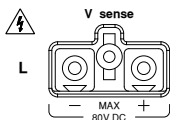


The voltage sense terminals are used when precise measurement is needed. V Sense terminals are used to compensate for voltage drops across the main terminals caused by the resistance of the load wires.

 Right Voltage Sense




It is automatically activated when connected to a DUT.

 Positive and Negative Terminals Left



The terminals for both the left and right side of a load can draw differing amounts depending on the load module specifications.

 
Positive and  
Negative  
Terminals Right



For 2 channel load modules, the left terminals are used for the 1<sup>st</sup> channel and the right terminals are used for the 2<sup>nd</sup> channel.

On single channel load modules, the left terminals are the lower (-) potential terminals, whilst the right terminals are the positive (+) potential terminals.

 Static/Dynamic  
Selector Key




The STATIC/DYNA. Key manually switches the load from Static (manual) to Dynamic loads.

Dynamic loads are only supported in CC and CR mode.

For more information see page 64 & 67.

Slave Knob  
(Load)

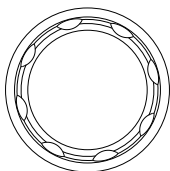

The Slave Knob is used to edit and vary parameters for the active channel on the local load.

Depending on the Mainframe setup, the Slave Knob will either only update the load (locally) or will update both the local module and the mainframe\*. The Slave Knob can also be configured to display measured or set values on the local load module\*\*.

\* For more information on “Knob Type”, see page 223.

\*\* For more information on “Slave Knob”, see page 227.




## Short Key



 The SHORT key is used to manually short circuit the active channel on the local active load. When a load is off, the SHORT key will toggle the Short key type.



Hold: Hold the SHORT key to short the channel load.



Toggle: Press the SHORT key to toggle shorting the load on or off.

Load on: Pressing or holding the SHORT key will short the load, depending on the short type selected.

---

LED Display Overview – Load Module



① & ②  
Channel Display



**R** or **L** Left and right channel indicator.



5 digit display.

③ & ⑦  
Channel Number  
Indicator



Indicates the channel number (1-8).

**L-ON**

Indicates if the load is active on the load module. (Dual channel load modules)

**ON**

Indicates if the load is on for single channel load modules.

4

Mode Indicator

The Mode Indicator LEDs will indicate what the current mode or settings are on the active channel(s).

AB CC CV CR CP Disp. GO  
LR Static Dyna. Short NG

**A or B** Value A or B for a single channel load module. Applies to CR, CV, CP and CC static mode only.

**CC** Constant Current Mode (CC) mode activated.

**CV** Constant Voltage Mode (CV) mode activated.

**CR** Constant Resistance Mode (CR).

**CP** Constant Power Mode (CP).

**Disp.** Display is shown on dual channel load modules when both left (L) and right (R) channel information is displayed.

Press the Display button repeatedly to show information for both channels.

**GO** Lights up when Go/NoGo is activated and the load passes (GO) the Go/NoGo limits.

**L or R** L or R will light up when the left or right channel is selected.

**Static** Lights up when in Static mode.

**Dyna.** Lights up when in Dynamic mode.

**Short** Lights up when a load is shorted.

**NG** Lights up when Go/NoGo is activated and the load fails (NG) the Go/NoGo limits.

---

 &   
Channel Unit  
Indicators



The Unit Indicators display the current unit.

**V** Voltage

**Ω** Resistance

**A** Current

**W** Power

---

## Installation

The installation chapter describes how to load the different load modules, install the optional GPIB card, the rack mount kit and how to determine each channel number.

### Load Module Installation

---

**WARNING**

 
To avoid static electricity, please use appropriate anti-static work practices.

Module  
installation


The PEL-2004A and 2002A can accommodate 4 and 2 load modules, respectively. Module loads can have 1 or 2 channels. Installation of load modules is the same for both models.

Steps


1. Ensure the PEL mainframe is turned off from the rear panel. Disconnect the power cord.




2. Slide the module onto the rails of an empty load slot.

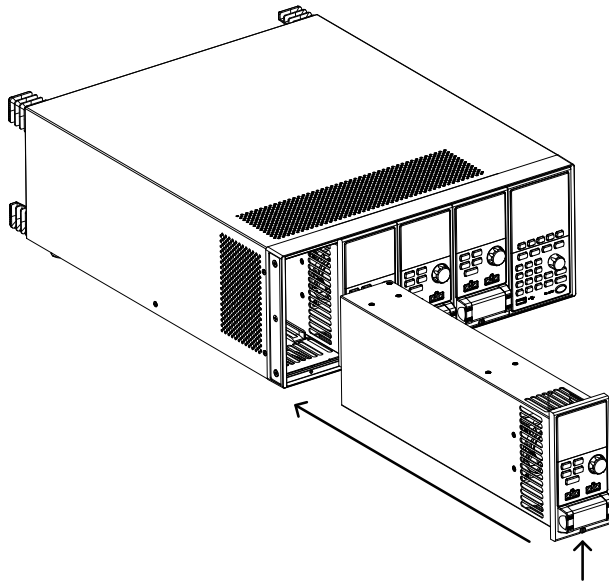


3. Use the supplied screw to fix the module to the load slot, located under the load terminals.

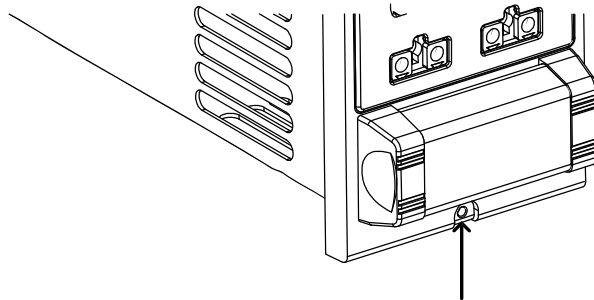

4. Install any additional modules as described above.
5. If there are any slots empty, install the supplied panel cover (GW Instek part number: 63FP-AG106501). The panel cover will improve safety and increase air flow.

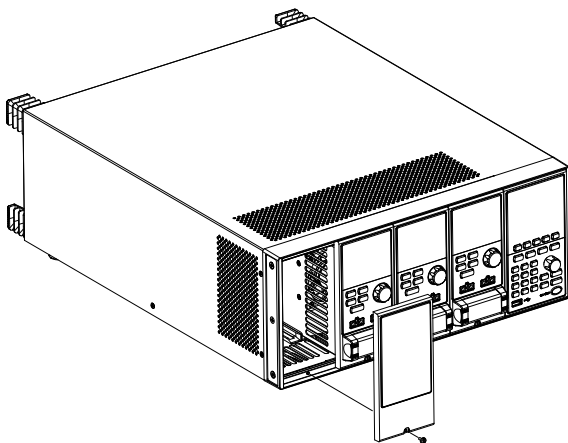

6. Use the supplied screws to fix the panel cover(s) over the load slot.

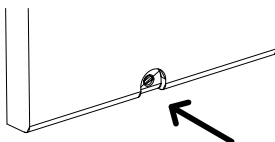

## GPIB Installation



### WARNING


To avoid static electricity, please use appropriate anti-static work practices.

### GPIB Card installation

The PEL-2004A and 2002A has GPIB as an option (GW Instek part no. PEL-001).

### Steps

1. Ensure the mainframe is disconnected from mains power.
2. Remove the screws from the GPIB cover plate and remove the cover plate from the rear panel.
3. Slide the GPIB card into the slot and push gently until the back plate is flush with the rear panel.

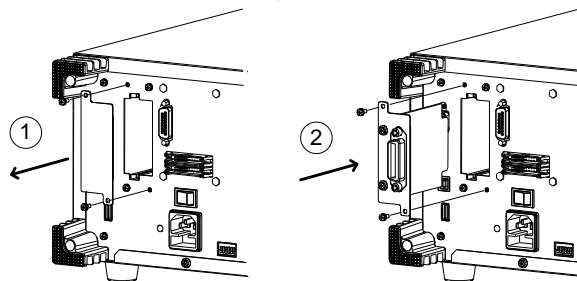

4. Use the screws that were removed from step 1 to secure the GPIB card.



## Rack Mount Installation


### Background

The PEL-2004A can be used in a standard 19" rack mount enclosure with the optional rack mount kit (GW Instek part no. 11EL-20040201). Each unit requires a rack height of 4U with a 1U space for ventilation top and bottom. The rear of the rack mount enclosure must be free of obstruction to allow heat to dissipate from the mainframe(s).


### Steps

1. Screw the rack mount brackets as shown below using the supplied bolts.

### PEL-2004A

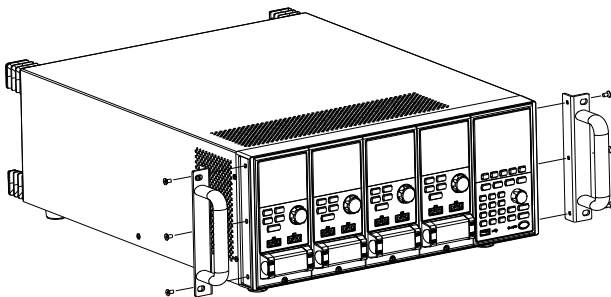

2. Insert into a standard 19" rack enclosure with at least 1U of space top and bottom for ventilation.

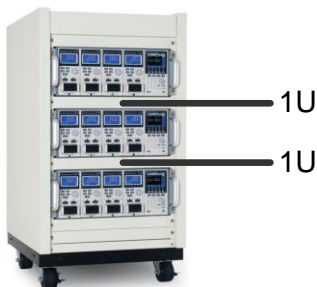

## Channel Number


### Description

The channel number for a module load is determined by which slot it occupies on the mainframe chassis. There can be 1 or 2 channels per slot, depending on the load module type.

The PEL-2002A has two slots; The PEL-2004A has 4 slots. Channel 1 is the farthest away from the main display panel and channel 8 (PEL2004A) or channel 4 (PEL-2002A) is the closest to the main display panel.

Below the PEL-2004A has all 4 slots occupied with the PEL-2020A, 2030A, 2040A & 2041A series load modules (LM), respectively. The PEL-2020A & 2030A have 2 channels per load module, the PEL-2040A & 2041A have only 1. So the channel determination is:


LM1: CH1, CH2; LM2: CH3, CH4; LM3: CH5;  
LM4: CH6.

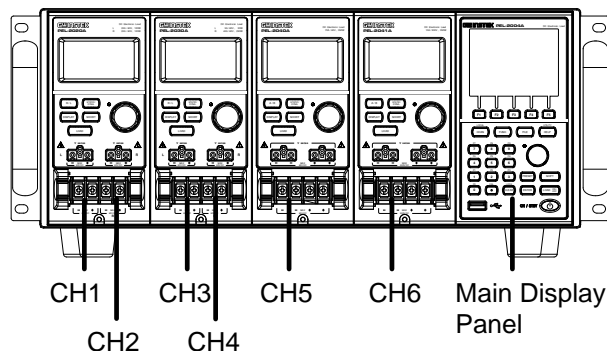


## Power Up & Self Test

Panel operation

1. Connect the power cord to the power socket.

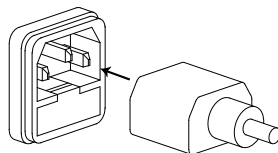

 2. Turn the external power switch on.



3. Hold the power button on the front panel to turn on the power.



The power button turns green from red (standby).




**WARNING**

Ensure that the power outlet has a ground socket. The power outlet will have a ground connection if it is a 3 socket type.

Upon turning on, the Mainframe will perform a self-test. The self-test checks the System, followed by any attached channels.

<b>Initial</b>	<b>System</b>	<b>Success</b>
	<b>CH1</b>	<b>Success</b>
	<b>CH2</b>	<b>Success</b>
	<b>CH3</b>	<b>Success</b>
	<b>CH4</b>	<b>Success</b>
	<b>CH5</b>	<b>Success</b>


When the system check happens, the load modules will display each channel as it is checked, then display the current mode.

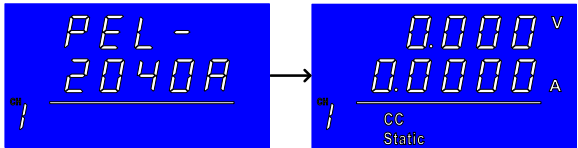

- 4. If any of the System checks fail, please power down the load generator and reinstall the appropriate load module(s).
- 5. To turn off the load generator, hold the power button for a few seconds.



 The PEL mainframe will return to standby mode.



## Load Connections

### Precautions and Procedures ---

**Introduction**      The PEL-2000A load generator supports a number of different load configurations for flexible operation.

- Single DUT, single load
- Single DUT, parallel load
- Multiple DUTs, multiple loads
- Multiple DUTs, multiple mainframe loads
- Single DUT, parallel mainframes
- DC loads
- Low voltage connections

The PEL-2000A also supports a number of different control methods and interfaces. The connections used are described here:

- Frame link
- Channel control
- Go/NoGo

---

**Wire Gauge considerations**      Before connecting the PEL-2000A, wire gauge must be taken into account. Load wires must be large enough to resist overheating when a short-circuit condition occurs as well as maintain a good regulation. The size, polarity and length of a wire are all factors in determining if a wire will withstand short circuiting.

---

**Wire Selection**      Wires that are selected must be large enough to withstand a short circuit and limit voltage drops to no more than 2V per wire. Use the table below to help make a suitable selection.

AWG	Max Current A(Amp)
24	7.64
22	10.0
20	13.1
18	17.2
16	22.6
14	30.4
12	40.6
10	55.3

**Load Line Inductance Considerations**      When using the PEL-2000A load generator, voltage drop and voltage generated due to load line inductance and current change must be taken into account. Extreme changes in voltage may exceed the minimum or maximum voltage limits. Exceeding the maximum voltage limit may damage the PEL-2000A.

To determine the voltage generated, the following equation can be used.

$$E = L \times (\Delta I / \Delta T)$$


E= voltage generated

L=load line inductance

$\Delta I$ = change of current (A)

$\Delta T$ = time (us)


Load line inductance (L) can be approximated as 1uH per 1 meter of wire. ( $\Delta I / \Delta T$ ) is the slew rate in A/us.

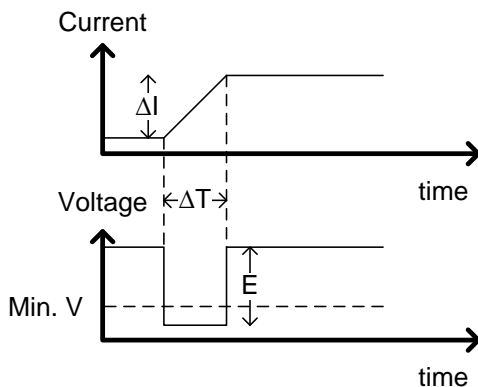

The diagram above shows how changes in current can affect voltage.

**Limiting Load line inductance** Load line inductance can be reduced by ensuring load wires are as short as possible and by twisting positive and negative load wires together. Current change can be limited by limiting the slew rate when switching.

“Twisted pair” will be shown on any connection diagram where the load wires should be twisted together.

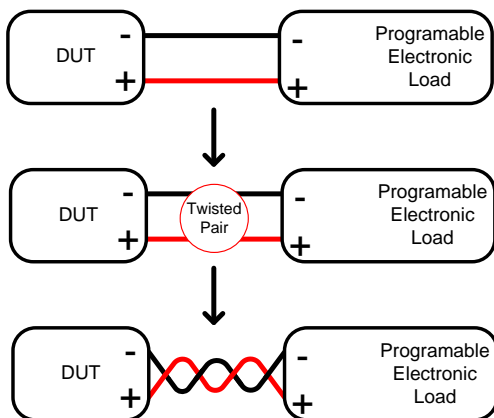

**Load module considerations**


The PEL-2000A supports single and dual channel load modules.

Single channel load modules have one bank of negative terminals and one bank of positive terminals. Each terminal pair has a 40A capacity. For higher loads, each terminal can be wired in parallel to increase capacity.

Dual channel load modules have one bank of positive and negative terminals for each channel.

**Single Channel Load Module**

**Dual Channel Load Module**

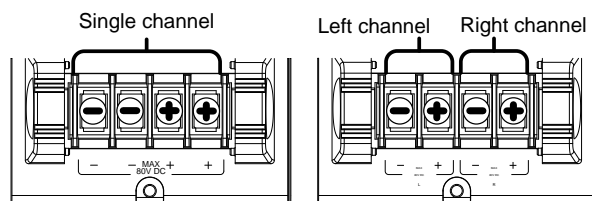

**Connection**

Follow the procedure below for all load connections.




**CAUTION**

Ensure that power is off from the load generator and the DUT before making any connections.

**Steps**

1. Carefully lift the terminal covers.
2. Connect the positive (+) terminal on the load module to the high potential output of the DUT.
3. Connect the negative (-) load terminal to the low potential output of the DUT.



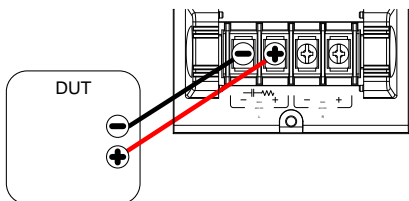


4. Close the terminal cover securely. Ensure the wires are secured properly and that the wires are not exposed when the cover is in place.

**WARNING**

Ensure that the wires are tied or twisted together to prevent noise and inductance.

**CAUTION**

Ensure the polarity is correct before proceeding with any connections. Using the wrong polarity could result in reverse voltage damage.

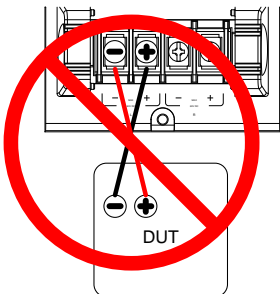

Ensure the input voltage doesn't exceed specifications. Exceeding the voltage specifications could result in damage to the instrument.

## Remote (Sense) Connection

---

### Background

The electronic load modules have two voltage sense contacts: Vsense L(black), Vsense R(red). Voltage sense can be used to help compensate for long cable length. The longer the cable, the higher the potential resistance and inductance, therefore a short cable is best. Twisting the cable can help reduce induced inductance and using the Vsense terminals compensates the voltage drop seen across the load leads, especially leads with higher resistance. This is useful when used in CV, CR or CP mode.




### WARNING

VsenseR (red) must have a higher (+) potential than VsenseL (black).

---

### Connection

The diagram below shows how a DUT can be connected using voltage sense. Note that the sense wires are also twisted pairs.

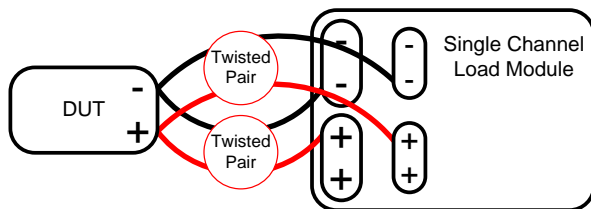

### Note

The wire gauge for the sense wires should be no smaller than 16 gauge.

---


### Input

The voltage sense terminals must use a wire gauge of 16 to 14.

---

### Remote Sense Terminal connection


The voltage sense terminals use a screw-less clamp connector. The clamp must be opened prior to inserting a wire. Use a small screwdriver to push the clamp release mechanism. Insert both wires then release the clamp mechanism.

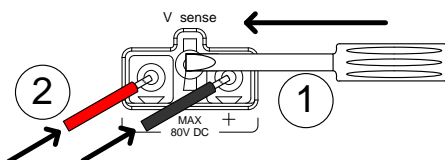

## Single Load Connections


### Dual Channel Load Module Connection

A dual channel load module can be used to sink two loads concurrently.

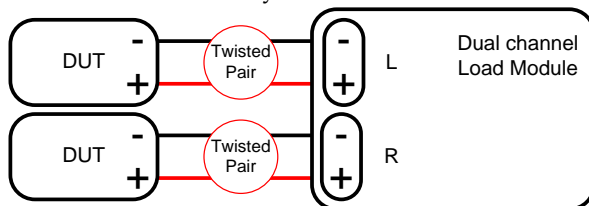


### Single Channel Load Module Connection

On a single channel load module, the left terminals are both negative (-), whilst the right terminals are both positive (+). Note this also applies to the voltage sense terminals.

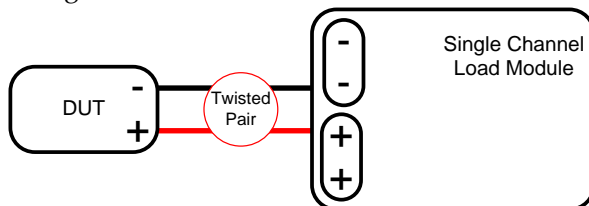


**CAUTION**

For loads exceeding 40A, both positive and both negative terminals must be used in parallel.

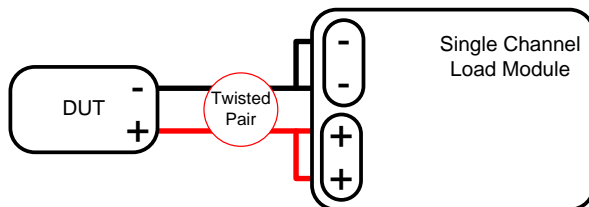

**DC Connection** For purely DC operation, a resistor and capacitor can be connected in parallel to the electronic load to reduce oscillation. The capacitor and resistor values are dependent on the load settings. Ensure the capacitor ripple current is within allowable limits.

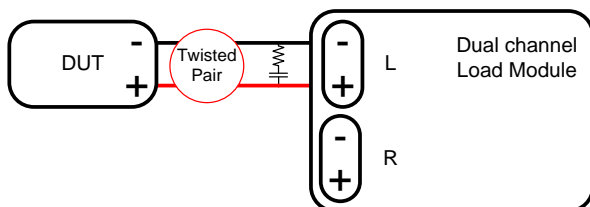


**Low Voltage Connection** Using the load generator with low voltage loads is generally limited to over 1 volt (load module dependent). In order to support low voltage loads, an auxiliary power supply is needed to boost the voltage to a range suitable for the load generator.

Precautions:

- Take into account the combined power of the load and auxiliary power supply.
- Make sure the auxiliary power supply is able to provide enough current.
- Take into account any noise or irregularities from the auxiliary supply.

The diagram below shows a typical connection.

 

**WARNING**

Using an auxiliary power supply may induce reverse current. The PEL-2000A series has reverse voltage protection. For details see the protection section on page 87.

## Parallel Load Connections


---

### Parallel load modules

When the power output of a DUT exceeds the power rating of a channel or load module, the channel terminals, load modules or mainframes can be used in parallel to dissipate more power when used in CC or CR mode. Each channel will sink the amount of current specified. The total power sunk is the sum of all channels/modules. The amount of power can vary from each channel. For example if CH1 is 25A and CH2 is 20A, then the total current sunk is 45A. Parallel loads are supported for both static and dynamic loads (see page 85 for a description on parallel dynamic loading). Note that the same modules must be used when operating the parallel.

The PEL-2000A also features a dedicated parallel configuration setting known as Parallel Unit. When Parallel Unit is turned on, load modules of the same type and rating to be used in parallel for CC and CR mode. See page 75 and 211 for more information.

### Parallel load

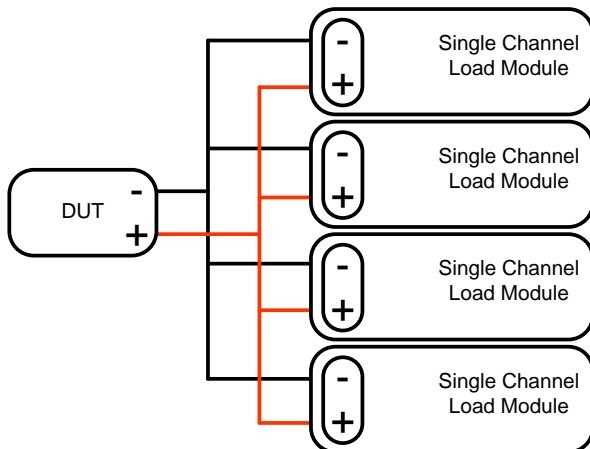


**Note**

Please note that the same load modules must be used in parallel.


### Parallel loads using frame link connections

The PEL-2000A mainframes can also be connected in parallel. Please note, when using a frame link connection there is a delay between the master and the slave. Please see page 57 for details.

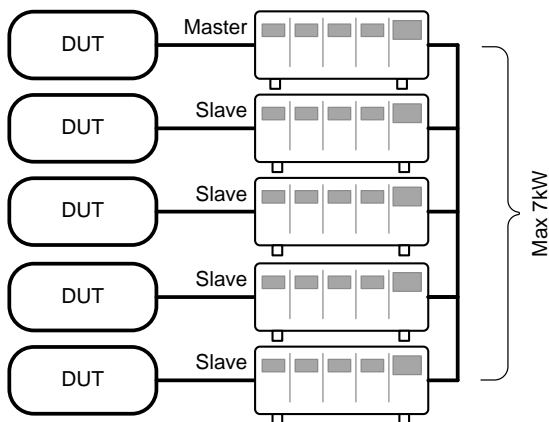

Multi-output  
power supply  
load

The PEL-2000A is also able to sink a number of loads concurrently from multiple DUTs or sink a number of loads from the same DUT (i.e. multiple output power supply).

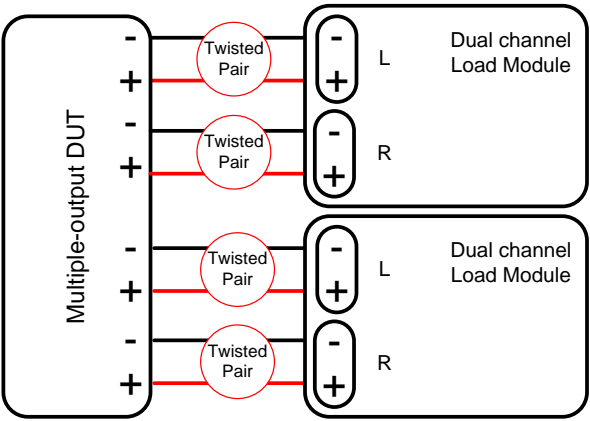




## Frame Link Connection

### Background

Frame link control involves connecting multiple mainframes using the frame link connections. Up to 4 slave mainframes can be connected to the master mainframe. The first mainframe (master) can be used to control the other slave frames. There is a delay time of 2ms between the master and first slave mainframe, and 4ms, 6ms, and 8ms to the second, third, and fourth slave mainframes, respectively. The connectors used are standard MIL 20-pin connectors. For pin arrangement, see page 271. The frame link cable (part no. GTL-249) is an optional accessory, see page 15 for details.


### Frame Link Connection

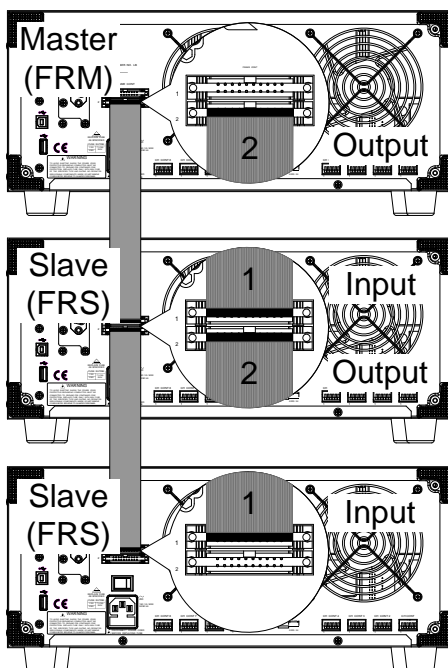


The first mainframe that is connected is the master frame; any additional frames are slave units. The ribbon cable connects to the master from connector 2, and the slave from connector 1. Each successive slave unit is connected in a cascading manner the same way.

Ensure the Mainframes are turned off before connecting the ribbon cables. Push the cable into the frame link connector. Ensure the arrows line up. The latches will close when the connection is complete. To remove, pull the latches out and connector will come out.

**Insertion**

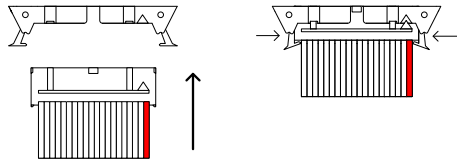

**Removal**

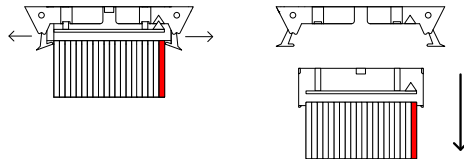

**WARNING**

Ensure all the mainframes are off and disconnected from mains power before connecting.


## Channel Control Connection

### Background


The Channel Control connectors are located on the rear panel of each mainframe. There are two channel control connectors for each load slot, one for each channel, if applicable. The channel control connector is used to externally:

- Turn on/off loads.
- Supply a reference voltage.
- Monitor the load input.

For further details on channel control and the interface see pages 93, 270.

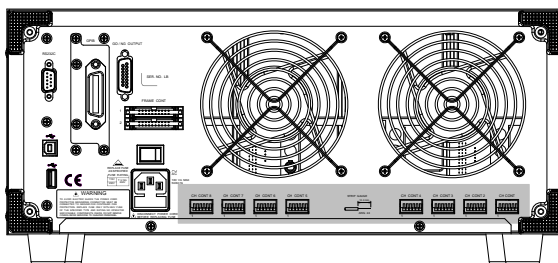


The Channel Control input/output pin layout is shown below.

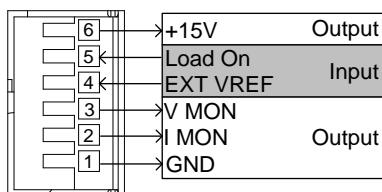

**External Voltage Connection**

The external voltage reference input must be between 0~10V.

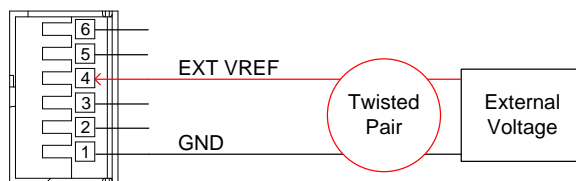


**WARNING**

Ensure the external voltage reference is stable and has low noise. The External Voltage should be no more than 10V.

No more than 12 volts may be used as an external voltage. More than 12 volts may damage the load generator.

**Load on connection**

To turn a load on, an active low voltage (0-1V) must be applied across Load On (pin 5) and GND (pin 1), similarly an active high voltage (4-5V) must be applied to turn a load off. The Load On input must be TTL.

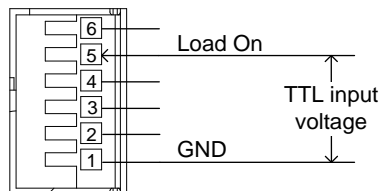


**Voltage and  
Current Monitor  
Output**

The Voltage Monitor Output (VMON) and Current Monitor Output (IMON) output the load input voltage and load input current as a percentage of rating current/voltage. Where 0 volts = 0% rating and 10 volts = 100% load input rating voltage or current.


The voltage monitor output is across pins 1 & 3, and the current monitor output is across pins 1 & 2. Pin 6 outputs a +15V reference voltage.

Below shows the pin configuration of the voltage and current monitor outputs.

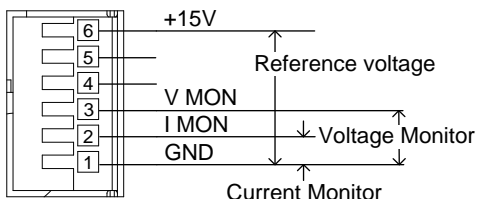

**Connector  
Connection**

The channel control connector is a screw less clamp connector. The internal clamp mechanism must be opened before a wire can be inserted. To open the internal clamp, push the button above the wire socket, to close, release the button. Ensure at least 10mm is striped from the wire. The diagram below shows the wire insertion procedure.

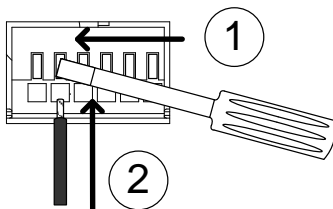

**WARNING**


All connections to the channel control connector must use a 24 AWG wire gauge.

## Go/NoGo Connection

### Background

The Go/NoGo port is a 15 socket port. Each channel has a dedicated line for a Go/NoGo output. The ports are open-collector with active low (1.1V) indicating a pass and active high (30V) as fail (an alarm). The Go/NoGo terminal is a DB-15 female.

For more details on the Go/NoGo interface see page 274.

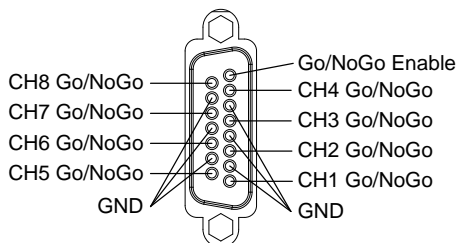

# OPERATING DESCRIPTION

---

Operating Mode Description .....	64
Constant Current Mode .....	64
Constant Resistance Mode.....	67
Constant Voltage Mode.....	70
Constant Power Mode.....	73
Parallel Unit Mode .....	75
Run Program.....	77
Sequence .....	80
OCF Test Automation .....	85
Parallel Dynamic Loading.....	86
Configurations Description .....	87
Protection Modes .....	87
Operating Configurations .....	89
Channel Control.....	93
Interface and File System .....	97
Interface .....	97
File System .....	97
File Format .....	102

---

## Operating Mode Description


There are four basic operating modes: constant current (CC), Constant Resistance (CR), Constant Voltage (CV/CV+CC) and Constant Power (CP). All channels operate using any of the modes. Each mode has a number of configurable options including slew rate, levels, protection modes, Go/NoGo and extensive save options.

### Constant Current Mode

#### Background

In Constant Current Mode the load units will sink the amount of current programmed. Regardless of the voltage, the current will stay the same. There are two ranges in CC mode: High and Low. There are two main modes in CC mode: Static and Dynamic. Static mode can be used for stability tests and dynamic mode can be used to test transient load conditions.

Go/NoGo is supported for both High and Low range as well as Static and Dynamic mode.

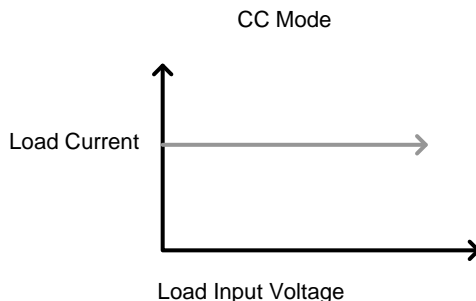




**Range** There are two selectable ranges for constant current mode: high and low range.

Low range has a higher resolution, but a lower range. If the current exceeds the Low Range, High range must be used.

**Static Functions** Static mode tests the stability of the voltage output from a power source. Single channel load modules can have two 2 current levels A (A Value) & B (B Value). A & B have the same range. Pressing the A/B key on the module load will cycle through the A and B states. Alternatively, the mainframe can select A or B Value.

Dual channel load modules only have one current level (A Value) per channel in static mode.


Static Mode:  
Single Channel  
Load module.

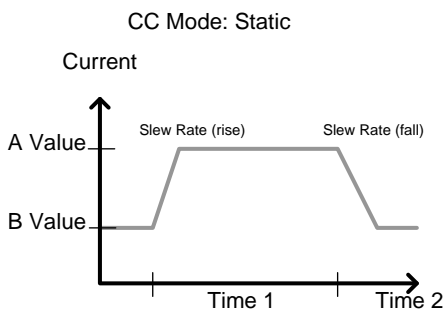

**Dynamic Functions**


Dynamic load functions allow you to set load levels (Level1, Level2), load time (Timer1, Timer2), and the slew rate (rising, falling). Depending on the settings, the load will switch automatically between levels 1 and 2.

Dynamic loading can be used for charge discharge cycle testing etc.

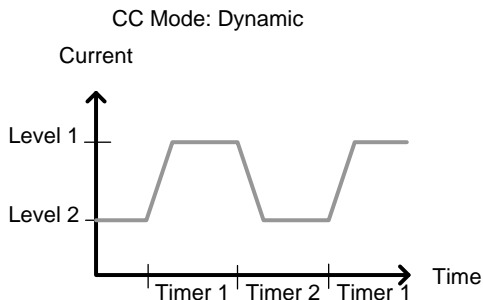

### Slew rate



The slew rate is the rate at which the current will increase to a set level. There are two slew rates: rising slew rate & falling slew rate. In CC mode the slew rate is defined as A/uS.

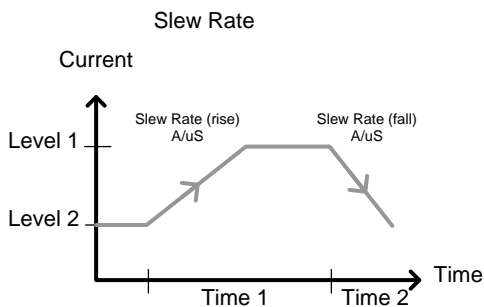

As can be seen above, the rising and falling slew rate need not be the same.

### Go/NoGo

Using Go/NoGo, the Center, High and Low voltage limits can be set for both Static and Dynamic modes. A delay time of up to 1 second can also be set.

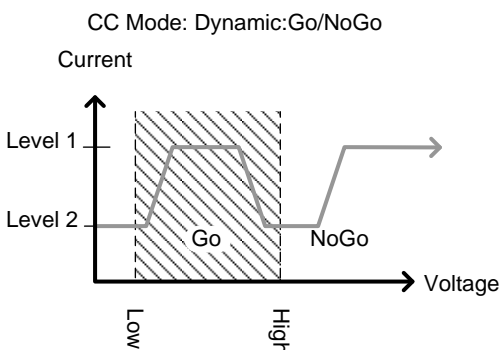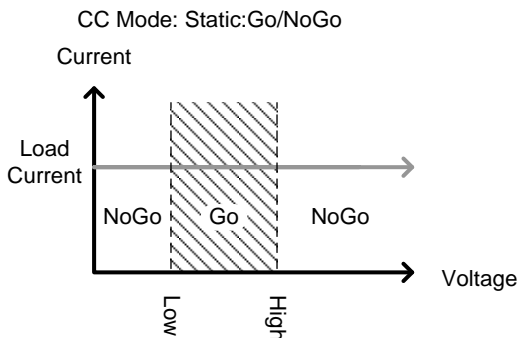


GO is specified as between the Low and High Go/NoGo limits. NoGo is specified as outside the Go/NoGo limits.

## Constant Resistance Mode


### Background

In Constant Resistance Mode the load units will linearly sink current and voltage to match a set resistance. CR mode has two different values (single load modules), two different ranges and rising and falling slew rates. Like CC mode, Constant resistance mode supports both dynamic and static loads. As with the other modes, Go/NoGo is supported.

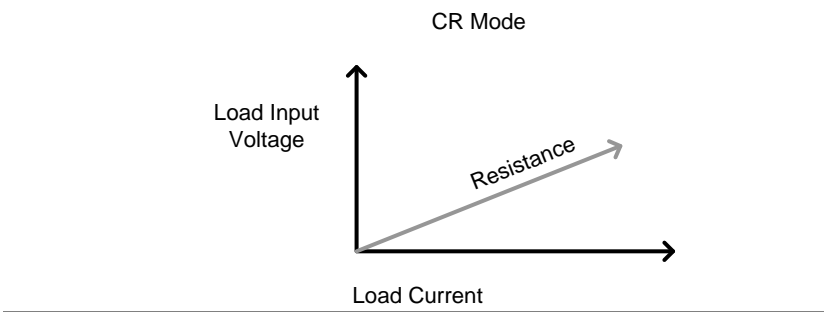


**Resistance Range** There are two ranges: High and Low. The Low range is used for low voltage ranges, whilst the High range uses high voltage ranges. The current range always remains in High range, regardless of the selected voltage range.

**Static Functions A/B range** For static mode, single channel load modules have two resistance levels, A & B Value. The A/B key can be used to switch between these resistance levels. Dual channel load modules only have one resistance level, A Value.

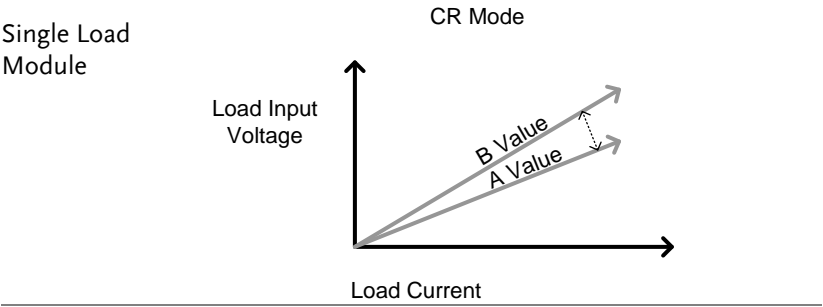

**Dynamic Functions** CR mode supports Dynamic loading. Dynamic load has two resistance levels (Level 1&2), and two timers (Timer 1&2) to switch between the resistance levels. Rising and falling slew rates can be set to determine the speed at which the load generator switches between load levels.


Dynamic CR Mode

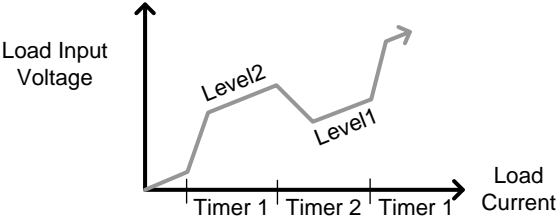

**Slew Rate**      The rising and falling slew rate (A/uS) determines the speed at which the load levels change from A to B Value (Static mode) or from Level1 to 2 (Dynamic mode) and vice versa.

**Go/NoGo**      Go/NoGo is also supported. Center, High and Low limits can be set as either percentages or voltage values. A delay time of up to 1 second can also be set.

CR Mode: GO/NOGO

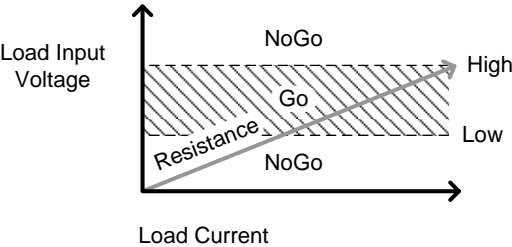

## Constant Voltage Mode

---

### Background


In Constant Voltage Mode the load units will sink current whilst keeping the voltage constant.

Single channel load modules support 2 values (A Value, B Value) and have an adjustable cut-off current limit. Dual channel load modules only have A value.

Response speed can also be set to fast (Fast) or slow (Slow). The response speed relates to the slew rate of the current response.


Constant voltage mode only operates in high range.

Go/NoGo functionality is also supported either as a percentage or as a current value.

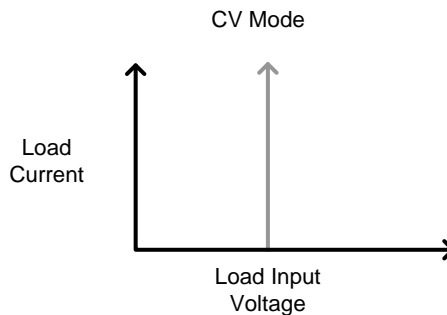

### Voltage levels

Two voltage levels can be set: A & B (single channel load module).

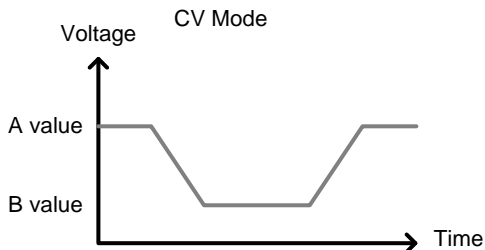


### CV + CC

When using CV mode, a current limit can be set for CV + CC mode.

When the voltage input is greater than A Value (load voltage) then the channel will operate in CV mode if the input current is less than the current limit. When the input current exceeds the current limit, the channel will operate in CC mode.


When the voltage input is less than A Value (load voltage) current stops flowing.

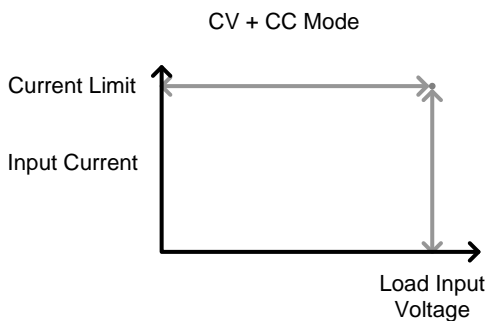

**Response Speed**    Response speed can be set to fast or slow. Fast response and slow response is determined by the load module specifications. Slow response speeds are suitable for large loads as quick current changes will induce induction which can cause large voltage drops. The PEL series will try to rectify any voltage drops. However if voltage drops are too large, they may cause the load generator to go into oscillation. Large voltage drops caused by line voltage induction may damage the machine.

Range	Fast	Slow
	1kHz	100Hz

**Go/NoGo**    Go/NoGo testing can be with either current (Ampere) values (High, Low) or percentage values (Center, High %, Low %). A delay time of up to 1 second can also be set.

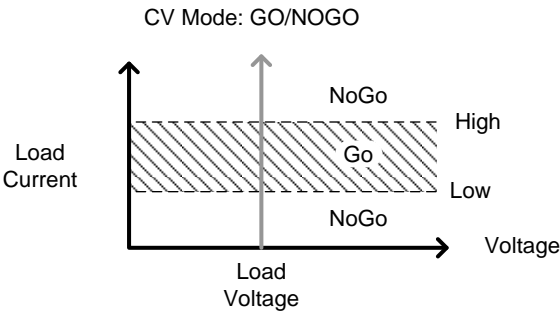



## Constant Power Mode


---

**Background** In Constant Power Mode the load units will ensure a constant power load for the power supply.

Single channel load modules support 2 values (A Value, B Value) and have an adjustable cut-off current limit. Dual channel load modules only have A value.


Constant power mode can operate in high or low range.

Go/NoGo functionality is also supported either as a percentage or as a current value.

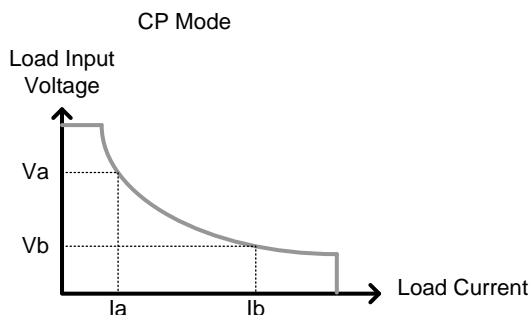


**Power levels** Two power levels can be set: A & B (single channel load module).

CP Mode

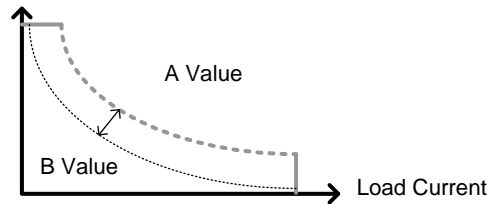


**High/Low Range** There are two ranges: High and Low. The Low range is used for low power ranges, whilst the High range uses high power ranges.

CP Mode

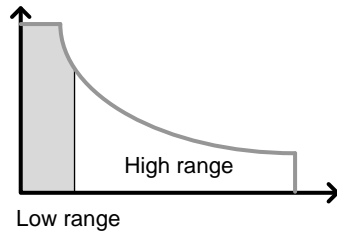

**Go/NoGo** Go/NoGo testing can set High and Low Current limits as a Value (in Amperes) or as a percentage. A delay time of up to 1 second can also be set.

CP Mode

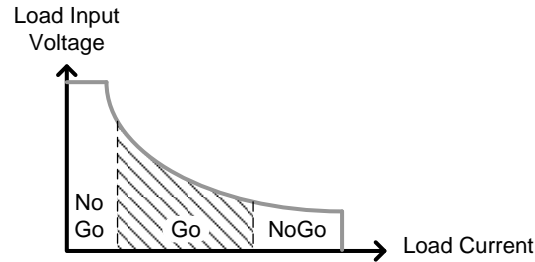

## Parallel Unit Mode

---

Background	<p>The Parallel configuration menu allows load modules of the same type and rating to be configured as a single unit when used in parallel. This saves the hassle of configuring each channel individually.</p> <p>Parallel Configuration is only supported under CC and CR mode.</p> <p>Parallel Configuration has three configuration settings: Parallel Unit, Parallel Mode and Display Mode.</p>
Parallel Unit	<p>This configuration setting sets the number units that are to be used in parallel and enables or disables the Parallel Unit mode.</p>
Parallel Mode	<p>The Parallel Mode setting determines how the Current Levels/Resistance Values are set when used in parallel. There are two settings: Para and Sync.</p> <p>The Para setting allows the all the parallelized load modules to be operated as a single large load module.</p> <p>Sync mode allows the settings of a single unit to be synchronized across all the other parallelized load modules.</p>

---

**CC Example** Consider 3 load modules set to CC mode in Parallel.

In CC mode the total current for all units is the sum of each unit.

$$\text{Total } I = I_1 + I_2 + I_n$$

For example, to set a total load current of 90A, the Current Level setting in Para mode would be 90A, whilst it would be 30A in Sync mode.

Para mode

LOAD				USB
Level1	90 A	CH1P		
Level2	10 A	CH2P		
SlewRate	0.80 A/uS			
SlewRate	0.80 A/uS			
Timer1	0.025 mS			
Timer2	0.025 mS			
Mode	Range	Dynamic		Configure
CC	High			

Sync Mode

LOAD				USB
Level1	30 A	CH1S		
Level2	10 A	CH2S		
SlewRate	0.80 A/uS			
SlewRate	0.80 A/uS			
Timer1	0.025 mS			
Timer2	0.025 mS			
Mode	Range	Dynamic		Configure
CC	High			

**CR Example** When used in CR mode, the equation for equivalent resistance for all the parallel loads is:

$$\frac{1}{R_{eq}} = \frac{1}{R_1} + \frac{1}{R_2} + \frac{1}{R_n}$$

For example, if 2 load modules have a set resistance of 100Ω each, the equivalent resistance of the load modules would be 50Ω. The Level setting in Para mode would be 50Ω and 100Ω in Sync mode.

Para mode

LOAD				USB
Level1	50.0000 Ω	CH1P		
Level2	100.000 Ω	CH2P		
SlewRate	0.40 A/uS			
SlewRate	0.40 A/uS			
Timer1	0.025 mS			
Timer2	0.025 mS			
Mode	Range	Dynamic		Configure
CR	High			

Sync Mode

LOAD				USB
Level1	100.000 Ω	CH1S		
Level2	100.000 Ω	CH2S		
SlewRate	0.40 A/uS			
SlewRate	0.40 A/uS			
Timer1	0.025 mS			
Timer2	0.025 mS			
Mode	Range	Dynamic		Configure
CR	High			


**Display Mode**      Display mode determines what units are displayed on the local load modules: V/I, V/W, I/W, S. The displayed units can only be controlled through this menu.

## Run Program

**Background**      The Program function on the PEL-2000A series supports a total of 12 different programs at any one time with 10 sequences to each program. Up to 12 programs can be chained together. The Program function is able to create a number of Go/NoGo tests.

Run Program is not supported in Parallel Mode (page 75).


**Program Sequence**      A program sequence is simply a single load test. A program is a battery of each of these tests run in succession. Each sequence loads the settings for each channel from Memory Data (Memory MXXX). The Memory Data stores settings such as the operating mode and range for each channel. Each sequence loads all channels at the same time, unless programmed otherwise. Sequences for each channel run synchronously.

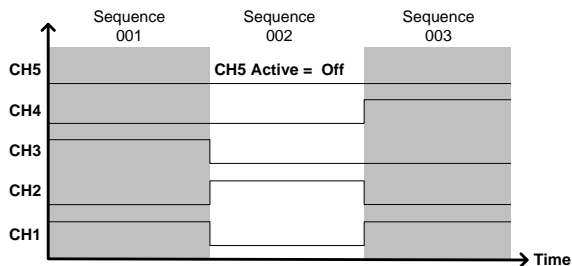


Each Sequence has a number of configuration options that apply to all the channels equally.

Sequence Item	Description
Memory	Loads the channel settings for each load module Range: M001~M120
Run	Sets the running configuration for the current sequence. The sequence can be skipped, run or run manually only. Range: Auto   Skip   Manual
On-Time	Sets the Sequence Run On-Time Range: 0.1 ~ 60.0s
Off-Time	Sets the Sequence Off-Time Range: Off   0.1 ~ 60.0s
Short-time	Sets whether the Short-Time for the sequence. Range: Off   0.1s ~ On-time
P/F-Time	Sets the Pass/Fail time for the sequence Range: Off   0.1 ~ (On-Time+Off-Time)-0.1s
Short Channel	Selects which channel will be shorted during the sequence Range: CH1 ~ CH8

 **Program** Sequences are run sequentially to create a Program. There are 10 Sequences in each Program.




 If less than 10 Sequences are desired for a Program, any additional Sequences can be skipped (not run).




Sequence 2 & 3 are skipped.

 **Program Chain** Any of the 12 programs can be chained together to create a Program Chain. Unlike Program Sequences, Program Chains need not be run sequentially in numerical order. Any program can be chained to any program. It is possible to chain programs into an infinite loop to continue a program indefinitely.



Above, a program chain running sequences out-of-order.

**Go/NoGo Results** If Go/NoGo limits have been configured, the Pass/Fail results for each channel will be displayed for all the sequences and programs.

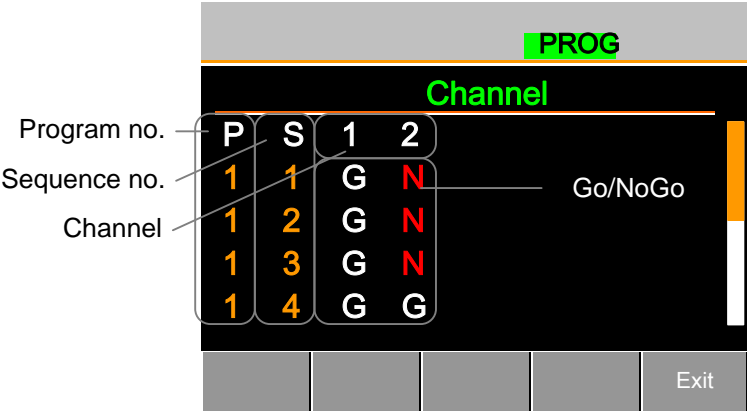

## Sequence

---

### Background

The Sequence function is used to create high resolution load simulations. Each Sequence can be configured to create a unique load profile to accurately simulate loads in real time. Sequences are only applicable for CC (Static) and CR (Static) modes.

---




Note: Sequences are not to be confused with the sequences used to create a program. They are not the same and cannot be used interchangeably. Sequences (SEQ memory) cannot be used in Programs and Programs cannot load Sequences.

---

### Load Profiling

The Sequence function is able to simulate a load to a high resolution. Each channel is able to change its load sink within 100us per point independently. When used in parallel, multiple loads can be sunk concurrently to simulate the loads placed on multiple output power sources.

The diagram below shows the load profile of a DUT at start-up.

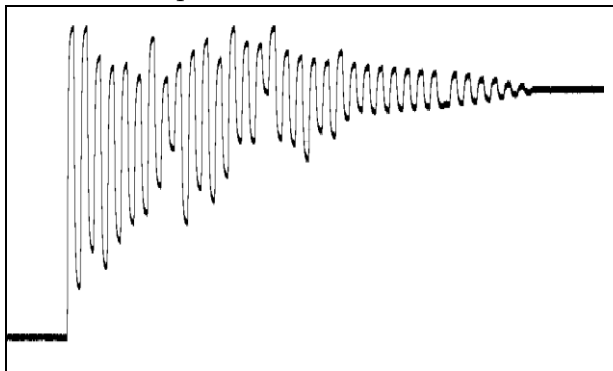




## Points

Up to 120 points can be used with each Sequence. Each point can have a different duration, slew rate and value.


A new point can be inserted or deleted at any stage of a Sequence. Any new points that are inserted will have a value averaged from its neighbors as default.

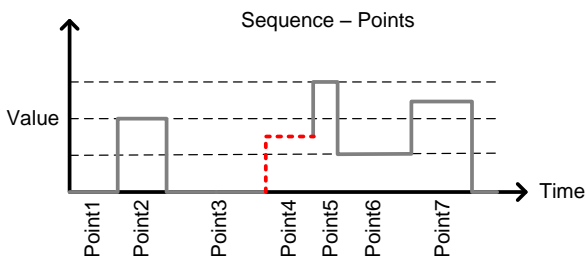

A new point is inserted after Point 3.

## Loop


Sequences can be programmed to loop a number of times starting from any point in the sequence.

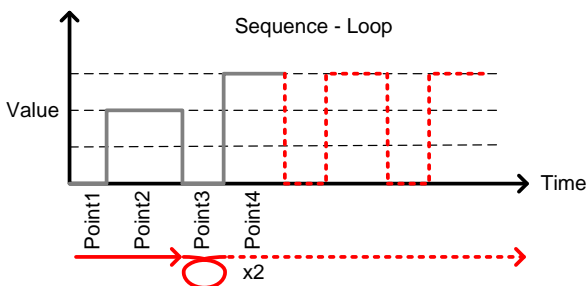

From Point3 the sequence is looped two times.

### On End Of Seq. function


If more than one Sequence is programmed on the mainframe, the On End Of Seq. function will hold the load current (of the selected sequence) to a designated value until all the other sequences have finished running.

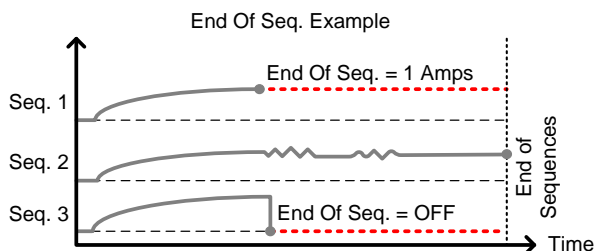

In the example above, Seq. 1 will hold the load current at 1A at the end of its sequence until the last sequence has finished. Seq. 2 is the longest sequence, and as such the End Of Seq. setting is not applicable. Seq. 3 is turned off after its sequence has finished (0 amps).

### Trig Out

The Trigger Out function allows a trigger sequence signal to be output from a channel via PIN 4 on Frame Link connector 1 when using Sequences. The Trig Out function is used from the Channel Duration menu.

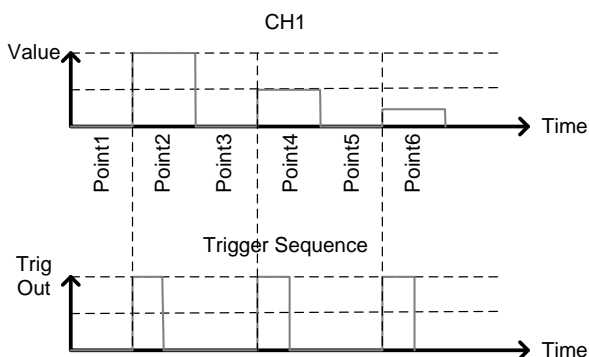

As can be seen above, a trigger sequence signal is output for every rising edge point.


#### Trig In

The Trigger In setting allows a sequence to start after a trigger (Trig Out) has been received via the frame link connector. The Trig In setting is used for frame linked mainframes.


#### Channel Duration Time Setting

The Channel Duration Time Setting feature allows the point time duration of one Sequence to be imported by another Sequence. If the receiving sequence doesn't have enough points, more will be created (without values).

For example, the sequences for CH1 and CH2 are shown below. CH1 has a total of 6 points with long durations, whilst CH2 has only 2 points, looped 5 times. The points from CH2 are also significantly shorter in duration.

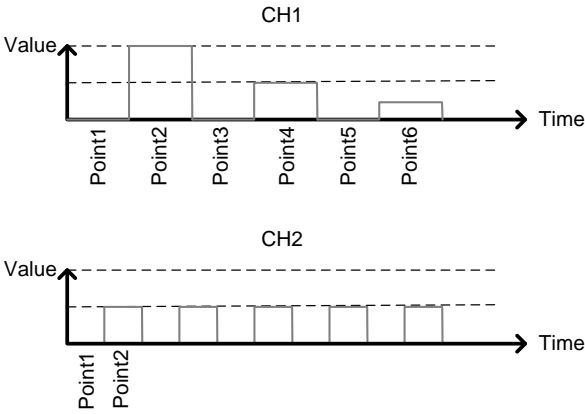

Below shows the resulting sequence when CH1 imports CH2. CH1 imports the duration time settings and number of points from CH2, but not the value data.

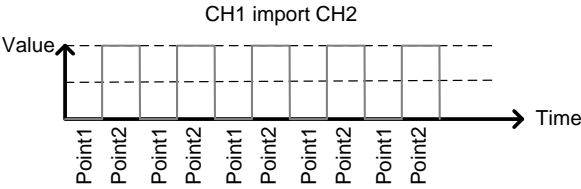


# OCP Test Automation

**Background** The OCP test function creates an automatic test to test the over current protection of power supply products. See page 179 for operation details.

This test will test to see when the over current protection of a power supply is tripped and return the measurements for the voltage and current when the over current protection was tripped. The PEL-2000A also has a user-defined OCP setting in the event that the power supply OCP fails.

The diagram below shows an example of the OCP Test Automation function.

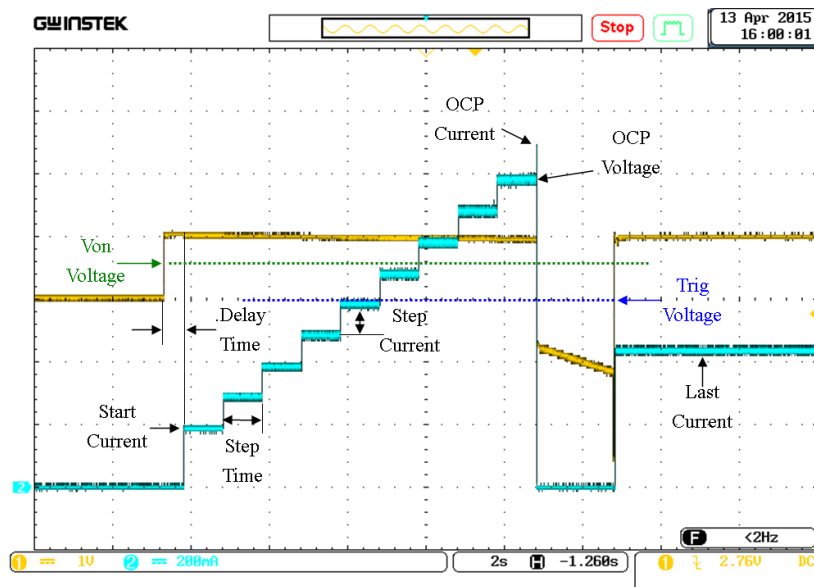


## Parallel Dynamic Loading

### Background

The PEL-2000A series of DC electronic loads support parallel dynamic loading. This simply means that when the load modules of a mainframe are connected in parallel and set to dynamic mode, they can perform dynamic tests synchronously following the same clock. Under dynamic mode, load current or resistance is pulsed between two preset levels. When used in parallel, higher powered outputs can be tested. This ability gives the PEL-2000A series the flexibility to perform dynamic tests over a wide range of power outputs.

For connection details see the Parallel Load Connections section on page 54.

The diagram below shows how two load modules are able to sink a higher load when used in parallel under dynamic mode.

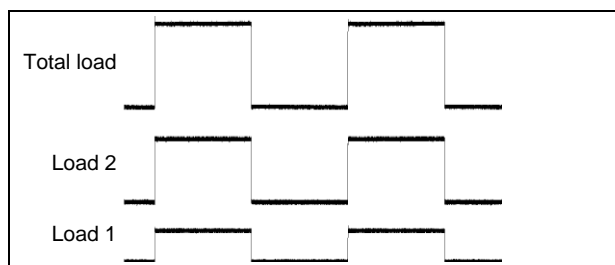

Note

Note: The same type of load modules must be used operated in parallel.

# Configurations Description

There are a number of different configurations for the PEL series including protection modes, operating configurations, and file system configurations. The Configuration Description section describes what the different configurations are used for and how they can be relevant to different operations.

## Protection Modes


**Background**      The PEL-2000A series include a number of protection modes: Over Current Protection, Over Voltage Protection, Over Power Protection, Under voltage protection and Constant Power Protection.

The protection modes are useful to protect both the load modules and the DUT(s). A buzzer can be set to notify when a protection setting has been tripped. When a protection feature is activated and has been tripped then the load unit will display an alarm. The Mainframe will also display an alarm. When an alarm has been tripped the load will stop sinking current/voltage. There are three Over load protection settings: ON, OFF and Clear.

					Alarm
OCP Level					5.075 A
OCP Setting					OFF
OVP Level					81.6 V
OVP Setting					ON
OPP Level					29.75 W
OPP Setting					OFF
					CH1 CCDH 80V Cont
Protection	Other	Go-NoGo		Previous Menu	


## Over Current Protection

When a load unit is operating in CR, CV or CP mode, the unit may need over current protection to prevent excessive current being sunk. Over current protection stops the load from sinking more current than its recommended limit which can cause damage to the unit.

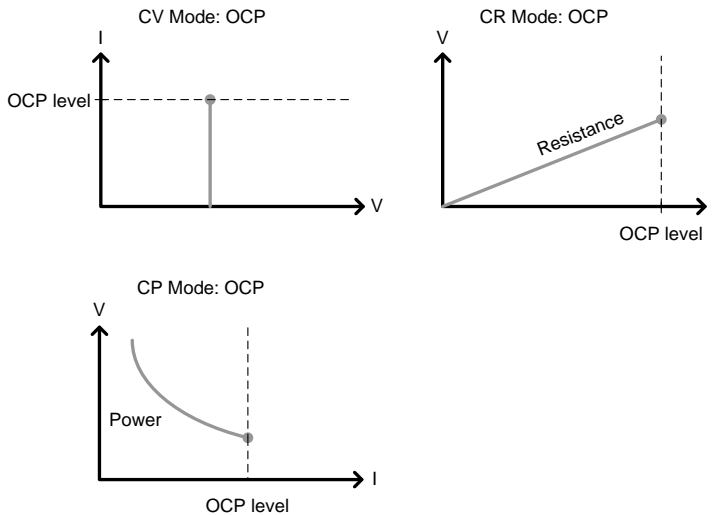

## Over Voltage Protection

Over voltage protection is used to limit the amount of voltage sunk. If the OVP trips, the PEL series load will stop sinking voltage.

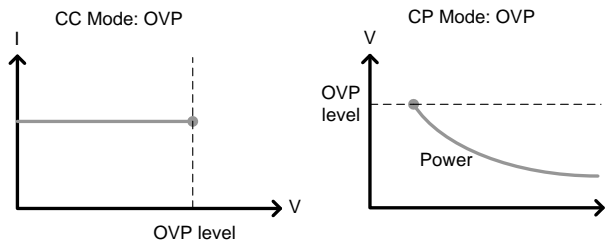



Over Power Protection	Over power protection is used when the power range exceeds the specifications of the load. When OPP is tripped power will cease to be sunk.
Reverse voltage Protection	Reverse voltage protection prevents reverse voltage damage to the PEL-2000A series up to the specified rating. When Reverse voltage protection has been tripped an alarm tone will sound until the reverse voltage is removed.  For more details please see the specifications.
Under voltage Protection	Under voltage protection will turn off the load when the voltage drops below a set limit.
Constant Power Protection	Constant power protection will prevent excessive power draw.

## Operating Configurations

---


Background	There are number of operating configuration settings. Configuration settings are for the following:  CC Vrange, Von Voltage, Von Latch, Short Key, CH Cont, Independent load sync, D-time, Step resolution settings and Response settings.
CC Vrange	CC Vrange (page 192) is used to set the voltage range as High or Low for CC mode. CC voltage range is dependent on the load module specifications.

## Von Voltage


Von Voltage is the voltage limit at which the load will start to sink current. There are two operation modes for Von Voltage: Von latched: ON and Von latched: OFF.

Latched: ON will sink current when Von has been tripped, and will continue to sink current even if the voltage drops below the Von Voltage.

Von Latched: OFF will sink current when Von has been tripped, but will stop sinking current when the voltage drops below the Von Voltage setting.

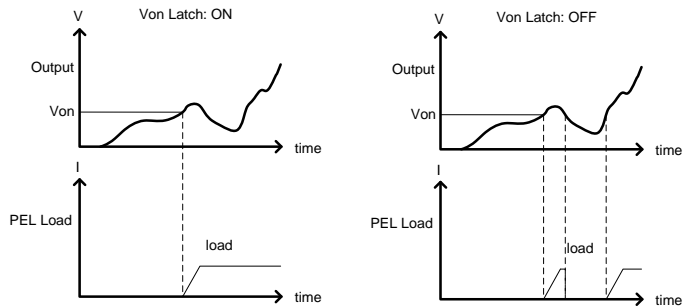

As can be seen in the diagram below, when Von-Latch is set to off, the load module will start to sink current when the Von-voltage limit has been tripped. It will stop sinking current when the output drops below the Von voltage limit.

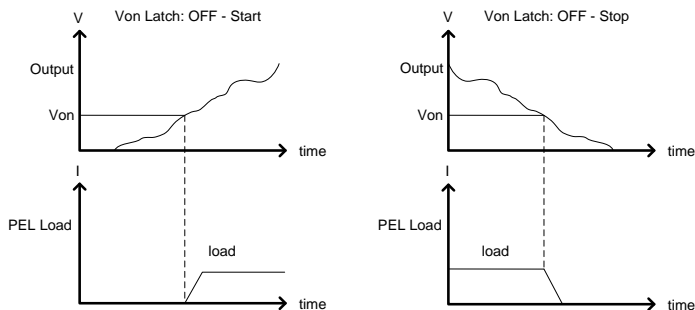

**Short** When short mode is on, the load unit can simulate a short circuit.

Shorting can be individually set for each channel when programming sequences.

To initiate a short circuit manually, the short key is used. It can be used at any time during an operation. It will not affect the settings. After a short circuit has finished, the load unit will resume the previous operation.

The short key can be set to toggle or hold. When pressed in toggle mode, shorts are toggled on and off. When pressed in hold mode, the key needs to be held to short the load.



A short circuit may trip a protection mode if too much current is sunk.

**CH CONT** Channel Control. When Channel control is activated (External) it can be used to monitor the voltage and current output of the load as well as turn loads on or off remotely from the Channel Control (CH CONT) connectors located on the rear panel.

For more information about channel control, see external voltage control on page 93.

**Independent** The Independent setting will allow the load modules to be controlled independently from the mainframe.

**Load D-Time** Load Delay time is used to delay activating a load (up to 10 seconds) after the load key has been pressed. However the Load D-Time setting will only work for loads that are initiated manually or when the PEL series mainframe is configured to Auto load (page 217) at run time.

**Step Resolution** Each channel voltage, current and resistance setting can have the step resolution configured. The step resolution refers to the step resolution of the *coarse adjustment* of these settings. The *fine adjustment* cannot be configured, see page 202 for details.

For example if the step resolution for CCH (CC high range) is .5 A, then the resolution can be incremented in .5A steps;

$$8.0 \leftarrow \rightarrow 8.5 \leftarrow \rightarrow 9.0 \leftarrow \rightarrow 9.5$$

The step resolution parameters apply to the following:

- CCH Step – CC high range
- CCL Step – CC low range
- CRH Step – CR high range
- CRL Step – CR low range
- CV Step – CV high range

**Step Resolution Range** The step resolution range is dependent on the load module and the range:


Max resolution: Module dependant, see page 202

Min resolution: Channel range/2

**Response** The Response setting sets the bandwidth of the load generator to 100kHz(normal) or 1MHz(fast). The Response setting is particularly important for limiting startup current.


## Channel Control

**Background** External channel control is used with the Channel Control connectors. Each channel control connector can activate each load, monitor voltage and current and has an external voltage reference input. The voltage and current monitors output 0~100% of the rated current/voltage as a voltage of 0~10V.

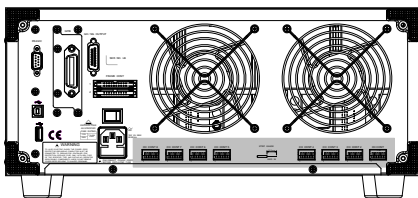

**External Voltage Reference** A voltage reference of 0-10V is used to represent 0-100% of the rating voltage/current of a load module. As seen below the external voltage reference and the rating voltage/current have a linear relationship. By varying the reference voltage between 0~10V the voltage/current setting will be changed accordingly.

External Voltage Control

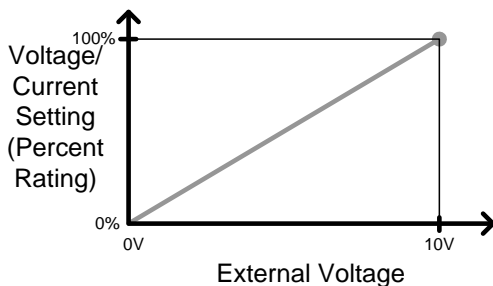


To determine the Percent Rating (voltage or current load input), use the following formula;

$$\text{Load Input} = \frac{\text{External Voltage}}{10(\text{V})} \times \text{Rating VorA}$$

Where “Rating V or A” is the rating voltage/current of the load module.

**Current Monitor** The load current input can be externally monitored using the IMON pin of a channel control connector. The IMON pin outputs a voltage of 0~10V to represent the input current as a percentage (0~100%) of rating current.

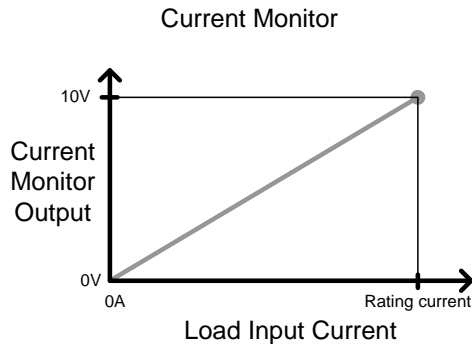


To determine the Current Monitor Output (IMON) , use the following formula;

$$\text{IMON} = \frac{\text{Load input current}}{\text{Rating A}} \times 10\text{V}$$

Where “Rating A” is the rating current of the load module.

**Voltage Monitor** The input voltage, like the load input current can be externally monitored with the channel control connectors. The VMON pin of the channel control connector outputs a voltage of 0~10V to represent the load input voltage as a percentage (0~100%) of the rating voltage.

### Voltage Monitor

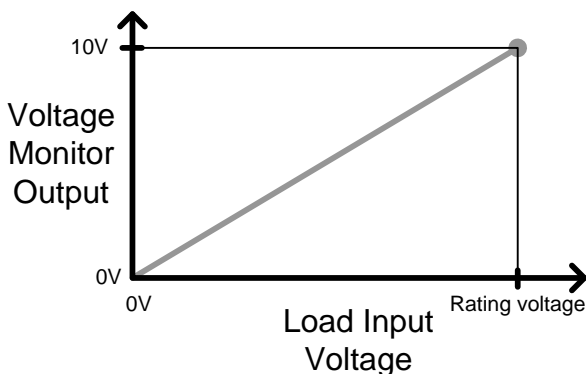

To determine the Voltage Monitor Output (VMON) , use the following formula;

$$VMON = \frac{\text{Load input voltage}}{\text{Rating V}} \times 10V$$

Where “Rating V” is the rating voltage of the load module.

Turning on the Load      A load is turned on when Load On input is set to On (active low). A load is turned off when the Load On input is set to Off (active high).

When a load is turned on from the channel control interface, the load can be turned off from the mainframe, local module and via remote control. However the opposite is not true; when a load is turned off using the channel control interface, the load cannot be turned on via the mainframe, local module or via remote control.

For connections and configurations, see pages 59 and 270 respectively.



## Interface and File System

### Interface

---

**Background**      The PEL-2000A series support RS232, GPIB and USB remote frame control. Only one type of connection is supported at any one time. For more information on remote control please see the GW Instek website at [www.gwinstek.com](http://www.gwinstek.com) or see your local distributor about the PEL-2000A programming manual.

For connection options and configurations see the options below.

---

RS-232 configuration.	Page 231
RS-232 pin connection.	Page 268
GPIB configuration.	Page 233
GPIB pin configuration.	Page 269
USB configuration.	Page 234

### File System

---

**Background**      The PEL series is able to save and recall a number of different data types for each channel:  
Presets  
Memory  
Setup  
SEQ (Sequence)

All data types can be saved and recalled to internal memory or saved to a USB flash drive. Each channel has its own dedicated memory for each

---

---

data type. Thus files are saved/recalled for each channel and each data type.

---

**Preset Data**      Preset data can be saved into 10 memory slots for each channel. Preset data contains the mode, range, CV response speed and Go/NoGo settings.

---

Internal Format                      P0~P9

External Format                      20X0X\_XX.P

---

**Preset Contents**      Preset data contains the following data;

---

CHAN	<ul style="list-style-type: none"> <li>• Mode</li> <li>• Range</li> </ul>	<ul style="list-style-type: none"> <li>• Static/Dynamic</li> <li>• CV response speed</li> </ul>
Go/NoGo	<ul style="list-style-type: none"> <li>• SPEC Test</li> <li>• High</li> <li>• Center</li> </ul>	<ul style="list-style-type: none"> <li>• Entry Mode</li> <li>• Low</li> </ul>

---

**Memory Data**      Each channel can save up to 120 different Memory data types (M001~M120) into internal memory. Memory data contains general channel settings and is used when programming sequences. Memory data can be stored both internally and externally to USB. Preset data and Memory data store the same contents.

---

Internal Format                      M001~M120

External Format                      20X0X\_XX.M

---

**Memory Contents**      Memory data contains the following data;

---

CHAN	<ul style="list-style-type: none"> <li>• Mode</li> <li>• Range</li> </ul>	<ul style="list-style-type: none"> <li>• Static/Dynamic</li> <li>• CV response speed</li> </ul>
Go/NoGo	<ul style="list-style-type: none"> <li>• SPEC Test</li> <li>• High</li> <li>• Center</li> </ul>	<ul style="list-style-type: none"> <li>• Entry Mode</li> <li>• Low</li> </ul>

---

SEQ Data	SEQ data contains Sequence data. SEQ data can only be saved to and from USB. SEQ refers to Sequence data, not Program sequences.		
	Internal Format	N/A (Internal buffer)	
	External Format	20X0X_XX.A	
SEQ Contents	SEQ data contains the following data;		
	Seq.Edit	<ul style="list-style-type: none"><li>No. (Points)</li><li>Slew rate <math>f</math></li><li>Duration time</li></ul>	<ul style="list-style-type: none"><li>Value</li><li>Slew rate <math>\frac{1}{f}</math></li></ul>
	Loop	<ul style="list-style-type: none"><li>Repeat</li><li>On End Load</li></ul>	<ul style="list-style-type: none"><li>Start of Loop</li><li>CC Vrange</li></ul>
Setup Data	Setup data can be saved to 4 internal memory slots. Setup data contains Memory data, Program Sequence, Chain data, configuration settings and operation settings for every channel. Setup data can be saved to Internal memory or to USB.		
	Internal Format	Setup Memory 1~4	
	External Format	200X0_XX.S	
Setup Contents	Setup data contains the following data;		
	Program	<ul style="list-style-type: none"><li>PROG</li><li>Memory</li><li>On-Time</li><li>P/F-Time</li><li>Short Channel</li></ul>	<ul style="list-style-type: none"><li>SEQ (program sequence no.)</li><li>Run</li><li>Off-Time</li><li>Short-Time</li></ul>
	Chain	<ul style="list-style-type: none"><li>Start</li></ul>	<ul style="list-style-type: none"><li>Program Sequence (P01~P12)</li></ul>

Run	• Active Channel (CH01~08)	
CHAN	• Mode	• Static/Dynamic
	• Range	• CV response speed
Go/NoGo	• SPEC Test	• Entry Mode
	• High	• Low
	• Center	

#### Save: Internal memory

When saving data to internal memory, either the current channel or all the channel data can be saved. Not all data types can save the current channel or all the channel data.


Data Type	Current Ch	All Ch
Preset	✓	✓
Memory	✓	—
SEQ	✓ (single save)	✓
Setup	—	✓

#### Save: External memory

Only SEQ, Memory and Preset data can be saved for a single channel to USB. All four data types (SEQ, Memory, Setup, Preset) can save all channels to USB.

Data Type	Current Ch	All Ch
Preset	✓	✓
Memory	✓	✓
SEQ	✓	✓
Setup	—	✓


**Save/Recall USB** In order to save data from a single channel to USB, data must first be saved to the internal memory. After data is saved to internal memory, all the files can be saved to USB.

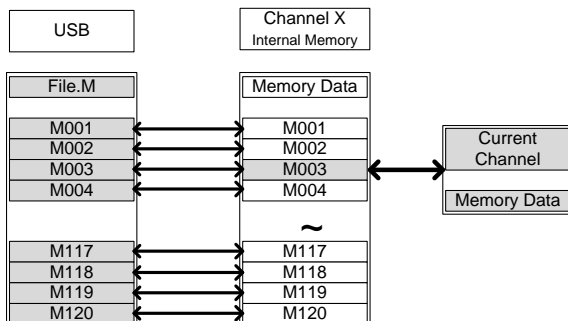

To recall saved files, the reverse is also true. Files must be recalled from the USB flash drive to internal memory. Then from internal memory the data can be recalled to each channel\*.

\*Excluding SEQ data.

**Save/Recall All** The SEQ, Preset, Memory or Setup data can be saved from every channel into USB. SEQ, Preset and Memory data is saved into a directory (ALL0000-ALL0099) with a file for each channel, whilst Setup data is saved in a single file.

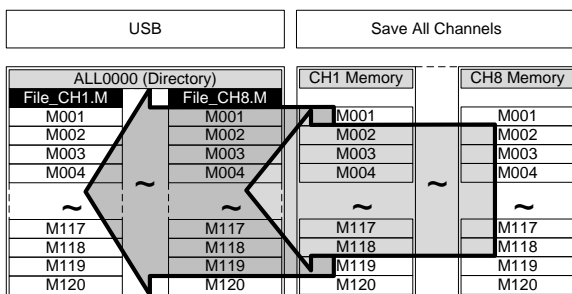

To recall saved files, the reverse is not true. Files must be recalled to each channel separately.

## File Format

---

Single Channel

Filename format

Memory data

Preset data

SEQ data

2030R\_00.M

└─┘└─┘└─┘└─┘

1 2 3 4

1: PEL series Load module type:

2020 = PEL-2020A

2030 = PEL-2030A

2040 = PEL-2040A

2041 = PEL-2041A

2: Channel

R = Right

L = Left

0 = Single channel or not used

3: Save file number:

0 ~99

Incremented after each consecutive save.

4: File extension

M = Memory data

P = Preset data

A= SEQ data

All Channel

Directory Format

ALL\_0000

└─┬─┘ └─┬─┘  
1 2

1: All Channel common  
directory name

2: Directory number:

0000 ~ 0099

All Channel

File Format

Memory data

Preset data

SEQ data

Setup Data

2030R\_C1.M

└─┬─┘ └─┬─┘ └─┬─┘ └─┬─┘  
1 2 3 4

20040\_00.S

└─┬─┘ └─┬─┘ └─┬─┘  
1 2 3 4

1: PEL series Load module  
type:

2020 = PEL-2020A

2030 = PEL-2030A

2040 = PEL-2040A

2041 = PEL-2041A

2: Channel

R = Right

L = Left

0 = Single channel

3: Channel number:

C1 = CH1

C2 = CH2

Etc.

00 = All channels  
(Setup data)

4: File extension

M = Memory data

P = Preset data

A = SEQ data

S = Setup data

# TUTORIALS

(Step by Step Operations)

---

 
Local loads.....	105
Single Channel Load.....	107
Parallel Load Modules .....	109
Programming .....	111
Sequences.....	113
Frame Link .....	114
Channel Control .....	116
General Configuration Options.....	118



## Local loads

Local mode operation is useful to quickly test loads using the load module control panel rather than the mainframe control panel. Local load modules can be configured to operate independently to the mainframe. This can be useful when settings need to remain unchanged on the mainframe. Note however that the local modules cannot change the modes (CC, CV, CR, CP), only the values.

Parallel Unit mode is not supported for local module control.



Step	Description	Details
1. Setup	Ensure the channel load is set up as desired.	Pages 37, 45
2. Channel selection	Ensure the correct channel or Value (A/B) is selected by using the R/L or A/B key.	Page 124
3. Measurement Mode selection	If in CC or CR mode, Static or Dynamic mode can be selected.	CC Pages 125, 137 CR Pages 142, 145
4. Run the Load	Press the LOAD key to start/end loading the device under test.	Page 126


### Optional

 5. Short configuration	Configure the SHORT key to hold/toggle short circuit configuration.	Page 127
6. Display	To change the display output, use the DISPLAY key.	Page 128
7. Shorting the load	To short the load, use the SHORT key when the load is on.	Page 127

- |                                   |   |          |
|-----------------------------------|---|----------|
| 8. Independent load               | The local load modules can be set to independent load.            | Page 198 |
| 9. Independent control            | Slave knobs can be configured to be independent to the mainframe. | Page 223 |
| 10. Configure Slave Knob Settings | Display Measured or Set Values with the selector knob.            | Page 227 |
-

## Single Channel Load

Single channel loads are used to manually test a DUT quickly or to configure channel settings for Program Sequences using the mainframe panel.



Step	Description	Details
1. Setup	Choose the appropriate load module and make sure it is installed.	Page 37
2. Connection	Connect the terminals to the DUT.	Page 45
3. Channel selection	Select the load channel on the mainframe.	Page 130
4. Measurement mode selection	Select measurement mode (CC, CV, CR, CP).	CC Page 133 CV Page 148 CR Page 141 CP Page 152
5. Range selection	Set the range to high or low (CC, CR and CP mode).	CC Page 134 CR Page 141 CP Page 155
6. Mode selection	Choose Static or Dynamic mode (CC & CR mode only).	CC Pages 135, 137  CR Pages 142, 145
7. Dynamic levels (CC,CR)	Set the dynamic levels, slew rate and timers. Applicable to CC & CR mode only.	CC Page 135 CR Page 143
8. Static Values (CC,CV,CR)	Set the A(B) Value, slew rate (CC, CR) and current limit (CV, CP)	CC Page 138 CR Page 145 CV Page 149 CP Page 153

9. Go/NoGo Set the Go/NoGo configurations, if applicable. Page 206

10. Protection Modes Configure the protection modes. Page 188

11. Run Activate the load by pressing the load key.




#### Optional

 12. Configuration There are number of configurations that apply to all channels. For details see the Configuration Tutorial. Page 118

## Parallel Load Modules

The Parallel Unit configuration setting allows for a quick and easy parallel setup for load modules of the same type and rating. However, the Parallel Unit configuration settings only apply for CC and CR modes.



Step	Description	Details
1. Setup	Choose the appropriate load modules and make sure they are installed. All load modules must be of the same type and rating.	Page 37
2. Connection	Connect the terminals to the DUT.	Page 45
3. Parallel mode configuration	Enable Parallel Unit Mode and configure.	Page 211
4. Measurement mode selection	Select measurement mode (CC, CR).	CC Page 133 CR Page 141
5. Range selection	Set the range to high or low (CC, CR mode).	CC Page 134 CR Page 141
6. Mode selection	Choose Static or Dynamic mode.	CC Pages 135, 137 CR Pages 142, 145
7. Dynamic levels	For Dynamic mode, set the dynamic levels, slew rate and timers.	CC Page 135 CR Page 143
8. Static Values	For Static mode, set the A(B) Value and slew rate.	CC Page 138 CR Page 145

9. Go/NoGo Set the Go/NoGo configurations, Page 206  
if applicable.

10. Protection Modes Configure the protection modes. Page 188

11. Run Activate the load by pressing the load key.




#### Optional

 12. Configuration There are number of configurations that apply to all channels. For details see the Configuration Tutorial. Page 118

## Programming

When creating a Program Sequence or Chain, all channels are used at the same time unless programmed otherwise. Program Sequences use the channel settings stored from Memory Data. Program sequences are primarily used to perform a battery of pass/fail tests on DUTs.




Step	Description	Details
1. Setup	Choose the appropriate load module(s).	Page 37
2. Connection	Connect the terminals to the DUT.	Page 45
3. Channel selection	Select the load channel(s) on the mainframe.	Page 130
4. Channel setup	See the “Single channel load” tutorial to configure a single channel. Do not activate the load.	Page 107
5. Save channel	Save the configured channel.	Page 236
6. Multiple channels	If multiple channels need to be configured, follow steps 1-5 for any remaining channels.	
7. Program menu	Enter the Program menu.	Page 152
8. Configure the sequence	Configure the first program.	
9. Save sequences	Save the Program in the FUNC → Program menu.	
10. Program Chains	If required, Program chains can be created.	Page 161
11. Save Program	Save the chain in the Chain menu.	

12. Save Setup	Save everything to the internal Setup memory.	Page 241
13. Run	Run the Program Sequence/Chain.	Page 163



## Sequences

 
Sequences are used to accurately simulate loads. As each Sequence is independent, Sequences are ideally suited to test multiple output power sources.



Step	Description	Details
1. Setup	Choose the appropriate load module(s).	Page 37
2. Connection	Connect the terminals to the DUT.	Page 45
3. Channel selection	Select a load channel with the mainframe.	Page 130
4. Channel setup	Create a sequence.	Page 169
5. Sequence loop	Create a sequence loop if necessary.	Page 171
6. Multiple channels	If multiple channels need to be configured, follow steps 1-5 for any remaining channels.	
7. Channel Duration menu	Edit the sequence channel duration information. Ensure that the channels containing Sequences are not set to OFF.	Page 174
8. Trigger Settings	Set Trigger Out and In channels, if appropriate.	
9. Run	Run the Sequence(s)	Page 176

# Frame Link

Frame link connections are used connect up to four slave main frames to a master main frame. When using frame link connections it is possible to perform a number of operations in parallel under the control of the master unit.

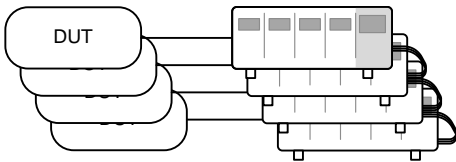


Step	Description	Details
1. Setup	Connect the mainframes together.	Page 57
2. Configure	Configure the Frame CONT to ON for all mainframes.	Page 221




At first both the master and slaves are independent. FRM (Frame Master) can be seen on the top panel of the each mainframe. When a mainframe is connected as a slave unit, the FRM icon will change to FRS (Frame Slave). The front panel keys are disabled on slave units when in slave mode (FRS).

Slave mode **FRM** → **FRS**

Master/Independent **FRM**

3. Program	See the tutorial sections for programming or channel configuration.	Pages 107, 109
4. Run	Run the loads. To run the loads, press the LOAD key on the master mainframe. To stop, press again. When the LOAD key is pressed all loads will be active.	

 Options		
5.	Load Preset memory	Load preset memory on the mainframe and all frame-linked slaves. <span>Page 265</span>
6.	Load Setup Memory	Load setup memory on the mainframe and all frame-linked slaves <span>Page 264</span>
7.	Set slave to independent	Press shift + CHAN on the slave unit to enable local control on a slave unit. 

**FRS** → **FRM**




Note

When a load is run or memory is recalled from the master mainframe, the slave unit will return to mainframe control.

Ensure the same firmware is installed on both master and slave mainframes.

## Channel Control

The Channel Control connectors on the rear panel can be used to control and monitor the status of up to 8 channels. For more information on channel control, see page 93.

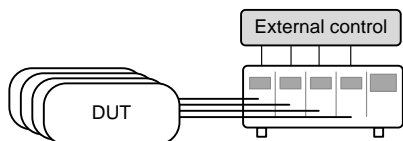

Step	Description	Details
1. Setup	Ensure the load and PEL series mainframe is turned off.	
2.	Choose the appropriate load module(s).	Page 37
3. Connection	Connect the terminals to the DUT.	Page 45
4.	Connect the channel control connectors on the rear panel.	Page 59 & 270
5.	Turn on the PEL series mainframe and DUT (load).	
6. Configure	Select the Mode* and Range* via the front panel.	CC Pages 133, 134 CV Page 148
7.	Activate channel control for each channel that will be used for external control, i.e., set CH CONT to External.	Page 197
8. Run	Run the load. Turn the load on by either outputting an active low signal to the appropriate channel control connector or use the mainframe LOAD key*.	Page 59 & 93

9. Monitor      Use IMON and VMON to monitor the current and voltage of load outputs. Page 93

10. End      To turn the load off, output an active high signal to the channel control connector, or press the LOAD key on the load module or mainframe\*\*.

\* Mode and Range cannot be configured via the Channel Control (CH CONT) interface. Mode and Range can only be configured via the front panel.

\*\* The LOAD key cannot always be used to turn on/off the load. See page 93 for details.

## General Configuration Options

There are number of different options for each channel. The different options are described below.

Options	Description	Details
1. CC Vrange	Configure the CC Voltage range from high or low.	Page 192
2. Von Voltage	Configure the Von Voltage settings.	Page 194
3. Short key	Configure the short key to toggle or hold.	Page 195
4. CH CONT	Turn channel control on/off	Page 197
5. Independent load	Turn the load module control to dependent (via mainframe) or independent control.	Page 198
6. Delay Time	Configure the load delay time for each channel. (0-10 seconds).	Page 200
7. Clear All Protection	Clear all the Protection Alarms.	Page 191
8. Display	Adjust display settings.	Page 218
9. Control type	Configure the Knob control.	Page 223
10. Slave Knob Setting	Display Measured or Set values with the selector knob.	Page 227
11. Alarm	Configure alarm settings.	Page 224
12. Step resolution	Configure the step resolution. Applicable to CC high and low range, CR high and low range and CV high range.	Page 202
13. Response	Configure the Response setting.	Page 206
14. Sound	Turn the sound on/off for the mainframe IU.	Page 218

# PERATION

The PEL series operation is described in the chapters below. The sections are broken down into small operations. For thorough examples on the operation of the load generator, please see the tutorial section on page 105.

---

## **Local Mode Operation.....123**

Selecting a Channel .....	124
Selecting Static/Dynamic .....	125
Turning on the Load .....	126
Shorting .....	127
Display Output View .....	128
Editing CC/CR/CV/CP A/B Value .....	129

---

## **Mainframe Basic Operation.....130**

Help Menu .....	131
Channel Selection .....	132
Select CC Mode .....	133
Select CC Range .....	134
Select CC Dynamic Mode .....	135
Editing CC Dynamic Parameters .....	135
Select CC Static Mode .....	137
Editing CC Static Parameters .....	138
Set to CR Mode .....	141
Select CR Range .....	141
Select CR Dynamic Mode .....	142
Editing CR Dynamic Parameters .....	143
Select CR Static Mode .....	145

---

---

Editing CR Static Parameters .....	145
Select CV Mode.....	148
Editing CV Parameters .....	149
Select CV Response Speed .....	151
Select CP Mode.....	152
Editing CP Parameters .....	153
Select CP Range .....	155

---

<b>Creating a Program Sequence .....</b>	<b>156</b>
Program Chains .....	161
Running a Program .....	163

---

<b>Edit Sequence .....</b>	<b>169</b>
Create Sequence Loop.....	172
Channel Duration Time Settings .....	174
Run Sequence .....	176

---

<b>OCP Test Automation .....</b>	<b>179</b>
----------------------------------	------------

---

<b>Channel Configuration .....</b>	<b>186</b>
Accessing the Configuration Menu.....	187
Setting (OCP/OVP/OPP/UVP) .....	188
Protection Clear .....	191
Setting the CC Voltage Range .....	192
Adjusting the Von Voltage and Latch..	194
Configuring the Short key.....	195
Configuring Channel Control.....	197
Configuring the Independent Setting .	198
Configuring the Load Delay Time .....	200
Configuring Step Resolution .....	202

---



---

Configuring Response Time .....	206
Go/NoGo .....	208
Parallel Unit .....	211
View Parallel Information .....	213

---

<b>Mainframe Configuration .....</b>	<b>215</b>
Accessing System Information .....	216
Accessing the Load Menu .....	217
Adjusting the Speaker .....	218
Adjusting the Display Settings .....	219
Adjusting the Frame Control .....	221
Adjusting the Knob Control Type .....	223
Configuring Alarm Sound .....	224
Configuring Go/NoGo Alarm Sound ..	225
Adjusting Slave Knob Settings .....	227
View Language Settings .....	229

---

<b>Interface Configuration (settings) .....</b>	<b>230</b>
Configuring RS232 Connection .....	231
Configuring the GPIB Address .....	233
Configuring USB Remote Connection ..	234

---

<b>Save / Recall .....</b>	<b>236</b>
Saving/Recalling Channels .....	237
Saving/Recalling Preset memory .....	239
Saving/Recalling Setup Memory .....	241
Setting the Default USB Path/File .....	243
Saving Setups to USB Memory .....	248
Saving/Recalling Memory Data to USB	251
Saving/Recalling Presets to USB .....	255
Saving/Recalling Sequences to USB ...	259

Quick Preset Recall/Save .....	263
Recall Setup Memory (Frame link). ....	264
Recall Preset Memory (Frame link) ....	265
Recall Factory Defaults .....	266

# Local Mode Operation

Each channel can be edited by its local load module. Depending on the configuration, local changes can be reflected on the mainframe. For this section all operations refer to knobs and buttons on the local load module panels, unless stated otherwise.

---

<b>Local Mode Operation .....</b>	<b>123</b>
Selecting a Channel .....	124
Selecting Static/Dynamic .....	125
Turning on the Load .....	126
Shorting .....	127
Display Output View .....	128
Editing CC/CR/CV/CP A/B Value .....	129

---

## Selecting a Channel

---

**Background** Each channel can be individually selected by using its load module panel. Changing channels on a load module only applies to dual channel load modules.

**Single Channel Panel operation** Press any key on a load module to select its channel.

**Dual Channel Panel Operation** For dual channel load modules, press any key on a load module that has the desired channel. Press the R/L key to cycle between the channels on the load module. L or R will be displayed on the bottom left hand to indicate which channel (left or right side) is active on the load module.



---

### LR




#### Note

On single channel modules, pressing the A/B key repeatedly will change the level from A or B when in Static mode.

Channels cannot be selected in Parallel Mode.

---

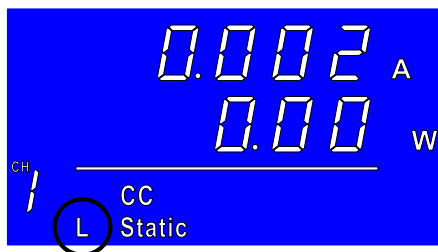


## Selecting Static/Dynamic

**Background** Each load channel can be individually switched from Static to Dynamic using the local load module.

1. Select a channel on the load module. Page 124

 
**Panel operation** 2. Press the STATIC/DYNA. key to switch from dynamic to static mode and vice versa.



Note

All changes will be shown on the display and depending on the configuration, reflected on the mainframe.

Static/Dynamic cannot be selected in Parallel mode.

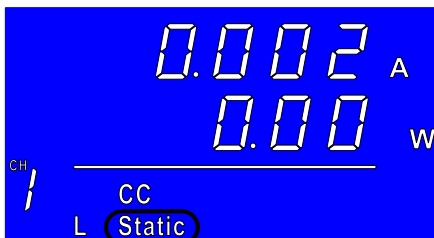

## Turning on the Load

**Background** Loads can be individually selected to be turned on using local operation.

1. Select a channel on the load module. Page 124

**Panel operation** 2. Press the LOAD key to turn on the load.



**Note**


When a channel load is activated, the load on symbol will be displayed under the channel number.

**Range**

**L-ON** Left channel

**R-ON** Right channel

**ON** Single channel

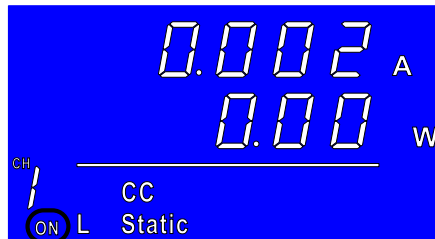

**Turning the load off** 3. Press the LOAD key.



## Shorting

**Background** The short key can be set to toggle or hold.

1. Ensure the load is off.
2. Select a channel on the load module.



Page 124

**Panel operation** 3. Press the SHORT key to change between shorting modes.



**-hold-** When the load is on, the SHORT key needs to be held to short.

**-to99-** When the load is on, the SHORT key can be used to toggle shorting on/off.

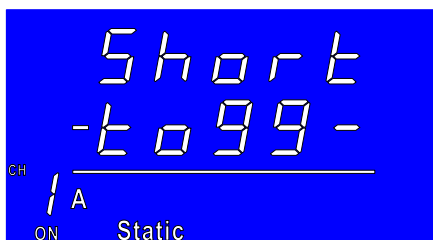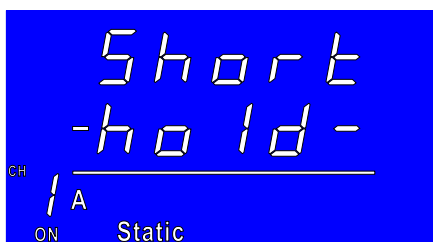

4. Press LOAD to turn on the load.

A rectangular button with rounded corners and a double border, containing the word "LOAD" in white capital letters on a dark background.

Shorting

5. a. Press the SHORT key (toggle mode).

A rectangular button with rounded corners and a double border, containing the word "SHORT" in white capital letters on a dark background.

Or

- b. Hold the SHORT key (hold mode).



Note

The load cannot be shorted from the local load module in Parallel mode.

## Display Output View

---

Background

The DISPLAY key can be used to switch the display output to different views.

Panel operation

1. Press the DISPLAY key repeatedly to switch between the different views.

A rectangular button with rounded corners and a double border, containing the word "DISPLAY" in white capital letters on a dark background.

**V**

Voltage

**A**

Current

**W**

Power

**S**

Load on time.



Note

The Display mode cannot be changed in Parallel mode.



## Editing CC/CR/CV/CP A/B Value

**Background** The Slave Knob is used to edit the A Value or B Value (single channel load module) when in static mode. The Slave Knob can also operate in fine or coarse editing mode.

**Panel Operation** 1. Ensure the mode is in static mode. Page 125

 
2. Choose a channel (or choose A or B Value) by pressing the R/L or A/B key.




3. Press the Slave Knob to toggle between fine and coarse editing mode.

SEt\_C = coarse mode.

SEt\_F = fine mode.




Fine mode example:

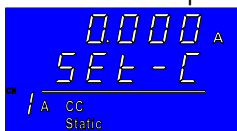

Coarse mode example:



4. Turn the Slave Knob to edit the A/B Value for the selected mode.

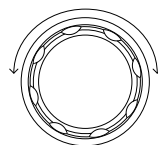

Note

When the Slave Knob is set to "Measure", the slave knob must be pressed first to display the values on the load module display.

Editing the A/B Value is not possible with this method in Parallel mode.

## Mainframe Basic Operation

For the Mainframe Basic Operation section, all operations refer to the knobs and keys on the main configuration panel, unless otherwise stated.

---

<b>Mainframe Basic Operation .....</b>	<b>130</b>
Help Menu .....	131
Channel Selection .....	132
Select CC Mode .....	133
Select CC Range .....	134
Select CC Dynamic Mode .....	135
Editing CC Dynamic Parameters .....	135
Select CC Static Mode .....	137
Editing CC Static Parameters .....	138
Set to CR Mode .....	141
Select CR Range .....	141
Select CR Dynamic Mode .....	142
Editing CR Dynamic Parameters .....	143
Select CR Static Mode .....	145
Editing CR Static Parameters .....	145
Select CV Mode .....	148
Editing CV Parameters .....	149
Select CV Response Speed .....	151
Select CP Mode .....	152
Editing CP Parameters .....	153
Select CP Range .....	155

 
---

## Help Menu


**Background** When any function key has been pressed or when a menu has been opened, the HELP key can be used to display a detailed description.

1. Press a function or system key on the front panel or open a menu.

**Help Selection** 2. Press the HELP key to display the built-in help.



3. Use the scroll wheel to scroll down if necessary.

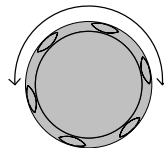

### File System

The system is able to save and recall a number of different data types for each channel: **Memory**, **Preset**, **Sequence** And, a data type for all channels is **Setup**.

All data types can be saved and recalled to internal memory or saved to a external



A detailed description of the function or menu item is shown.

4. Press F5 to exit.



Channel Selection

 
**Background** There are up to 2 channels per load module, depending on the model. The main display can be used to control each channel individually.




**Mainframe Channel selection**

When Parallel Unit configuration is enabled, channel selection is disabled. See page 195 for details.


1. Press the CHAN button.




2. Select a channel by turning the Variable knob.

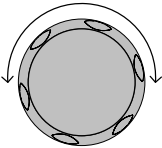

The channel selection appears highlighted in orange on the top right of the screen.

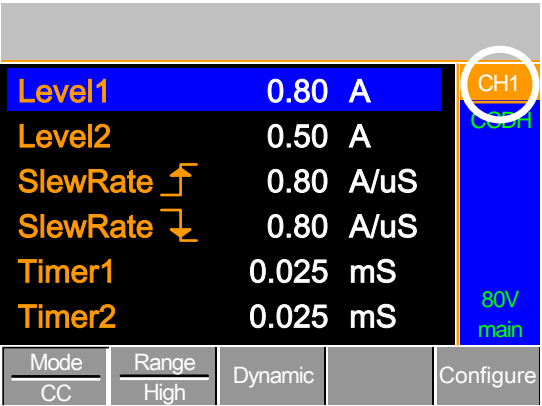

 
3. Press the Selector knob or Enter to confirm.




## Select CC Mode

**Background** The PEL-2000A series load generators operate in four different modes: Constant Current (CC), Constant Resistance (CR), Constant Voltage (CV), and Constant Power (CP).

 When a channel is active, the F1 key can be used to switch between each operating mode.



 **Panel Operation** 1. Select a channel using the CHAN button and selector knob.



2. Press F1 repeatedly until CC mode is displayed in the display panel.



Mode	Range	Dynamic		Configure
CC	High			



Changing the operating mode will only affect the current (active) channel. Other channels will not be affected by any changes.

## Select CC Range

 
### Background

Constant current mode can run in high and low range. Maximum range is dependent on the load module.

Ensure the menu is in CC Mode. See page 133.

Mode	Range	Dynamic		Configure
CC	High			

- Panel Operation 1. Press the F2 (Range) key repeatedly until High or Low range is selected.



The range will be reflected in both the bottom menu system and the Current Operation Channel Status panel.

CC Dynamic Low	CCDL
CC Dynamic High	CCDH
CC Static Low	CCL
CC Static High	CCH



Note

Changing the range will only affect the current (active) channel. Other channels will not be affected by any changes.

Note, not all load modules support dual ranges. If only one range is supported, it is usually high range.

## Select CC Dynamic Mode

 
**Background** Constant current mode can be set to dynamic or static mode. Dynamic mode is used to automatically set varying load rates.

Ensure the menu is in CC Mode. See page 133.

Mode	Range	Dynamic		Configure
CC	High			

- Panel Operation**
1. Press the F3 key until Dynamic Range mode is selected.

F3



Note

Changing from static to dynamic mode will only affect the current (active) channel.

## Editing CC Dynamic Parameters

**Background** Dynamic Constant Current Mode has two operating current levels, slew rates and timers.

Slew rates determine the speed at which the load will change from one level to the next.

The timers determine how long the load module/channel will stay at level 1 or level 2.

Ensure the menu is in CC Dynamic Mode. See page 135.

Mode	Range	Dynamic		Configure
CC	High			


Parameters	Level1	0~rating A
	Level2	0~rating A
	SlewRate	↗ Load module dependent
	SlewRate	↘
	Timer1	0.025~30000.0 ms
	Timer2	0.025~30000.0 ms



Note

When used in parallel mode, the Level1 & Level2 range is the combined rating of all the units used in parallel mode.


- Panel Operation
1. Use the Selector knob to highlight Level1.

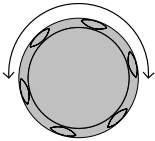

				CH1P
				CCDH
Level1	0.80	A		
Level2	0.50	A		
SlewRate	↗	0.80	A/uS	
SlewRate	↘	0.80	A/uS	
Timer1	0.025	mS		
Timer2	0.025	mS		
Mode	Range	Dynamic		80V
CC	High			main
				Configure



 2. Press the Selector knob to edit the selected level, then turn to increase or decrease the value\*.



OR

Use the number pad to enter a number.



Level1

0.80

A

3. Press the Selector knob or Enter to confirm selection.
4. Repeat steps 1-3 for the remaining parameters.



Note

Level1 & Level2 can be set for both High and Low Range.

\*Press Shift to toggle between coarse and fine adjustment when editing the Level1 and Level2 parameters. See page 202 for details.

## Select CC Static Mode

### Background

 
Constant current mode can be set to dynamic or static mode. Static mode is for manually varying the load for single channel load modules or to set a static load on dual channel modules.

Ensure the menu is in CC Mode. See page 132.

Mode	Range	Dynamic		Configure
CC	High			

- Panel Operation
1. Press the F3 key until Static mode is selected.

F3



Note

Changing from static to dynamic mode will only affect the current (active) channel.

### Editing CC Static Parameters

CC Values

When using a single channel load module, Static Constant Current Mode has two operating current values, A&B. If a dual channel load is used, only one current value is available per channel:  
A Value.

If Parallel Unit is enabled, an additional parameter, Switch Value, is available to switch from A Value to B Value.

Ensure the menu is in CC Static Mode. See page 137.

Mode	Range	Static	Seq. Edit	Configure
CC	High			

Parameters


A Value	0~rating	A
B Value	0~rating	A
SlewRate	↕ Load module dependent	
SlewRate	↘	
Switch Value	A/B (Parallel Unit only)	



Note

When Parallel Unit is enabled, the A Value & B Value range is the combined rating of all the units used in parallel mode, see page 75.

- Panel Operation 1. Use the Selector knob to highlight A Value.

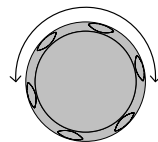


### Single Channel Configuration

LOAD			USB
A Value	0.80	A	CH1
B Value	0.80	A	CH1
SlewRate	0.80	A/uS	
SlewRate	0.80	A/uS	
			80V / 100V
Mode	Range	Static	Seq. Edit
CC	High		Configure

### Parallel Unit Configuration

LOAD			USB
A Value	0.80	A	CH1P
B Value	0.80	A	CH1
SlewRate	0.80	A/uS	
SlewRate	0.80	A/uS	
Switch Value		A	
			80V / 100V
Mode	Range	Static	Seq. Edit
CC	High		Configure

 2. Press the Selector knob to edit the selected value, then turn to increase or decrease the value\*.



OR

Use the number pad to enter a number.

 


A Value

0.80

A

3. Press the selector knob or Enter to confirm selection.
4. Repeat steps 1-3 for the remaining parameters.



**Note**

The last Value (A Value or B Value) that is set becomes the active setting. To swap between A Value and B Value, use the A/B keys on the local load module. This is not applicable to Parallel Unit mode.

For Parallel Unit mode, use the Switch Value parameter to switch between A and B Value.

 
A & B Value have the same Range: High or Low.

\*Press Shift to toggle between coarse and fine adjustment when editing the A Value and B Value parameters. See page 202 for details.


## Set to CR Mode

**Background** The PEL-2000A series load operates in four different modes, Constant Current (CC), Constant Voltage (CV), Constant Resistance (CR) and Constant Power (CP). Constant Resistance mode will maintain a constant resistive load, using variable current and voltage levels.

When a channel is active, the F1 key can be used to switch between each operating mode.



 **Panel Operation** 1. Press the CHAN button and use the selector knob to select a channel.



2. Press F1 until CR mode is displayed in the display panel.



Mode	Range	Dynamic		Configure
CR	Low			



Note

Changing the operating mode will only affect the current (active) channel. Other channels will not be affected by any changes.


## Select CR Range

 **Background** Constant Resistance mode can run in high and low range. Range is dependent on the load module.

Ensure the menu is in CR Mode. See page 141.


Mode	Range	Dynamic		Configure
CR	Low			

- Panel Operation
1. Press the F2 (Range) key repeatedly until High or Low range is selected.



The range will be reflected in both the bottom menu system and the Current Operation Channel Status panel.

CR Static Low	CRL
CR Static High	CRH
CR Dynamic Low	CRDL
CR Dynamic High	CRDH

 

Note

Changing the range will only affect the current (active) channel. Other channels will not be affected by any changes.

All resistance values and slew rates are dependent on Range, i.e., A Value in low range can be different from A Value in high range.

### Select CR Dynamic Mode

 
Background

Constant Resistance mode can be set to dynamic or static mode. Dynamic mode is used to automatically set varying load rates.

Ensure the menu is in CR Mode. See page 141.

Mode	Range	Dynamic		Configure
CR	Low			

- Panel Operation    1. Press F3 until Dynamic Range mode is selected.



Note

Changing from static to dynamic mode will only affect the current (active) channel.

Editing CR Dynamic Parameters

CR levels                      Dynamic Constant Resistance Mode has two operating resistance levels, slew rates and timers.

Slew rates determine the speed at which the load will change from one level to the next.

The timers determine how long the load module/channel will stay at level 1 or level 2. See the CR operating description for details about slew rates and timers, page 67

Ensure the menu is in CR Dynamic Mode. See page 142.

Mode	Range	Dynamic		Configure
CR	Low			


Parameters	Level1	Minimum ~ rating $\Omega$
	Level2	Minimum ~ rating $\Omega$
	SlewRate	↗ Load module dependent
	SlewRate	↘
	Timer1	0.025~30000.0ms
	Timer2	0.025~30000.0ms





Note


When used in parallel mode, the Level1 & Level2 range is the combined rating of all the units used in parallel mode.

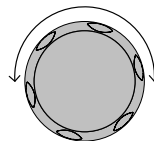- Panel Operation
1. Use the Selector knob to highlight Level1.




Level1			100.000 $\Omega$	CH1
Level2			100.000 $\Omega$	CRDL
SlewRate 			0.40 A/uS	
SlewRate 			0.40 A/uS	
Timer1			0.025 mS	
Timer2			0.025 mS	80V main
Mode	Range	Dynamic		Configure
CR	Low			

 2. Press the Selector knob to edit the selected level, then turn to increase or decrease the value\*.




OR

Use the number pad to enter a number.

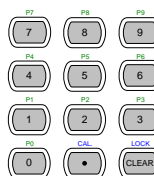

Level1 100.000  $\Omega$

 3. Press the Selector knob or Enter to confirm selection.
4. Repeat steps 1-3 for the remaining parameters.







Note

Level1 & Level2 can be set for both High and Low Range.

\*Press Shift to toggle between coarse and fine adjustment when editing the Level1 and Level2 parameters. See page 202 for details.

## Select CR Static Mode

### Background

 
Constant Resistance mode can be set to dynamic or static mode. Static mode is for manually varying the load for single channel load modules or to set a static load on dual channel modules.

Ensure the menu is in CR Mode. See page 141.

Mode	Range	Dynamic		Configure
CR	Low			

### Panel Operation

1. Press the F3 key until Static mode is selected.



Note

Changing from static to dynamic mode will only affect the current (active) channel.

## Editing CR Static Parameters

### Background

Single channel load modules have two resistance levels, A Value & B Value. Dual channel load modules have only one resistance level per channel, A Value.

When Parallel Unit is enabled, an additional parameter, Switch Value, is available to switch from A Value to B Value.

Ensure the menu is in CR Static Mode. See page 145.


	Mode	Range	Static	Seq. Edit	Configure
	CR	Low			
Parameters	A Value	0~rating	$\Omega$		
	B Value	0~rating	$\Omega$		
	SlewRate	↗ Load module dependent			
	SlewRate	↘			
	Switch Value	A/B (Parallel Unit only)			



Note

When Parallel Unit is enabled, the A Value & B Value range is the combined rating of all the units used in parallel mode.

- Panel Operation
1. Use the Selector knob to highlight A Value.

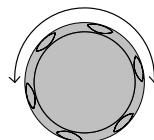


#### Single Channel Configuration

LOAD		USB
A Value	100.000 $\Omega$	CH1
B Value	100.000 $\Omega$	CH2
SlewRate	↗ 0.40 A/uS	
SlewRate	↘ 0.40 A/uS	
Mode	Range	Static
CR	Low	

#### Parallel Unit Configuration


LOAD		USB
A Value	100.000 $\Omega$	CH1P
B Value	100.000 $\Omega$	CH2P
SlewRate	↗ 0.40 A/uS	
SlewRate	↘ 0.40 A/uS	
Switch Value	A	
Mode	Range	Static
CR	Low	

 2. Press the Selector knob to edit A Value / B Value, then turn to increase or decrease the value\*.




OR

Use the number pad to enter a number.

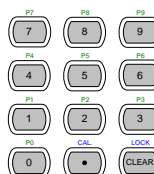

**A Value****100.000****Ω**

 3. Press the selector knob or Enter to confirm selection.



4. Repeat steps 1-3 for B Value (if applicable), rising and falling SlewRate.

**Note**

The last Value (A Value or B Value) that is set becomes the active setting. To swap between A Value and B Value, use the A/B keys on the local load module (not applicable to Parallel Unit mode).

For Parallel Unit mode, use the Switch Value parameter to switch between A and B Value.

A/B Value and rising/falling SlewRate can be set for both High and Low Range.

 
\*Press Shift to toggle between coarse and fine adjustment when editing the A Value and B Value parameters. See page 202 for details.

Select CV Mode


**Background**      The PEL-2000A series electronic load operates in four different modes, Constant Current (CC), Constant Resistance (CR), Constant Voltage (CV), and Constant Power (CP).

CV Mode cannot be used with the Parallel Unit mode.


When a channel is active, the F1 key can be used to switch between each operating mode.



 **Panel Operation**    1. Press the CHAN button and use the selector knob to select a channel.



 2. Press F1 until CV mode is displayed in the display panel.



Changing the operating mode will only affect the current (active) channel. Other channels will not be affected by any changes.

CV mode only operates in High range.

Editing CV Parameters


**Background**      Constant Voltage mode can be set to a maximum limit (Curr Limit). Using the current limit enables limiting the current draw.

When using CV mode on single channel load modules, two voltage levels can be sunk, A Value and B Value. On a dual channel load module, only one voltage level can be sunk per channel: A Value.

Ensure the menu is in CV Mode. See page 148.


	Mode CV		Response Slow		Configure
Parameters	A Value	0~rating	V		
	B Value	0~rating	V		
	Curr Limit	Load module dependent			

**Panel Operation**    1. Use the Selector knob to highlight A Value.

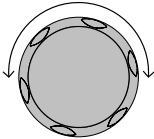




 - Press the Selector knob to edit the selected value, then turn to increase or decrease the value\*.




OR

Use the number pad to enter a number.

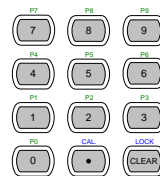

**A Value** 10.00 **V**

 - Press the selector knob or Enter to confirm selection.
- Repeat steps 1-3 for the remaining parameters.



Note

The last Value (A Value or B Value) that is set becomes the active setting. To swap between A Value and B Value, use the A/B keys on the local load module.

When setting the current limit, please ensure that the current limit is within the test device's limits.

\*Press Shift to toggle between coarse and fine adjustment when editing the A Value and B Value parameters. See page 202 for details.

Select CV Response Speed


**Background**      Constant voltage mode has fast and slow response speeds. Quick current changes can induce line voltage, making it more difficult for the PEL load generator to maintain a constant current. In these types of conditions, slow response speed is recommended.

Maximum current range is dependent on the load module type.

Ensure the menu is in CV Mode. See page 148.

Mode		Response		Configure
CV		Slow		

 - Panel Operation**    1. Press F3 (Response) to switch between Fast and Slow response speeds.



Response speed settings will be reflected in the Current Operation Channel Status panel.

CV Slow Response    Slow  
CV Fast Response    Fast



Note

Changing the response speed will only affect the current (active) channel. Other channels will not be affected by any changes.


## Select CP Mode
 
### Background

The PEL-2000A series electronic load operates in four different modes, Constant Current (CC), Constant Resistance (CR), Constant Voltage (CV), and Constant Power (CP).


CP mode cannot be used with the dedicated Parallel Unit mode.

When a channel is active, the F1 key can be used to switch between each operating mode.



### Panel Operation

 1. Press the CHAN button and use the selector knob to select a channel.
2. Press F1 until CP mode is displayed in the display panel.



Mode CP	Range Low			Configure
------------	--------------	--	--	-----------



Changing the operating mode will only affect the current (active) channel. Other channels will not be affected by any changes.



Editing CP Parameters

**Background**      Constant Power mode can be set to have a maximum limit (Curr Limit). Using the current limit enables limiting the current draw.


When using CP mode on a single channel load module, two power levels can be configured, A Value and B Value. On a dual channel load module, only one power level can be configured per channel: A Value.

Ensure the menu is in CP Mode. See page 148.

Mode	Range			
CP	Low			Configure


Parameters	A Value	0~rating	W
	B Value	0~rating	W
	Curr Limit	Load module dependent	

- Panel Operation**    1.    Use the Selector knob to highlight A Value.

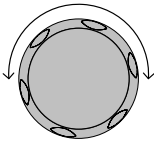



 2. Press the Selector knob to edit the selected value, then turn to increase or decrease the value.




OR

Use the number pad to enter a number.



**A Value** 10.00 **W**

 3. Press the selector knob or Enter to confirm selection.
4. Repeat steps 1-3 for the remaining parameters.



Note

The last Value (A Value or B Value) that is set becomes the active setting. To swap between A Value and B Value, use the A/B keys on the local load module.

When setting the current limit, please ensure that the current limit is within the test device's limits.


## Select CP Range

 **Background** Constant Power mode can run in high and low range. Range is dependent on the load module.

Ensure the menu is in CP Mode. See page 148.

Mode	Range			Configure
CP	Low			

- Panel Operation** 2. Press the F2 (Range) key repeatedly until High or Low range is selected.



The range will be reflected in both the bottom menu system and the Current Operation Channel Status panel.

CP High Range      CPH  
CV Low Range      CPL



Note

Changing the range will only affect the current (active) channel. Other channels will not be affected by any changes.

## Creating a Program Sequence

 
### Background

The PEL-2000A series has a total of 12 different programs and 10 sequences to each program. That totals to 120 different configurations.

Each Sequence in each program uses the settings saved from Memory Data (Memory MXXX). Memory Data contains settings such as the mode and range for each channel. Different Sequences can use the same Memory Data repeatedly. Each Sequence loads all channels at the same time, unless programmed otherwise.

Sequence1	
CH1 M001	Run
CH2 M001	On-Time
CH3 M001	Off-Time
CH4 M001	Short-Time
CH5 M001	P/F-Time
CH6 M001	Short CH1
CH7 M001	~
CH8 M001	Short CH8

Sequences are run sequentially to create a Program. There are 10 Sequences in each Program.



If less than 10 Sequences are desired for a Program, any additional Sequences can be skipped (not run).

Sequence 2 & 3 are skipped.



Parameters	Memory	M001~M120
	Run	Skip-Auto-Manual
	On-Time	0.1 ~ 60.0 S
	Off-Time	Off - 0.1 ~ 60.0 seconds
	P/F Time	Off - 0.1 ~ (On-Time+Off-Time)-0.1
	Short-Time	Off - 0.1 ~ On-Time


 


Note


Before a program can be created, the settings for each sequence for every channel that is to be used in the program must first be pre-configured and saved into Channel Memory (MXXX). See the Save/Recall chapter for further details, page 236.

Sequence  
Settings


1. Press the FUNC key then F1 (Program) to access the Program menu.

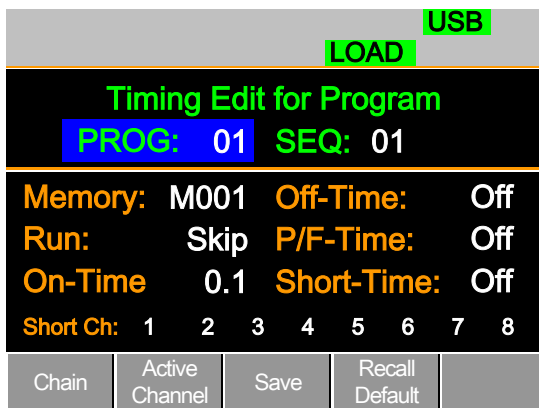

2. Use the Selector Knob to highlight PROG:.

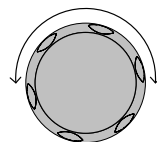

- Press the selector knob to edit PROG:, then turn to select the program number.

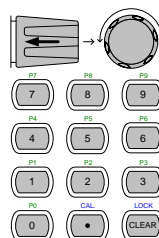


OR

Use the number pad to enter a program number.

Program: 01 ~12

 
- Press Enter or push the selector knob to confirm.



- Repeat steps 2-4 to choose the sequence number (SEQ:).

Sequence: 01 ~ 10

As sequences are executed sequentially, start at SEQ: 01.

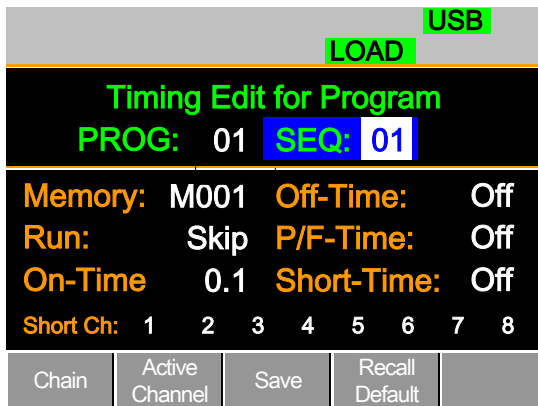

- Repeat steps 2-4 to configure the following for the current Program Sequence:

Memory: M001 ~M120

Choose which Memory data will be used for the sequence. CH1 MXXX ~ CH8 MXXX.

Run: Skip – Auto - Manual

Choose whether to run the sequence in the program automatically, skip the sequence or manually start the sequence.

On-Time: 0.1 ~ 60.0 seconds

Determines how long the sequence will run for (seconds).

Off-Time: Off – 0.1 ~ 60.0 seconds

Sets how long the sequence will stay off for (in seconds) between each sequence. Assuming Short time is not set to OFF, Off-Time will always run after On-Time.

Short Time: Off – 0.1 ~ On-Time (seconds)

Determines how long a short circuit will last (seconds). However the shorting time cannot be longer than the On-time. Short Time will start at the same time as On-time.

P/F Time: Off – 0.1 ~ (On-Time+Off-Time)-0.1 (seconds)

The Pass(P)/Fail(F) Time can be set to 0.1 seconds less than the total test time.  
The total test time is defined as:

On-Time + Off-Time (seconds)

If Go/NoGo is turned on but the pass fail time is off, then Go/NoGo test will continue, but there will not be a specified pass/fail time window.

Short Channel: Off – 1 ~ 8 (CH1~CH8)

Each channel can be individually set to simulate a short circuit (CH1~8) or can have shorting disabled (Off).  
When Short Channel is set to Off, the channel is enabled.

7. Repeat the above steps for all ten sequences for the same (current) program.

Save Sequence

8. Press F3 (Save) to save all the sequence data for the current program.



Note

Note the program data is not yet saved into Setup Memory. If you wish to save the Program to Setup Memory see page 239.

Recall Default

9. To recall the Default Program settings, press F4.



Note

If the Default is recalled, all data will be lost. This does not include the internal Setup Memory. To see the default settings, see page 285.




## Program Chains
 
### Background

On the PEL-2000A, there are up to 12 different programs containing 10 sequences.


If 10 sequences in a Program Sequence prove to be inadequate for testing, the PEL2000A series can chain different programs together, effectively making a larger Program Sequence.


Unlike Program Sequences, Program Chains do not need to be run in numerical order. Up to 12 Program Sequences can be chained together




### Panel operation

 1. Create 1 or more Program Sequences. Page 152
2. If Program Sequences were created in a different session, ensure the programs have been loaded from Setup Memory. Page 239
3. Press the FUNC key, then Program (F1), followed by Chain (F1).




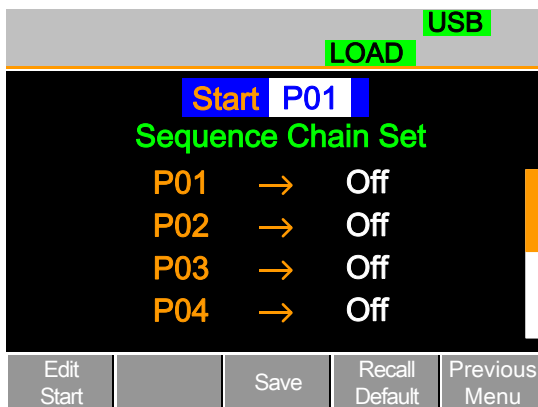

 
4. Use the selector knob to edit Start and confirm which Program Sequence (PXX) will start the program chain. Any Program (P01~P12) can be used to start a Program Chain.



5. Use the Selector knob to scroll down to P01 (Program 1).

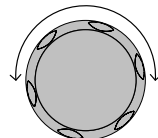

 6. Use the Selector knob to choose the program that will execute after P01 (P02~P12).



OR

Select (Off) to end the Program Chain after (P01).

OR

Select (P01) to execute after P01, this will create a continuously looping Program Chain.

P01 → Off – P01~P12

7. Repeat the above procedure to P02~P12 to complete the program chain.

The Program Chain ends at the first Program (PXX) that is followed by Off. It is possible to create continuously looping program chains.

Save Program Chain

8. Press F3(Save) to save the program chain.

F3



Note

Note the Program Chain data is not yet saved into Setup Memory. If you wish to save the Program Chain to Setup Memory see page 239.

Recall Default

9. To recall the Default program chain, press F4.

F4



Note

If the Default is recalled, Start will revert to P01 and all program sequences will be set to Off.

Previous Menu

10. Press F5 (Previous Menu) to return the Sequence menu.

F5

## Running a Program

Background

 
Once a Program Chain/Program Sequence has been created, it can be executed. As Program Sequences apply to all the channels, any channels that don't need to be active (load off) can be programmed in the Active Channel menu. At Default, all channels are set to (load) Off.

EXT will be shown next to any channels set to external channel control.


Panel operation

1. Create 1 or more Program Sequences. Page 152.
2. Create a Program Chain. Page 161.


3. Press the FUNC key, Program (F1) and Active Channel (F2).



Channel 1 (CH01) will be highlighted. Note CH1 has CH CONT set to External

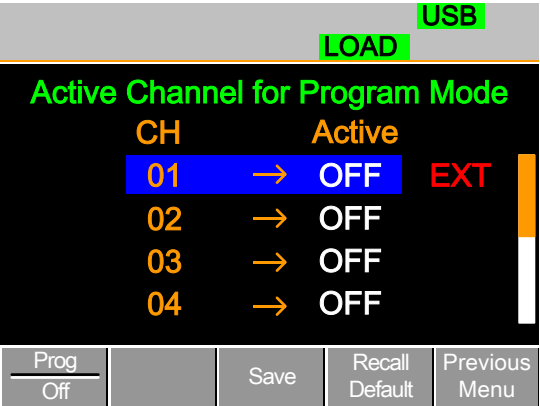


 4. Edit the channel using the Selector knob.



CH 01~08: ON (activate channel) – OFF (not activated)

 5. Press Enter or push the selector knob to confirm the selection.



6. If needed, repeat steps 4-5 for the remainder of the channels.



Note

If all channels are Active OFF, a program cannot be run as there will be no channels active.

Save Program

7. To save press F3.




Recall Default


8. To recall default settings press F4



 
Note

If the Default is recalled, all channels will revert to Active OFF.

Previous Menu 9. Press F5 (Previous Menu) to return to the Sequence menu. 


Turn Program On/Off 10. Press F1 (Prog) to turn On or Off the current Program. 

Pressing F1 will cycle from Program On to Off.




 11. PROG will appear on the mainframe status panel when the program is turned on.



Run Program 12. Press the load key on the mainframe to start the Program. 

13. The Run Program screen appears, and the PROG icon turns orange.

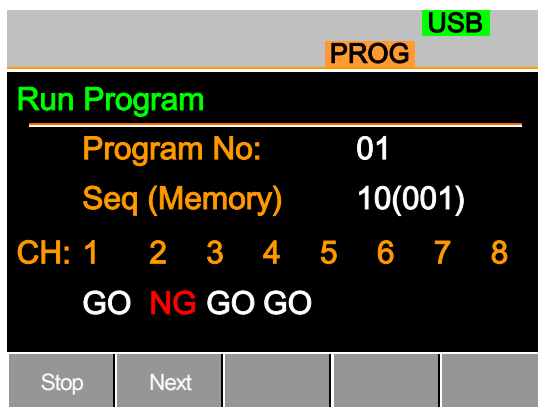


As each sequence or program is completed the screen will update to display the active sequence/program. Notice that if a channel has been set up with Go/NoGo limits, a pass (GO) or fail (NG) will be displayed on the main display as well as the local load module display.

The program icon will become orange when a program has started.



Note

If the Active=OFF for all the channels then “No Active Channel” will be displayed instead of channel numbers.

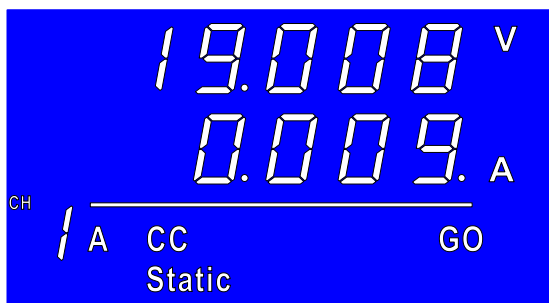


Each active load module will display the output as the program runs.

14. If Run was configured to manual in any of the program sequences, press F2 (Next) to continue the program sequence, otherwise the program will continue automatically.

F2


15. Press F1 (Stop) at any time to abort the program when it is running.

F1

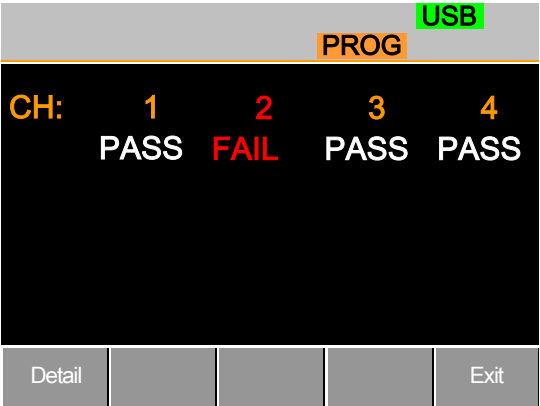


When the program has finished, the physical channels that have run will be displayed, a PASS or FAIL will be displayed if Go/NoGo testing has been set.

16. When the program has finished, press F1 to see any result details.

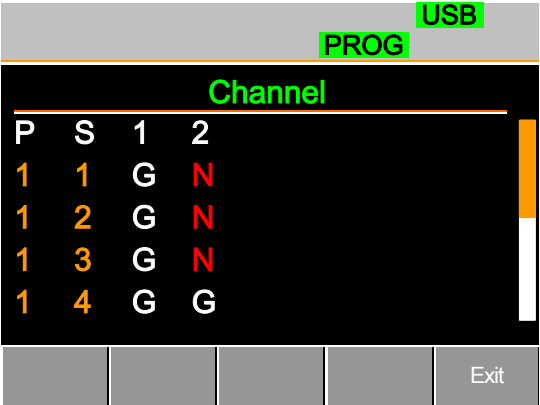

The Program (P) and Sequence (S) numbers for the Program are displayed on the left hand side and the Go/NoGo (G/N) results are displayed on the right hand side for each channel in the program.

Use the Selector knob to scroll down to view the remainder of the list if necessary.

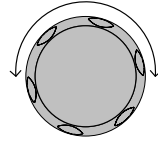

17. Press F5 to exit at any time.



Upon exiting, the previous menu before running the program will load.



## Edit Sequence



**Background** The Sequence function can be configured to create a unique load profile to accurately simulate loads in real time for single or multiple loads. Sequence can only be used with CC static or CR static modes. For details see page 80.


Each Sequence is composed of a number of points with customizable current/resistance, slew rate and duration times. Each sequence can be looped an infinite amount of times. Sequences are only applicable for CC (Static) and CR (Static) modes.




Note


The sequence function should not be confused with program sequences. They are not the same. Program sequences cannot be used with the Sequence function and vice versa.

Parameters	Value	0~rating*1.02 Ω/A
	SlewRate 	Load module dependent
	SlewRate 	
	Duration Time	0.000025~60,000 seconds


- |                 |  |   |
|-----------------|--|---|
| Panel operation | 1. Choose a channel and mode.  | Page 130, 133   |
|                 | 2. Press the CHAN key, F4 (Seq. Edit) to enter the Sequence Edit menu. |  |

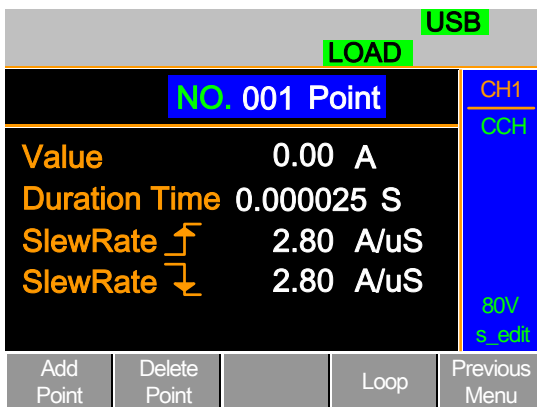

3. Use the Selector knob to highlight Value.

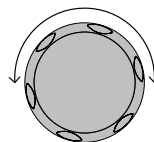

 4. Press the Selector knob to edit the Value, then turn to increase or decrease the value.



OR

5. Use the number pad to enter a number.



**Value** 0.800 A

6. Press the Selector knob or Enter to confirm selection.



7. Repeat for rising and falling Slew Rate and Duration Time.

Add Point

8. To add an extra point after the current point, press Add Point (F1).

F1

---

Range 001~120

---



Note

Add Point will insert a new point directly after the current point. The value of the current/resistance of the inserted point will be the average of the point before and after. All other settings will remain unchanged.

 
Delete Point

9. To delete the current point, press Delete Point (F2).

F2

Edit previous point

10. Use the selector knob to change the current point number.



**001 Point**



Note

The Point number can only be changed if more points have already been added.

Save Sequence

11. Press Save (F3) to save the sequence.

F3



Note

The save icon will only appear after a change has been made in the menu.

Create Sequence Loop

**Background** Sequences can be looped a number of times. The loops can be started at any point in the sequence. The Start of Loop function determines which point will start each repeating loop.

The On End of Seq. function will hold the load current (of the selected sequence) to a designated value until all the other sequences have finished running.

CC Vrange sets the range in CC mode for Sequences.

See page 80 for more details.  
Ensure the menu is in the Seq. Edit menu and that a sequence has been created. See page 169

Add Point	Delete Point		Loop	Previous Menu
-----------	--------------	--	------	---------------


Parameters	Repeat	1~9999/Infinity (0)
	Start of Loop	001~ last point
	On End of Seq.	OFF / 0.1A ~ rating current*1.02
	CC Vrange	High/Low

- Panel operation
1. Press Loop (F4) to enter the Loop menu.




		USB
		LOAD
Repeat	0005 Times	CH1
Start of Loop	001 Point	CCH
On End Of Seq.	OFF	
CC Vrange	High	
		80V
		s_loop
	Save	Previous Menu

2. Use the Selector knob to highlight Repeat.

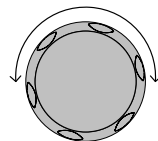

 3. Press the Selector knob to edit Repeat, then turn to increase or decrease the value.



OR


4. Use the number pad to enter a number.

Select 0 to choose infinity.



**Repeat** 0005 **Times**

 5. Press the Selector knob or Enter to confirm selection.



6. Repeat for the remaining parameters.

Save Loop

7. Press Save (F3) to save the loop.



**Channel Duration Time Settings**

**Background**      Each sequence can have the timing duration data of another sequence. For example CH1’s sequence can import the timing duration settings of CH2’s sequence.

This is useful to quickly compare two different loads to the same timing characteristics. See page 80 for more details.

Each channel’s sequence can be turned off by configuring the channel Setting to OFF. If a channel uses the same channel number, i.e. CH 01 → 01, then the duration time settings will not be altered for that channel.

One channel must output a Trigger Sequence Signal via PIN4 of the first frame link connector (master) if a sequence is run. For more details see page 80.

The Trigger In signal is used to start any sequence that has TRIG set to IN. The trigger input signal is input via PIN4 of the second frame link connector (slave).


 
For more details, see page 80.

Any channels with channel control (CH CONT) set to external will be shown on the right side as EXT. See page 197 for details on setting channel control.

Parameter	CH 01~08	OFF ~ maximum channels
	TRIG	OUT
	TRIG	IN


Ensure at least one sequence has been created and saved. Page 169

- Panel operation
1. Press FUNC, then Sequence (F2) to enter the Channel Duration Time menu.

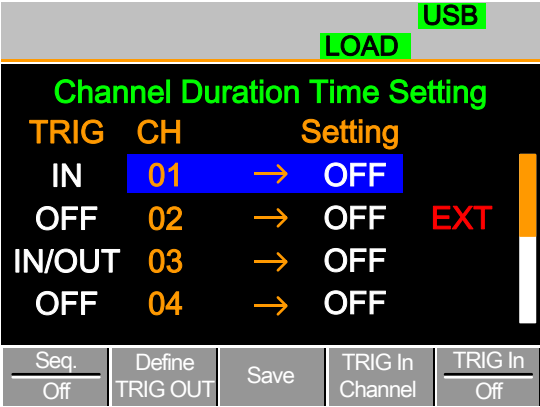


Note CH3 is set to TRIG OUT, whilst CH1 & CH3 are set to TRIG IN. CH2 has no trigger settings and has CH CONT set to external.

2. Use the Selector knob to highlight a channel.

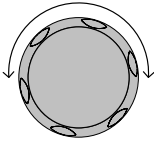

 
3. Press the Selector knob to edit the channel, and then turn to choose which channel's Duration Time Setting to import.



Range Ch 01~08 / OFF

01 → 01

 4. Press the Selector knob or Enter to confirm selection.



Trigger Out  
Channel

5. Press Define TRIG OUT (F2) if you want the currently selected channel to output the Trigger sequence signal.

A grey rectangular button with rounded corners and the text "F2" in white.

One channel must be set as the TRIG OUT channel.

Trigger In  
Channel

6. Press TRIG In Channel (F4) to allow the current sequence to be triggered with the Input trigger.

A grey rectangular button with rounded corners and the text "F4" in white.

7. To turn the Input trigger source on, press Trig In (F5).

A grey rectangular button with rounded corners and the text "F5" in white.

8. Repeat the above steps for any other remaining channels.

9. Press Save (F3) to save the settings.

A grey rectangular button with rounded corners and the text "F3" in white.

## Run Sequence

---

Background

Like Programs, Sequences must be turned "ON" before they can be run.

When running a Sequence, the front panel function keys, number pad, operation keys and selector knob are disabled for the specific channel(s). The load module panel is also disabled (bar the display key) for the specific channel.

Channels that do not have a Sequence can still be edited by changing channels via the CHAN key or by using the local load module.

---

Ensure at least one Sequence has been created and saved.


Page 169



Ensure the Channel Duration Time Settings have also been configured and that no Sequence (CH01~08) that you wish to run are set to OFF.

Page 174


- Panel operation
1. Press FUNC, then Sequence (F2) to enter the Channel Duration Time Setting menu.

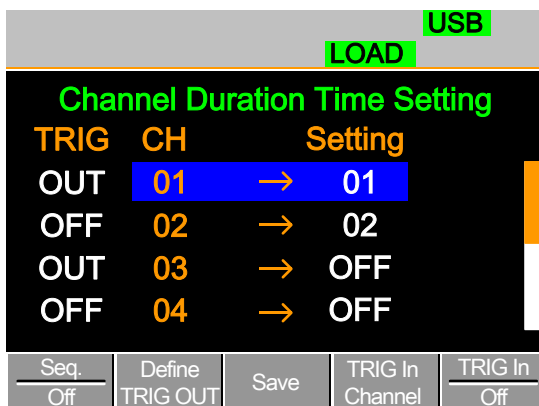


2. Press Seq. (F1) to turn on the Sequences.
3. SEQ will be displayed on the Mainframe Status panel.



 4. Press the LOAD key to run all the Sequences. If a channel has TRIG set to IN, that channel will now wait for a trigger before running.
5. Run SEQ Mode will be displayed on the bottom of the display for the specific channels. On the Mainframe Status panel, SEQ will turn orange.



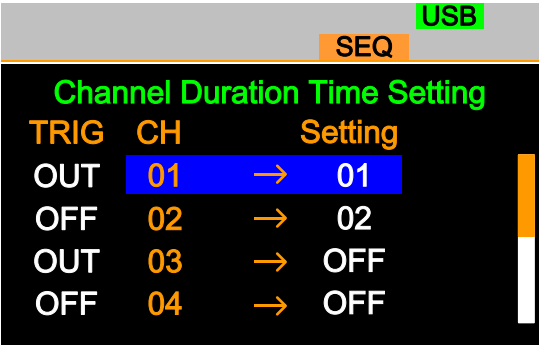

Run SEQ Mode

Stop the load

6. Press the LOAD key again or wait for the Sequence (if not infinitely looped) to end/stop the load.



Turn off SEQ

7. Press Seq. (F1) to turn OFF the Sequence(s) when the load is not running.




Note

All UI keys/dials will be disabled for all channels that run a Sequence, bar the function keys and R/L keys.

# OCP Test Automation

**Background**      The OCP test function creates an automatic test to test the OCP of power supply products.

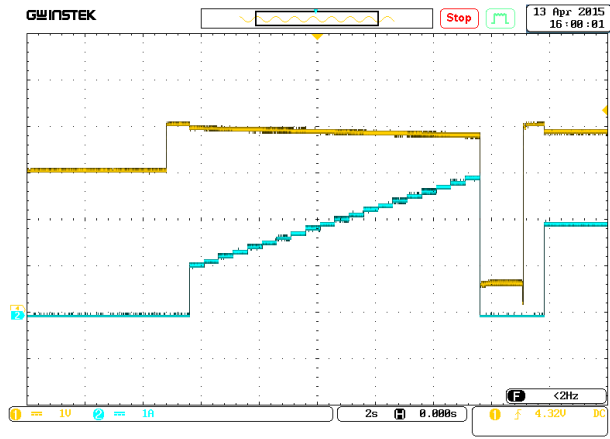

Parameters	Active Channel	Applies the setting to the load channel.
	Range	High(CC Mode High) or Low(CC Mode Low)
	Start Current(Start C)	Starting current value for the test.
	End Current(End C)	The current value that will end the test. The value must be higher than the OCP value of the DUT you are testing. This parameter is used as a fail-safe for if the over current protection of the DUT fails.
	Step Current(Step_C)	Sets the step resolution of the current.

---

Last Current(Last_C)	Sets the final current value after OCP has been tripped. This is the steady-state current draw after the OCP has been tripped.
Step Time(Step_T)	Sets the execution time of each step. (50mS to 1600S)
Delay Time(Delay)	The OCP testing delay time. Sets the how long to delay starting the test after the Load On key has been pressed. (5mS ~ 160mS)
Trig Voltage(Trig_V)	Sets the voltage trigger level needed see whether the power supply OCP has been triggered. When the power supply OCP has been triggered, its voltage output will reset. The voltage trigger level is used to test to see if the voltage output has been reset.

---


**Note**

This mode can only be used under CC mode.


**Panel operation**

1. Press the FUNC key, F4 (OCP) to enter the OCP Test Automation menu.




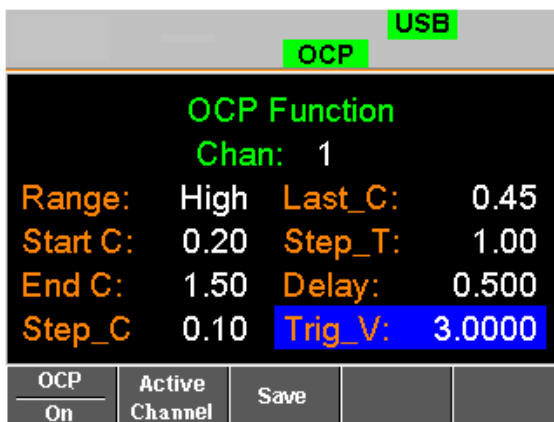

2. Use the Selector knob to highlight the parameter you want to edit.

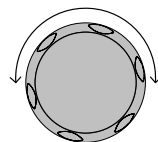


 3. Press the Selector knob to edit the parameter, then turn to increase or decrease the value.




OR

Use the number pad to enter a number.

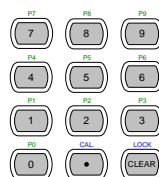

 
4. Press the Selector knob or Enter to confirm selection.
5. Repeat steps 2 -4 for all the parameters.



Save the OCP  
Test Automation  
Settings


6. Press F3 (Save) to save the OPC Test Automation settings.




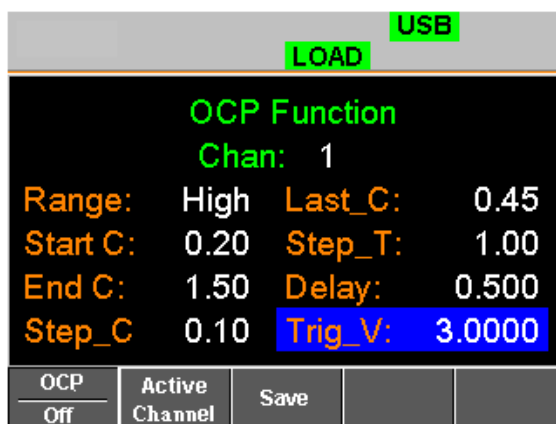


Select Active Channel

7. To select the load channels for the test, press Active Channel (F2).

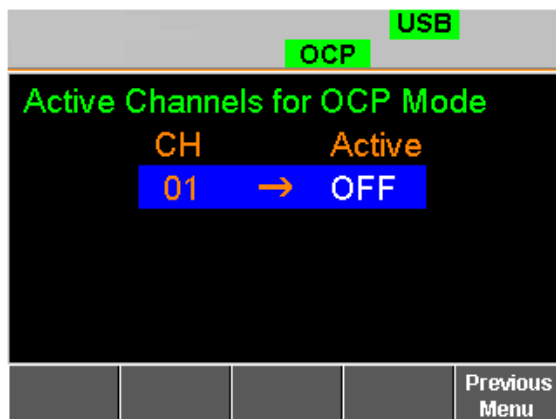

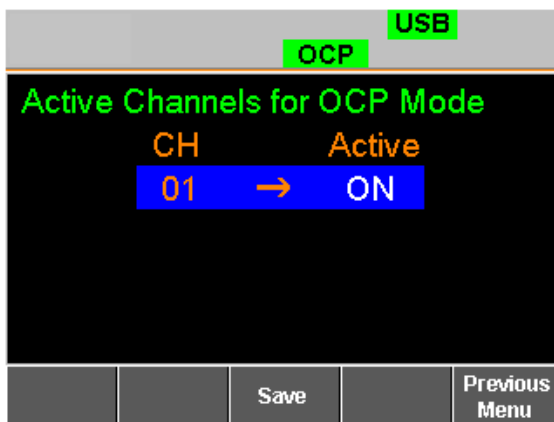

 8. Use the selector knob to Enter key to turn the Active value to ON.



Save the OCP  
Test Automation  
Channel


9. Press Save (F3) to save the OCP test automation channel.



10. Press Previous Menu (F5) to return to the OCP Test Automation menu.



11. Press OCP (F1) to turn OCP to ON.

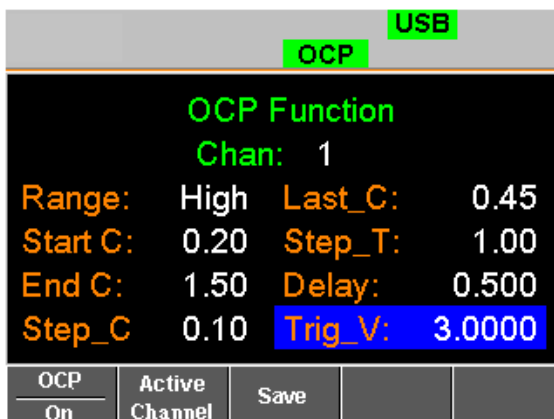

Save the OCP  
Test Automation  
Parameters

12. Press Save (F3) to save the OCP  
test automation parameters.

**F3**


Start the OCP  
Test Automation

13. Press the Load key to start to  
OCP Test Automation.

**LOAD ON / OFF**

Results

14. Test Results

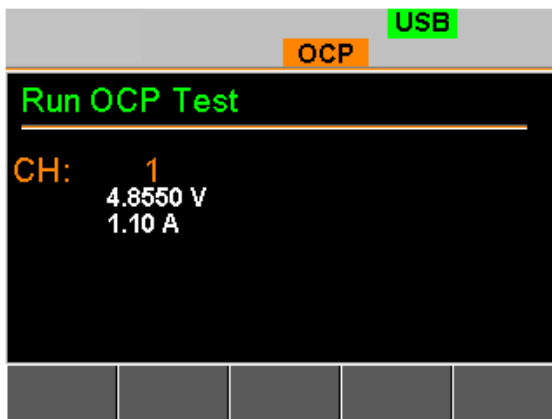

Voltage Reading: The voltage of the DUT before  
the OCP was triggered.

Current Reading: The current of the DUT before  
the OCP was triggered.




**Note**

In addition to the setting the OCP test parameters as  
described above, the VON voltage settings must also  
be set according to the output characteristics of the  
DUT.



An OCP Test Automation example using actual current and voltage waveforms.

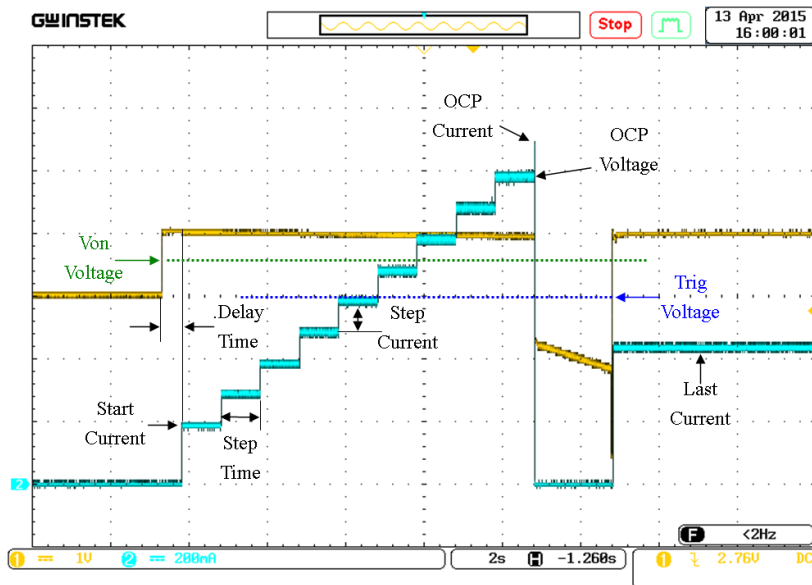

# Channel Configuration

The Channel Configuration chapter describes the configuration options for individual channels. Any configuration settings that are changed only apply to the current channel, other channels will not be changed.

---


 
<b>Channel Configuration .....</b>	<b>186</b>
Accessing the Configuration Menu.....	187
Setting (OCP/OVP/OPP/UVF) .....	188
Protection Clear .....	191
Setting the CC Voltage Range .....	192
Adjusting the Von Voltage and Latch..	194
Configuring the Short key.....	195
Configuring Channel Control.....	197
Configuring the Independent Setting .	198
Configuring the Load Delay Time .....	200
Configuring Step Resolution .....	202
Configuring Response Time .....	206
Go/NoGo .....	208
Parallel Unit.....	211
View Parallel Information .....	213

---

## Accessing the Configuration Menu

**Background** The configuration menu is used to access instrument settings and properties as well as set the protection levels for each channel.

- Panel operation**
1. Select the channel to be configured by pressing the CHAN key and using the Selector knob.
  2. Press the F5 (Configure) key to enter the configuration (Protection) menu.

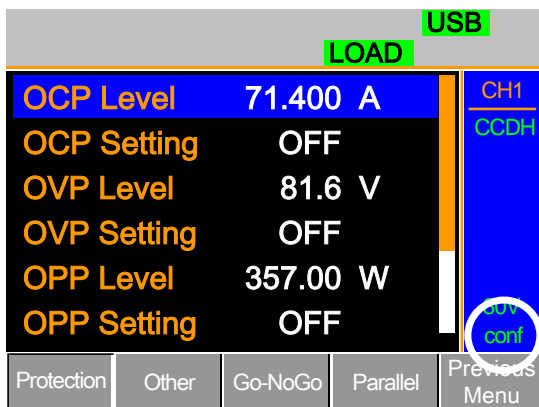

Setting (OCP/OVP/OPP/UVP)

**Background** Over Protection is used to set the voltage, current or power limit. In the event that the current, voltage or power exceeds the over protection settings, the load module alarm will show an error message and beep an alarm.

When tripped, Under Voltage Protection (UVP) will turn off the load. UVP trips when the load voltage drops below a set limit.


Only when the protection settings are set to On (XXP Setting -On) will the protection modes be active.

All protection settings can be set to 2% higher than specification rating.


Parameters	OCP Level	0~Rating A +2%
	OCP Setting	ON/OFF/Clear
	OVP Level	0~RatingV+2%
	OVP Setting	ON/OFF/Clear
	OPP Level	0~RatingW+2%
	OPP Setting	ON/OFF/Clear
	UVP Level	0~RatingV+2%
	UVP Setting	Clear

**Panel operation** Ensure the menu is the configuration menu. See page 186.


Protection	Other	Go-NoGo	Parallel	Previous Menu
------------	-------	---------	----------	---------------

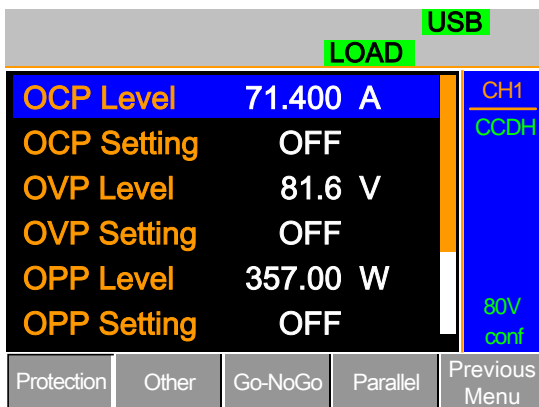

1. Use the Selector knob to highlight OCP Level.

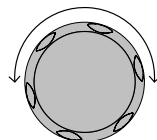

 2. Press the Selector knob to edit the selected level, then turn to increase or decrease the value.




OR

3. Use the number pad to enter a number.




**OCP Level** 71.400 A

 
4. Press the Selector knob or Enter to confirm selection.



5. Use the Selector knob to highlight OCP Setting.

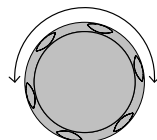

 6. Use the selector knob to turn ON, OFF or CLEAR the OCP Setting.



7. Repeat steps 1-5 for :  
 OCP Level  
 OVP Level  
 OVP Setting  
 OPP Level  
 OPP Setting  
 UVP Level  
 UVP Setting

---

**Clearing an Alarm** When any of the protection settings are tripped, Alarm will be shown on the Mainframe Status Panel and an alarm tone will sound by default.



On the local load module, the protection setting that has been tripped will be displayed.

OCP	<i>0</i>	<i>C</i>	<i>P</i>
OVP	<i>0</i>	<i>U</i>	<i>P</i>
REV*	<i>r</i>	<i>E</i>	<i>U - U</i>
OPP	<i>0</i>	<i>P</i>	<i>P</i>
OTP*	<i>0</i>	<i>t</i>	<i>P</i>
CPP*	<i>C</i>	<i>P</i>	<i>P</i>
UVP	<i>U</i>	<i>U</i>	<i>P</i>

8. Turn the load off by pressing the Load key and turn off the load input.
9. Change the XXP Setting to Clear to clear the alarm.



## OCP Setting

## Clear



Note

\*REV, OTP and CPP cannot be cleared using this method, the Protection Clear function must be used instead, see page 191.

See pages 62 and 274 to output alarms via the Go/NoGo output terminal.

The configuration settings only apply to the current channel.

## Protection Clear

### Background

When any of the protection circuits have been tripped, the Protection Clear function can be used to reset the alarms.

Alarm will be shown on the Mainframe Status Panel and an alarm tone will sound by default when any of the protection settings are tripped.

On the local load module, the protection setting that has been tripped will be displayed.

Example: Reverse voltage protection




OCP	0	C	P
OVP	0	U	P
REV	r	E	U _ U
OPP	0	P	P
OTP	0	t	P

CPP    **[**    **P**    **P**  
UVP    **U**    **U**    **P**

Panel operation    Ensure the menu is in the configuration menu. See page 186.




- 1. Turn the load off by pressing the load key if necessary.
- 2. Use the selector knob to scroll down to Protection Clear.

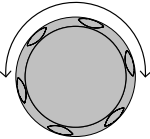

**Protection Clear**    **All**    **[Blue Box]**

 - 3. Press the Selector knob or Enter to clear all.



Note    The configuration settings only apply to the current channel, other channels will not be affected.

Setting the CC Voltage Range

Background    The Constant Current Voltage range can be set to high or low.

Parameter    CC Vrange    High/Low


Panel operation    Ensure the menu is in the configuration menu. See page 186.




- 1. Press the F2(Other) key to enter the Other menu.






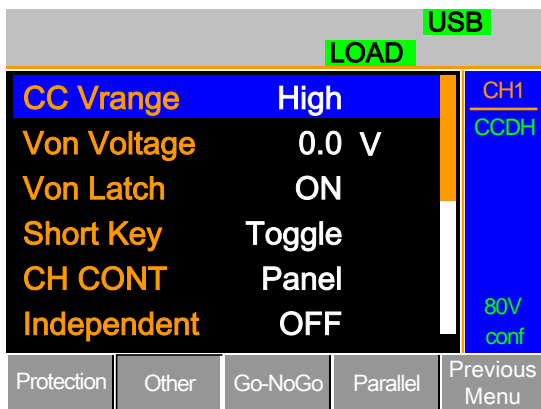

2. Use the Selector knob to highlight CC Vrange.

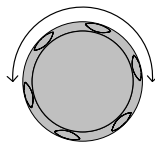

 3. Press the Selector knob to edit CC Vrange, then turn to increase or decrease the range.



**CC Vrange**

**High**

4. Press the Selector knob or Enter to confirm selection.



Note

The configuration settings only apply to the current channel.

## Adjusting the Von Voltage and Latch

**Background** The Von Voltage is the voltage point at which the load module will start to sink current. When Von latch is set to ON, the load will continue to sink current after being tripped, even if the voltage drops below the Von Voltage level. The step resolution of Von Voltage is load module dependent.

**Parameters** Von Voltage 0.0~Rating volts


Von Latch ON/OFF

**Panel operation** Ensure the menu is in the configuration menu. See page 186.




1. Press the F2(Other) key to enter the Other menu.


F2

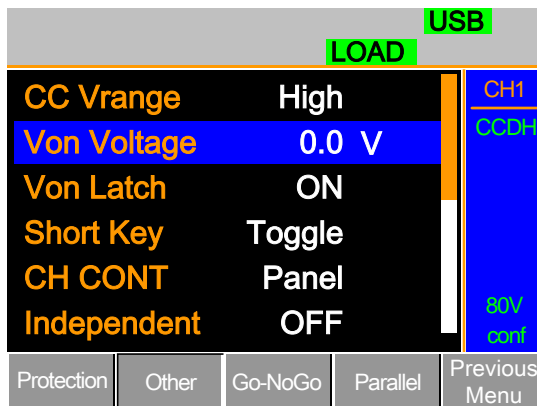

2. Use the Selector knob to highlight Von Voltage.

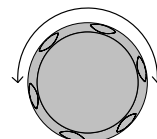


 3. Press the Selector knob to edit the selected value, then turn to increase or decrease the value.




OR

Use the number pad to enter a number.

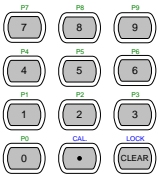

**Von Voltage**      **0.0 V**

 4. Press the Selector knob or Enter to confirm selection.
5. Repeat steps 3 to 5 to turn Von Latch ON or OFF



For details about Von and Latch settings please see page 89.



Note

The configuration settings only apply to the current channel, other channels will not be affected.

## Configuring the Short key

**Background**      The Short Key is used to simulate a short circuit. The Short key can be configured to toggle (press SHORT on the load module to toggle ON or OFF) or to Hold (the SHORT key is held to short the load).


Parameter	Short Key	Hold/Toggle
-----------	-----------	-------------

Panel operation	Ensure the menu is in the configuration menu. See page 186.
-----------------	---




1. Press the F2(Other) key to enter the Other menu.




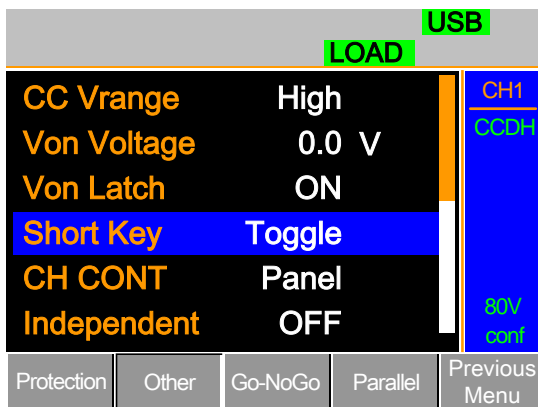

2. Use the Selector knob to highlight Short Key.

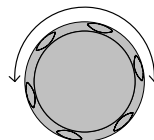

 
3. Press the Selector knob to edit the selected setting, turn to change the setting.



**Short Key**

**Toggle**

 4. Press the Selector knob or Enter to confirm selection.



Note

The short key can only be used when the load is on.

Configuring Channel Control


**Background** When Channel Control (CH CONT) is set to External, it will disable editing the active channel load. Instrument buttons and knobs can still be used to access the menu for the active channel or to edit other channels that do not have channel control active. This prevents settings on the active channel from being changed on the local machine. See pages 59 & 93 for details.

Parameter	CH CONT	Panel/External
-----------	---------	----------------


**Panel operation** Ensure the menu is in the configuration menu. See page 186.

Protection	Other	Go-NoGo	Parallel	Previous Menu
------------	-------	---------	----------	---------------


1. Press the F2(Other) key to enter the Other menu.

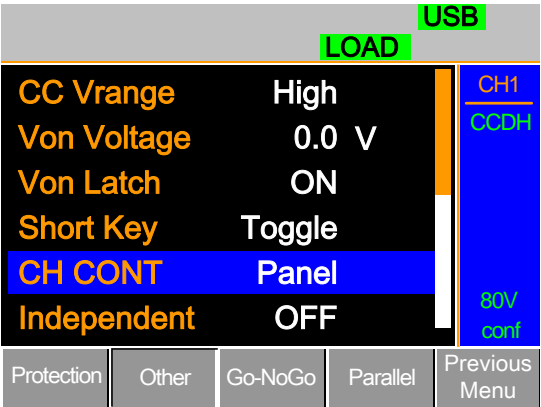

2. Use the Selector knob to highlight CH CONT.

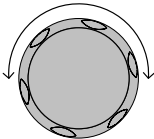


 3. Press the Selector knob to edit the selected setting, turn to change the setting from Panel to External.



**CH CONT** External

 4. Press the Selector knob or Enter to confirm selection.



Channel control is now activated. To turn Channel Control off, CH CONT must be set to Panel again. When Channel Control is active, EXT will be displayed on the side panel for the active channel.



Note

Channel Control can only be activated on the active channel; other channels will not be affected.

## Configuring the Independent Setting

### Background


The Independent setting allows a channel to be load independent from the mainframe. What this means is that a load module with Independent set to ON can only load from the local load module. If the LOAD ON/OFF key is pressed from the mainframe, the channel with Independent set to ON will be unaffected by the mainframe, except when running a program.

Parameter	Independent	ON/ OFF
-----------	-------------	---------


Panel operation    Ensure the menu is in the configuration menu. See page 186.

Protection	Other	Go-NoGo	Parallel	Previous Menu
------------	-------	---------	----------	---------------


1. Press the F2(Other) key to enter the Other menu.

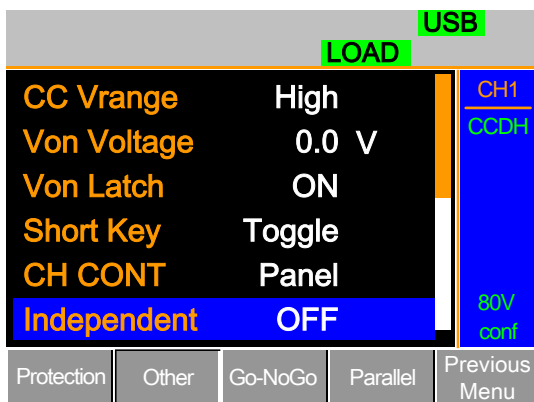

2. Use the Selector knob to highlight Independent.

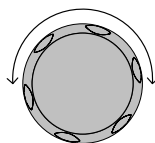


 3. Press the Selector knob to edit the selected setting, turn to change the setting.



**Independent**    OFF

 4. Press the Selector knob or Enter to confirm selection.





Note

When a channel has been set to independent, an asterisk(\*) will be shown next to the channel number indicator in the Current Operation Channel Status panel.

The configuration settings only apply to the current channel, other channels will not be affected.



## Configuring the Load Delay Time

Background	The mainframe can delay loading a channel by up to 10 seconds. However the Delay Time is only applicable for manual loading. Delay Time is not applicable to Programs or Sequences.
------------	---

Parameter	Load D-Time 0~10 S
-----------	--------------------


Panel operation	Ensure the menu is the configuration menu. See page 186.
-----------------	--



1. Press the F2(Other) key to enter the Other menu.






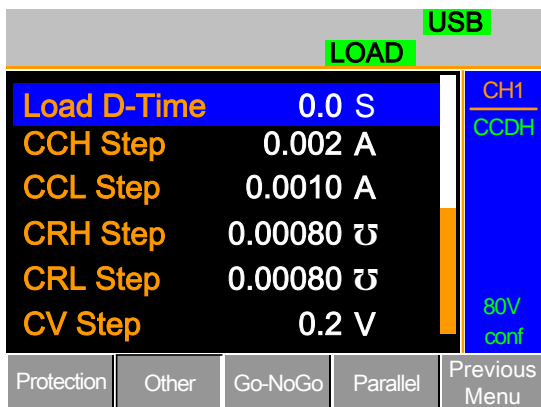


- Use the Selector knob to highlight Load D-Time.

Note: Load D-Time is below Independent, off-screen.

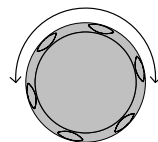

 - Press the Selector knob to edit the selected setting, turn to change the setting.



OR


Use the number pad to enter a number.



**Load D-Time**

 **0.0 S**

- Press the Selector knob or Enter to confirm selection.



Note

The Delay Time only applies to the current channel; other channels will not be affected.

Delay time only applies when the load is manually turned on or during start up with the Auto Load On setting (page 217).

## Configuring Step Resolution

**Background** The CC, CV and CR step resolution settings can be edited in the configuration menu. These step resolution settings directly correspond to the step resolution of the coarse adjustment when setting the CC, CR and CV parameters.

The minimum and maximum step resolution that can be set for each channel is dependent on the load module. For more information on step resolution see page 89.

 
Step Resolution		Minimum*	Maximum*	Unit
PEL-2020A	CCH Step	HR/20000	HR/2	Amperes A
	CCL Step	LR/20000	LR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens $\Omega$
	CRL Step	LR/40000	LR/2	Siemens $\Omega$
	CVH Step	HR/40000	HR/2	Voltage V
	CVL Step	LR/40000	HR/2	Voltage V
	CPH Step	HR/10000	HR/2	Watt W
	CPL Step	LR/10000	LR/2	Watt W
PEL-2030A (L)	CC Step	R/40000	LR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens $\Omega$
	CRL Step	LR/40000	LR/2	Siemens $\Omega$
	CVH Step	HR/40000	HR/2	Voltage V
	CVL Step	LR/40000	HR/2	Voltage V
	CPH Step	HR/30000	HR/2	Watt W
	CPL Step	LR/30000	LR/2	Watt W

PEL-2030A (R)	CCH Step	HR/40000	HR/2	Amperes A
	CCL Step	LR/40000	LR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens Ū
	CRL Step	LR/40000	LR/2	Siemens Ū
	CVH Step	HR/40000	HR/2	Voltage V
	CVL Step	HR/40000	HR/2	Voltage V
	CPH Step	HR/25000	HR/2	Watt W
	CPL Step	LR/25000	LR/2	Watt W
PEL-2040A	CCH Step	HR/35000	HR/2	Amperes A
	CCL Step	LR/35000	LR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens Ū
	CRL Step	LR/40000	LR/2	Siemens Ū
	CVH Step	HR/40000	HR/2	Voltage V
	CVL Step	LR/40000	HR/2	Voltage V
	CPH Step	HR/35000	HR/2	Watt W
	CPL Step	LR/35000	LR/2	Watt W
PEL-2041A	CCH Step	HR/20000	HR/2	Amperes A
	CCL Step	LR/20000	LR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens Ū
	CRL Step	LR/40000	LR/2	Siemens Ū
	CVH Step	HR/50000	HR/2	Voltage V
	CVL Step	LR/50000	HR/2	Voltage V
	CPH Step	HR/35000	HR/2	Watt W
	CPL Step	LR/35000	LR/2	Watt W
* HR = High range, LR = Low range				


**Note**

Use the Shift key to toggle between coarse and fine adjustment mode when editing the CC, CR and CV values with the Selector knob on the main display. The fine adjustment resolution varies between the function and load module used.

Coarse mode:




Fine mode:

 

Panel operation    Ensure the menu is the configuration menu. See page 186.


Protection	Other	Go-NoGo	Parallel	Previous Menu
------------	-------	---------	----------	---------------

1. Press the F2(Other) key to enter the Other menu.

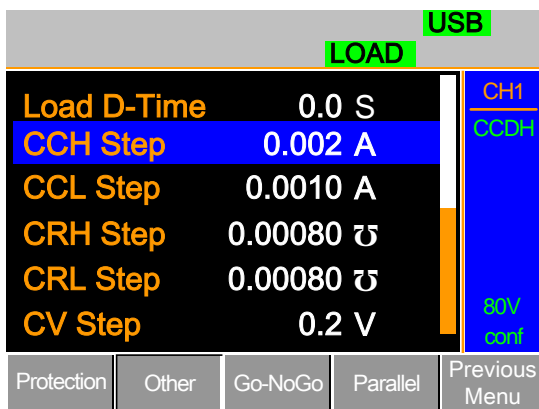


2. Use the Selector knob to scroll down to highlight CCH Step.

Note: CCH Step is off-screen when entering Other menu.

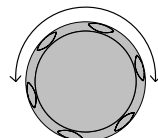

 3. Press the Selector knob to edit the selected setting, turn to change the setting.




OR

Use the number pad to enter a number.



**CCH Step**    **0.002 A**

 - Press the Selector knob or Enter to confirm selection.



- Repeat steps 2-4 to edit the step resolution of:

CCL Step

CRH Step

CRL Step

CV Step



Note

The Step resolution settings only apply to the active channel, other channels will not be affected.

## Configuring Response Time

Background	The Response time setting is used in CV mode to limit current draw. The Response setting sets the bandwidth of the load generator to Fast (1MHz) or as Normal (100kHz).
------------	---


Parameters	Response	Normal, Fast
------------	----------	--------------

Panel operation	Ensure the menu is the configuration menu. See page 186.
-----------------	--




- Press the F2(Other) key to enter the Other menu.



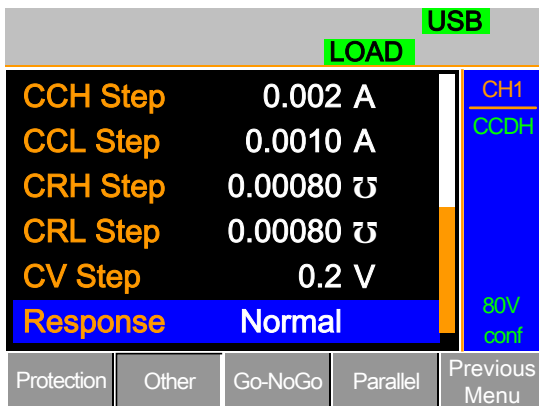


- Use the Selector knob to scroll down to highlight Response.

Note: Response is off-screen when entering Other menu.

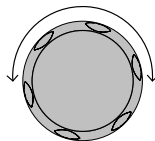


 - Press the Selector knob to edit the selected setting, turn to change the setting.



**Response**      **Normal**

 - Press the Selector knob or Enter to confirm selection.



Note

The Response settings only apply to the active channel, other channels will not be affected.

Go/NoGo

**Background**      Go/NoGo mode is used to set threshold limits. When a load is within the limit(s) it is considered to be “Go”, when the load has exceeded the limit it is considered to be “NoGo”.

Go/NoGo limits can be set as either absolute values (Entry Mode set to “Value”) or as a percentage offset from a nominal (Center) value (Entry Mode set to “Percent”).

Go/NoGo can be used in both high and low ranges, as well as CC, CV, and CR modes. The Go/NoGo status can be read using the rear Go/NoGo output.

A delay time can also be imposed for up to 1 second.



Note

Any Go/NoGo configuration only applies to the current channel with the same mode and range.

Parameters	Value	Percent
CC Mode	High: V	High: %
CR Mode	Low: V	Low: %
		Center: V
CV Mode	High: A	High: %
CP Modde	Low: A	Low: %
		Center: A
Delay Time	0.0~1.0 seconds	

**Panel Operation**      Ensure the menu is in the Configuration menu. See page186.

 


Choose Absolute/ 1. Press (F3) Go-NoGo to access the Percentage limits Go/NoGo menu.





2. Use the selector knob to edit Entry Mode.
3. Choose Value for absolute limits or Percent for percentage offset limits.



**Entry Mode**      **Value**



Or

**Entry Mode**      **Percent**



4. The menu changes according to the selection.

Value


Percent

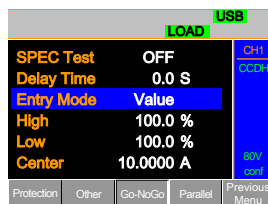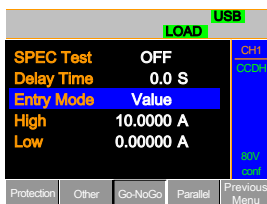

 5. Use the Selector knob and number pad to edit Delay time, High, Low and Center (Percent mode only).

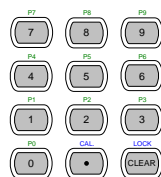


 6. Press the selector knob or Enter to confirm each value.



Turn Go/NoGo  
On/Off

 7. Use the Selector knob to edit Spec Test.



8. Choose ON to turn on  
Go/NoGo.

**SPEC test**      **ON**

9. Choose OFF to turn off  
Go/NoGo.

**SPEC test**      **OFF**

When SPEC test is set to ON, SPEC  
will be displayed in the Current  
Operation Channel Status panel.



Parallel Unit

**Background**      The Parallel Unit Configuration menu allows load modules of the same type and rating to be configured as a single unit when used in parallel. Up to 4 load modules can be used in this mode.

Operating the PEL-2000A load modules in Parallel Unit mode is almost identical to using the load modules separately. The only difference is that the channel configuration only needs to be setup for channel 1 and not individually for each channel.

There are two mode types: Para and Sync. The Para setting allows the all the parallelized load modules to be operated as a single large load module. Sync mode allows the settings of a single unit to be synchronized across all the other parallelized load modules.

The Display Mode will determine which parameters are displayed on the local load modules.



Note

Only CC or CR mode can be used in parallel mode.

Ensure the same firmware used for both units.

Parameters	Parallel Unit	2/3/4/OFF
	Parallel Mode	Para/Sync
	Display Mode	V,I / ,V,W / I,W / S


- Panel Operation**
1. Ensure channel 1 is selected as the active channel. Page 132
  2. Ensure the menu is in the Configuration menu. See page186.

Protection	Other	Go-NoGo	Parallel	Previous Menu
------------	-------	---------	----------	---------------


Parallel Setup

- Press (F4) Parallel to access the Parallel menu.

F4

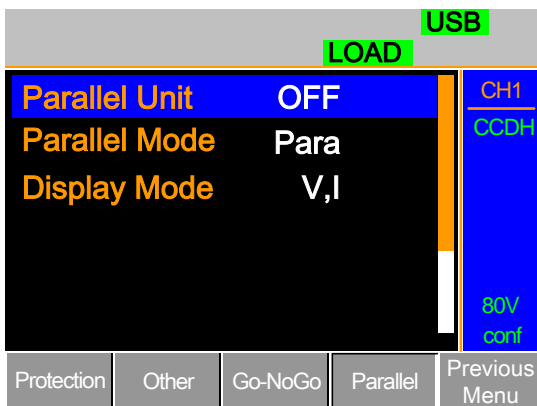

 - Use the Selector knob to change Parallel Unit from the OFF setting to the number of parallel units.




**Parallel Unit 2**

- Press the selector knob or Enter to confirm.



Parallel Mode

 
- To change the type of mode, use the Selector knob to edit Parallel Mode.
- Choose Para to operate the units as a single large load module, or choose Sync to synchronize the load settings across each parallel unit.



**Parallel Mode Para**

- Display Mode
8.

 Use the selector knob to change the display settings on the local load modules.



9.

Choose from V, I / V, W / I, W or S.

Display Mode V,I

When Para Unit is active, an indicator will be displayed on the screen. The indicator depends on the Parallel Mode. P will be displayed for Para Mode and S will be displayed for Sync Mode.


CHXP	Para Mode
CHXS	Sync Mode

 

The PEL-2000A is now ready to operate in Parallel Mode.

- Turn Parallel Mode Off
10.

 To disable Parallel Mode, use the selector knob to change Para Unit to OFF.





Parallel Unit OFF

View Parallel Information

Background	The overall parallel settings can be viewed in the Function menu.
------------	---



Parameter Description	Main Ch	The channel number used for Parallel Unit mode
	Number	The number of mainframes used.

Mode	Mode and Range. CCL, CCH, CRL, CRH
VRange	High, Low
L1,L2	Level 1, Level 2 settings (Dynamic mode only)
SR 	Rising slew rate settings
SR 	Rising slew rate settings
T1	Timer 1 (Dynamic mode only)
T2	Timer 2 (Dynamic mode only)


- Panel Operation 1. Press the FUNC key then F3 (Parallel) to access the viewable Parallel settings.



The current Parallel Unit mode settings are shown below.

				USB
				LOAD
Main Ch:	1	L1:	0.00000	
Number:	1	L2:	0.00000	
Mode:	CCH	SR 	2.80000	
VRange	High	SR 	2.80000	
		T1:	0.00003	
		T2:	0.00003	

- Parallel Mode 2. To exit the parallel settings, press any one of the System keys (CHAN, FUNC, FILE or HELP)

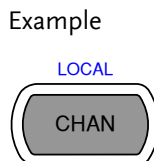

# Mainframe Configuration

The Mainframe Configuration chapter describes configuration settings that apply to all channels and general interface settings.

---

 
<b>Mainframe Configuration .....</b>	<b>215</b>
Accessing System Information .....	216
Accessing the Load Menu .....	217
Adjusting the Speaker .....	218
Adjusting the display settings .....	219
Adjusting the Frame Control .....	221
Adjusting the Knob Control Type.....	223
Configuring Alarm Sound.....	224
Configuring Go/NoGo Alarm Sound ..	225
Adjusting Slave Knob Settings .....	227
View Language Settings .....	229


---

Accessing System Information

Background	The System Information displays the mainframe and load module(s) serial numbers.
Parameters	<p>MainFrame Ver: Mainframe firmware version and date (month/day).</p> <p>PEL-200X SN: Mainframe Serial number.</p> <p>SlotX(Y)Ver: The version number of the Xth load module occupying the Xth slot with channel number Y.</p> <p>PEL-20XX SN: The serial number and module model of the Xth load module</p> <p>Y designates the first channel of each installed load module. For example if two dual channel load modules are installed, then Ch1&amp;3 will be used for the firmware and serial number.</p>

- Panel operation
1. Press the Shift Key then the Help key to access the Utility menu/System Info menu.



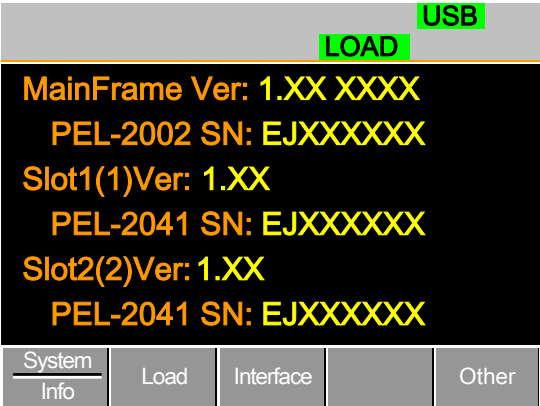



Accessing the Load Menu



**Background**      The PEL series is able to automatically start loading from the last program or load setting.

If Auto Load On is set to Load, the last load setup used before the machine was reset will automatically start to load upon startup.


If Program is set as the Auto Load On configuration, the last program executed will start upon the next start up.

Parameters	Auto Load	ON/OFF
	Auto Load On	Load/Program

- Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu.
  2. Press F2 (Load).

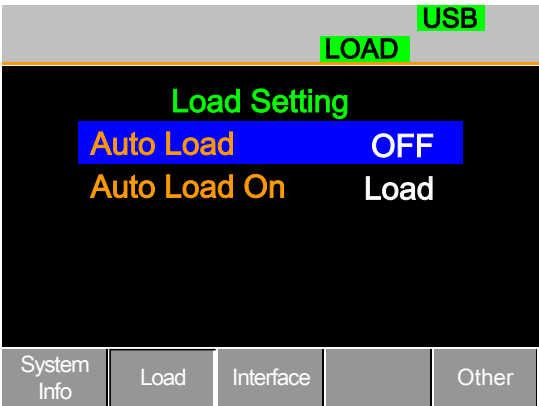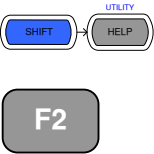


 
3. Press the Selector knob, then turn to choose Auto Load.



4.

 Press the Selector knob or Enter to confirm selection.

 OR 
5.

Scroll to Auto Load On and choose Load or Program for the next time the PEL-2000A starts up.

Adjusting the Speaker

Background

The PEL series has an internal speaker for both the mainframe and load modules. The speaker function turns On/Off the sound for the UI (key presses and scrolling). The speaker setting will not alter the sound for protection alarms or Go/NoGo alarms.

 

Parameter

Speaker ON/OFF


- Panel operation


1.

Press the Shift Key then the Help key to access the Utility menu.


 
2.

Press F5 (Other Menu).




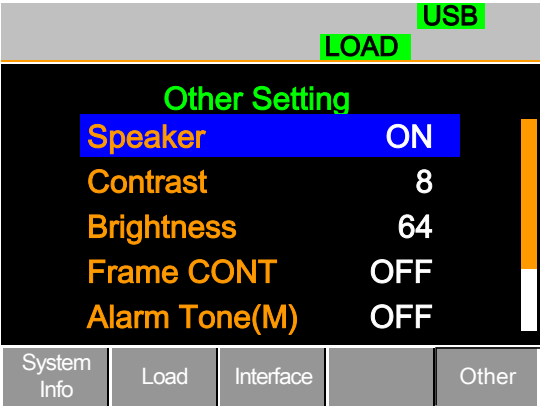

- Use the Selector knob to highlight Speaker.

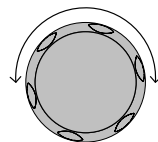

 - Press the Selector knob to edit Speaker, then turn to change from On to Off and vice versa.



**Speaker**

**ON**

- Press the Selector knob or Enter to confirm selection.

 


## Adjusting the Display Settings

**Background** The PEL series has a TFT LCD display. The display brightness and contrast can be controlled via the utility menu.


<b>Parameters</b>	<b>Brightness</b>	50~90	50(low)	90(bright)
	<b>Contrast</b>	3~13	3(low)	13(high)

- Press the Shift Key then the Help key to access the Utility menu.




- Press F5 (Other Menu).




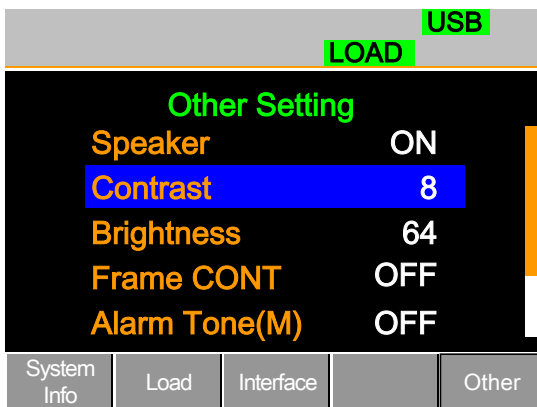

3. Use the Selector knob to highlight Contrast.

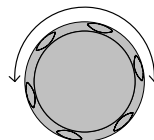


 4. Press the Selector knob to edit contrast, then turn to increase or decrease the value.



**Contrast** 8

 5. Press the Selector knob or Enter to confirm selection.





6. Repeat steps 3-5 for the Brightness.

Adjusting the Frame Control


**Background**      Frame control is used to control a number of different frame linked mainframes (slaves) with a master mainframe. For information on frame control, frame control interface and connection see pages 57 & 271.

**Note:** When using frame control, ensure the same firmware is installed in both master and slave units.


 
- Panel operation**
- 1. Connect the mainframes using a frame link connection. Page 57.
  - 2. On the master mainframe, press the Shift Key then the Help key to access the Utility menu.
  - 3. Press F5 (Other Menu).

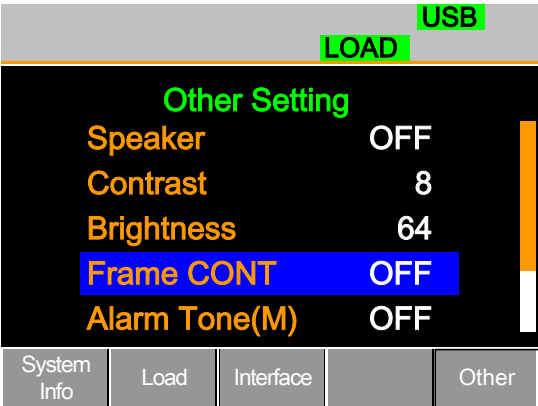

4. Use the Selector knob to highlight Frame CONT.

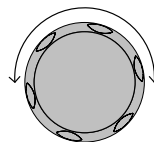

 5. Press the Selector knob to edit, then turn to turn Frame CONT (frame control) ON or OFF.

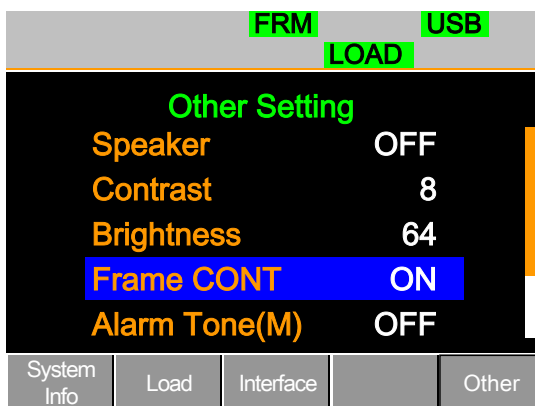

When Frame CONT is set to ON the mainframe will display FRM (Master) or FRS (Slave) on the top of the display.

6. Repeat the above steps for any connected slave mainframe units.




Frame control is now ready for both master and slave mainframes.


Adjusting the Knob Control Type

**Background**      The load module control knobs can be set to operate independently to the mainframe.


With the Knob type set to Updated, dependent operation is activated. Both the local (load module) selector knob and mainframe selector knob can change the resistance (CR mode), current (CC mode), voltage (CV mode) and power (CP mode). Changes from local mode are updated on the mainframe and vice versa.

With the Knob type set to Old, independent operation is activated. Local operation changes do not change the setting/ values on the mainframe.


Parameter	Knob Type	Updated/Old
Panel operation	1. Press the Shift Key then the Help key to access the Utility menu.	 → 
	2. Press F5 (Other Menu).	

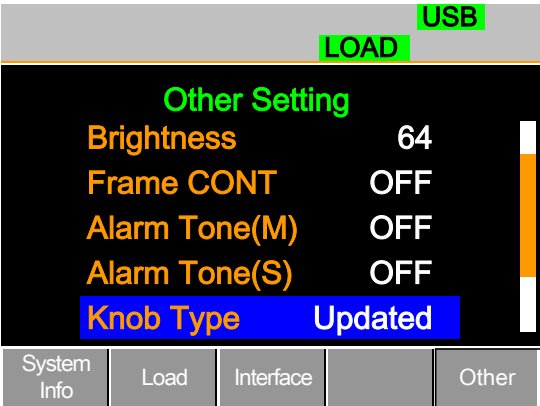

3. Use the Selector knob to move the cursor down to Knob Type (below the initial screen).

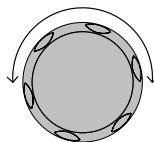

 4. Press the Selector knob to highlight Knob Type, then turn to change to Old/Updated.



**Knob Type** Updated

5. Press the Selector Knob or Enter to confirm selection.



## Configuring Alarm Sound

 
### Background

The PEL series has two different types of alarms, one located on the mainframe (Alarm Tone M) and one for each load module (Alarm Tone S).


Alarm Tone(M)/(S) can individually be set ON or OFF.

### Panel operation


1. Press the Shift Key then the Help key to access the Utility menu.
2. Press F5 (Other Menu).






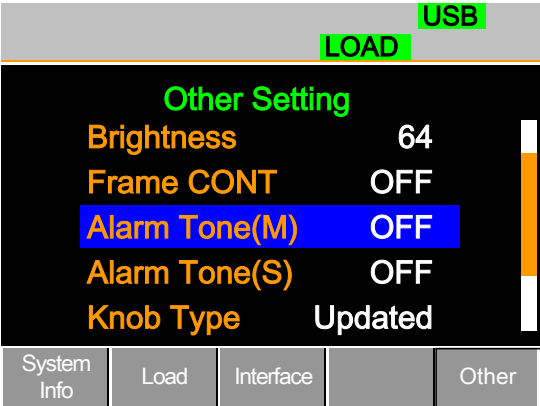

3. Use the selector knob to highlight Alarm Tone(M)

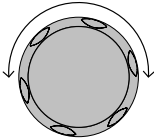

4. Press the Selector knob to select the master alarm (Alarm Tone(M)), turn to edit and press to confirm selection.

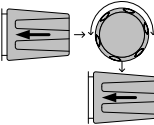

**Alarm Tone(M) ON**

5. Repeat the steps to edit the slave alarm (Alarm Tone(S)).

 
Configuring Go/NoGo Alarm Sound

Background      When any Go/NoGo limits are tripped from any channel, a tone can be set as an alarm.


The Go\_NoGo tone alarm settings apply to all channels.

Parameter      Go\_NoGo Tone    ON/OFF


- Panel operation
1. Press the Shift Key then the Help key to access the Utility menu.




2. Press F5 (Other Menu).

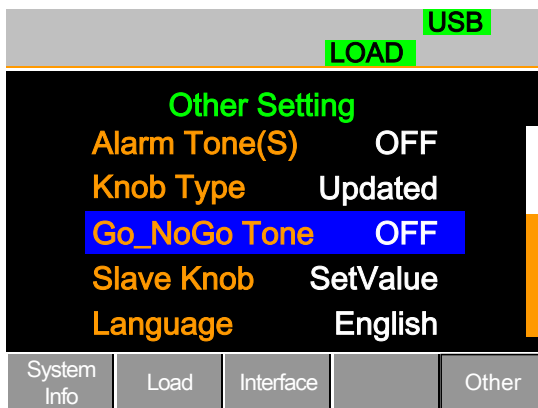

3. Use the Selector knob to move the cursor down to Go\_NoGo Tone (below the initial screen).

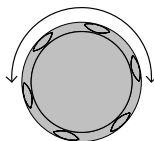


 4. Press the Selector knob to highlight Go\_NoGo Tone, then turn to change to ON/OFF.



**Go\_NoGo Tone** OFF

 5. Press the Selector Knob or Enter to confirm selection.



Adjusting Slave Knob Settings

**Background** Channel loads can be edited using the local load module or the Mainframe. When using the slave knob to edit a load, the load module display can be set to two different types: SetValue and Measured.



When a load is ON, SetValue will always display the set value (A Value, B Value) on the local load module display whilst “Measure” will show the actual measured value when editing the load. These settings apply to all channels.

The “Measure” setting can be temporarily disabled by pressing the Slave Knob to display the “SetValue” instead of the “Measure” value in the local load module display.


Parameter	Slave Knob	Measure/SetValue
-----------	------------	------------------


- Panel operation

 1. Press the Shift Key then the Help key to access the Utility menu.


 → 

2. Press F5 (Other Menu).




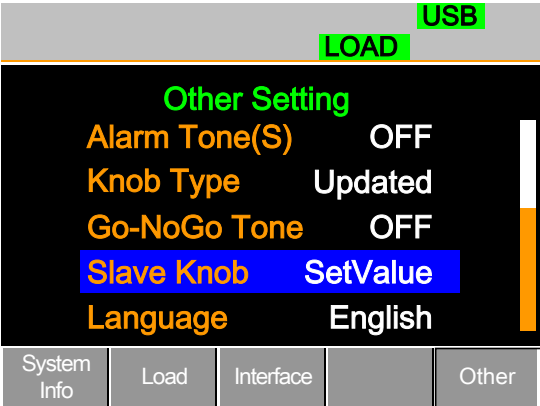

3. Use the Selector knob to move the cursor down to Slave Knob (below the initial screen).

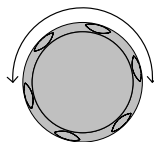

 4. Press the Selector Knob to highlight Slave Knob, then turn to change to Measure/SetValue.



**Slave Knob** **SetValue**

 
5. Press the Selector Knob or Enter to confirm selection.




## View Language Settings

**Background** The language settings can be viewed in the Utilities menu.


**Panel operation** 1. Press the Shift Key then the Help key to access the Utility menu.



2. Press F5 (Other Menu).

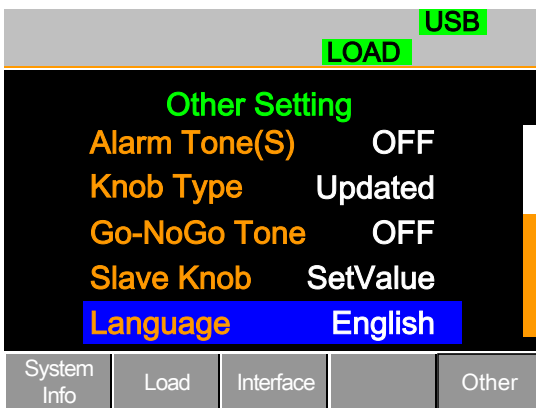

3. Use the Selector knob to move the cursor down to Language (below the initial screen).

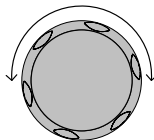

# Interface Configuration (settings)

The Interface Configuration chapter describes configuration settings that apply when using the PEL-2000A with a remote connection. There are three interface options for remote control: RS232, GPIB and USB. Only one interface can be used at a time. For more details about remote control and interface connections, see the Interface section on page 267.

---

**Interface Configuration (settings).....230**  
    Configuring RS232 Connection..... 231  
    Configuring the GPIB Address..... 233  
    Configuring USB Remote Connection . 234



---

Configuring RS232 Connection


Background When using RS232 a number of parameters need to be set. These include Baud rate, Stop Bit and Parity. When setting RS232 parameters, ensure they match that of the host machine.

Parameters	Baud Rate	2400/4800/9600/19200/38400
	Stop Bit	1~2
	Parity	None/Odd/Even


- Panel operation
1. Press the Shift Key then the Help key to access the Utility menu.
  2. Press F3(Interface Menu).

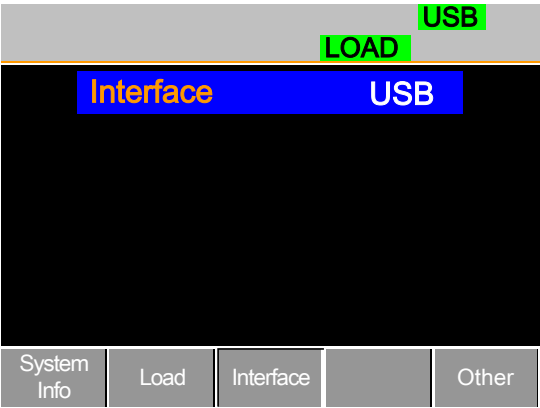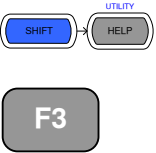

 
3. If the Interface mode is not RS232, use the Selector knob to edit Interface.
4. Choose RS232.



 
5. Press the Selector knob to confirm.



6. The RS232 Menu appears.

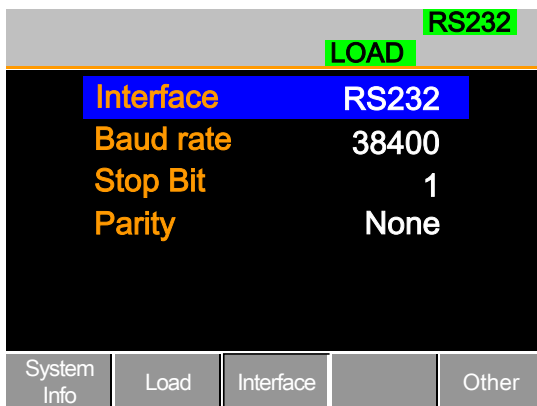

 7. Use the Selector knob to edit Baud rate, Stop Bit and Parity.






Note


The Baud Rate, Stop Bit and Parity must match that of the host machine.




## Configuring the GPIB Address



Background	When using GPIB, an address must be specified.	
Parameters	Address	01~30

 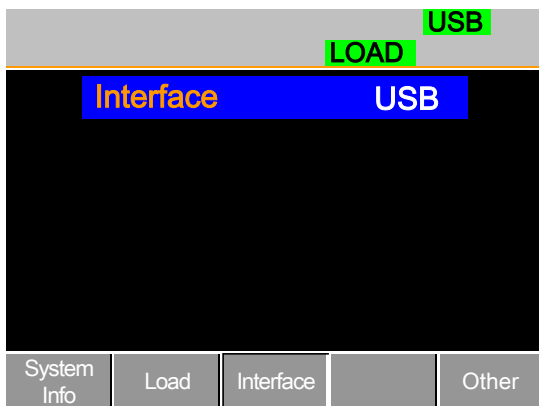
- Panel operation
1. Press the Shift Key then the Help key to access the Utility menu.  
  2. Press F3(Interface Menu). 

 



 
3. If the Interface mode is not GPIB, use the Selector knob to edit Interface. 
4. Choose GPIB.

**Interface**      **GPIB**

5. Press the Selector knob or Enter to confirm selection.  OR 
6. The GPIB menu appears.

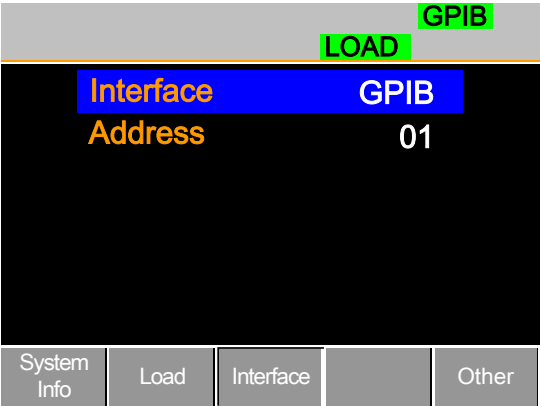

7. Use the selector knob to edit the GPIB address.  OR 

 



Note


The GPIB Address must match that of the host machine.

## Configuring USB Remote Connection


Background Of the three interface options, USB is the easiest to use.

Panel operation 1. Press the Shift Key then the Help key to access the Utility menu.  → 

2. Press F3(Interface Menu). 

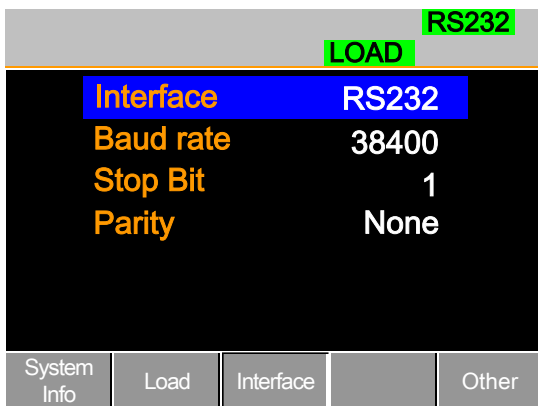

 3. If the Interface mode is not USB, use the Selector knob to edit Interface.



4. Choose USB.


Interface

USB

5. Press the Selector knob to confirm.



6. The Interface will become USB.

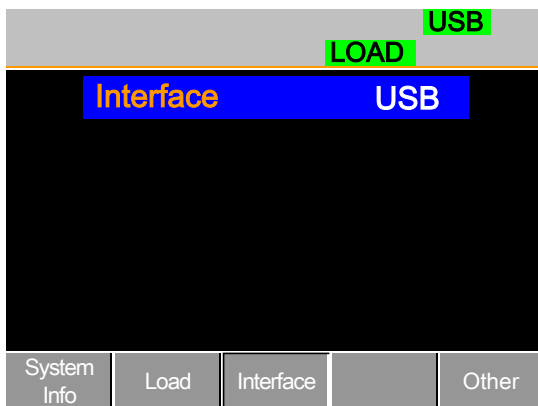

## Save / Recall

---

<b>Save / Recall .....</b>	<b>236</b>
Saving/Recalling Channels .....	237
Saving/Recalling Preset memory .....	239
Saving/Recalling Setup Memory .....	241
Setting the Default USB Path/File .....	243
Saving Setups to USB Memory .....	248
Saving/Recalling Memory Data to USB .....	251
Saving/Recalling Presets to USB .....	255
Saving/Recalling Sequences to USB ...	259
Quick Preset Recall/Save .....	263
Recall Setup Memory (Frame link). ....	264
Recall Preset Memory (Frame link) ....	265
Recall Factory Defaults .....	266

---

## Saving/Recalling Channels


 
**Background** The PEL-2000A series can save data for up to 120 different channel configurations. Each channel is represented by 120 memory slots using the onboard memory.

Memory is used in program sequences or for individual channel setups. For further details on memory, see page 97.


**Panel operation** 1. Press the File key.



2. Press F1 repeatedly until the Media Memory menu appears.

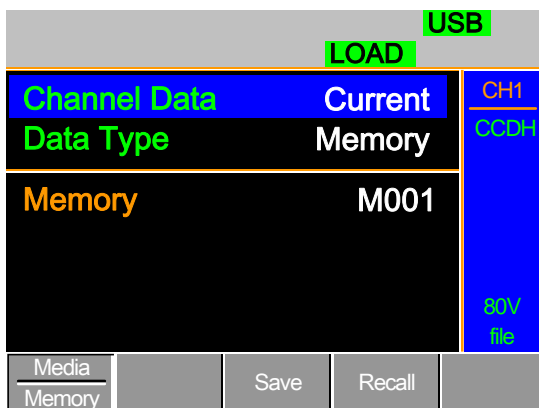

 
3. Use the Selector Knob to edit Channel Data and Data Type.



4. Choose Current and Memory.


<b>Channel Data</b>	<b>Current</b>
<b>Data Type</b>	<b>Memory</b>

 5. Press the Selector knob to edit Memory (M001-M120)




OR

Use the number pad to enter a number.

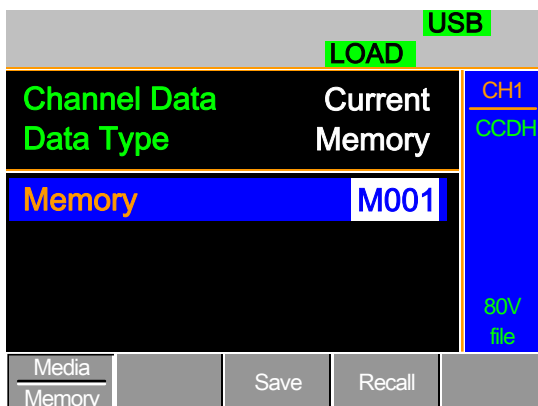

 6. Press F3 to Save or F4 to Recall the memory settings.



7. A message will indicate when a save has been successful

**Memory No 001 Save OK**



Note

 
The display will revert to the channel menu after recalling memory. Remember the memory is only saved/recalled for the current channel.

## Saving/Recalling Preset memory



**Background** The PEL-2000A series can store up to 10 presets for each channel. The presets can be saved or recalled either individually for each channel (Channel Data: Current) or at the same time (Channel Data: All), using the All option.

For further details on memory, see page 97.


**Panel operation** 1. Press the File key.



 2. Press F1 repeatedly until the Media Memory menu appears.

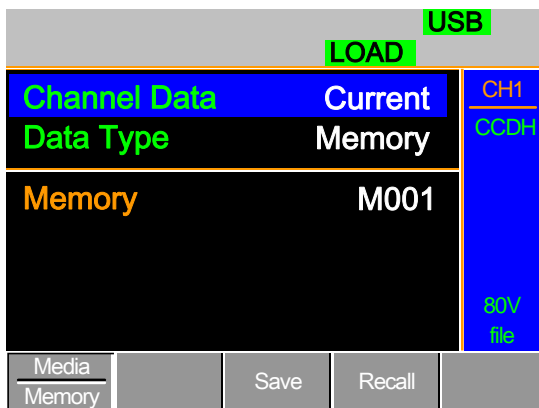

 3. Use the Selector Knob to edit Channel Data and Data Type.



4. To save or recall only the active channel, choose Current and Preset. To save or recall all the presets choose All and Preset.


Save / Recall  
Current Channel

Channel Data	Current
Data Type	Preset

Save / Recall All  
Channels



Channel Data	All
Data Type	Preset

 5. Press the Selector knob to edit Preset (P0-P9)




OR

Use the number pad to enter a number.

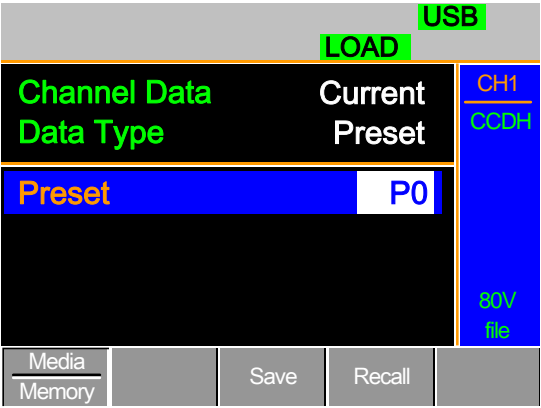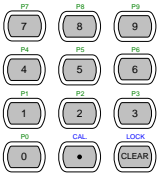

 6. Press F3 to Save or F4 to Recall the Presets.



7. A message will be displayed when the save is complete.

**Preset P0 Save OK**





Note

The display will revert to the channel menu after recalling memory.

## Saving/Recalling Setup Memory

### Background


 
The PEL-2000A series can store up to 4 different setups using the onboard memory. Each setup can be saved from the file menu. Using Setup Memory, each channel will be saved. For further details on memory, see page 97.

### Panel operation


1. Press the File key.



2. Press F1 repeatedly until the Media Memory menu appears.

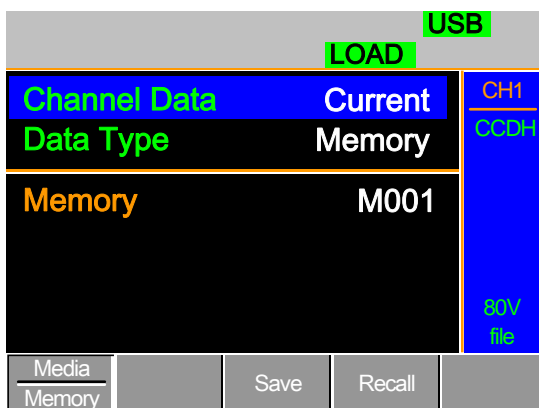

 3. Use the Selector Knob to edit Channel Data and Data Type.
4. Choose All and Setup.




Channel Data

All

Data Type


Setup

 5. Press the Selector knob to edit Setup Memory (1~4)




OR

Use the number pad to enter a number.

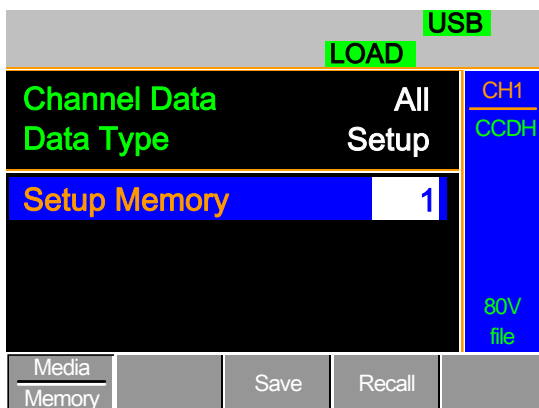

 6. Press F3 to Save or F4 to Recall the Setup Memory.






7. A message will be displayed when the save/recall is complete.


**Setup Memory 1 Save OK**  
**Setup Memory 1 Recall OK**


Setting the Default USB Path/File


**Background** When saving files to a USB memory stick the files will be saved into the root directory if a file path has not been set.

**Panel operation**

1. Insert a USB flash drive into the front panel USB slot. 
2. Press the File key. 
3. Press F1 repeatedly until the Media USB menu appears. 

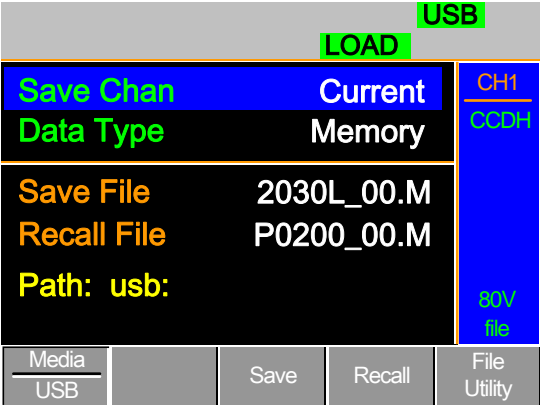

4. Press F5 (File Utility). 

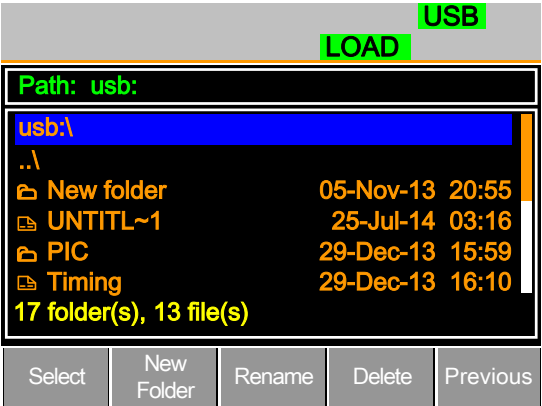


The top section (window) shows the current USB path.

There are 5 options:

- **Select**; Selects the current USB path as the default file path to save. (Step 5)
- **New Folder**; Creates a new folder (Step 7)
- **Rename**; Renames the current folder/path (Step 13)
- **Delete**; deletes the current file/path name. (Step 20)


Select Default Path

5. Use the Selector knob to highlight the new path directory

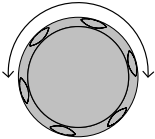

6. Press F1(Select) to select the new default directory path.



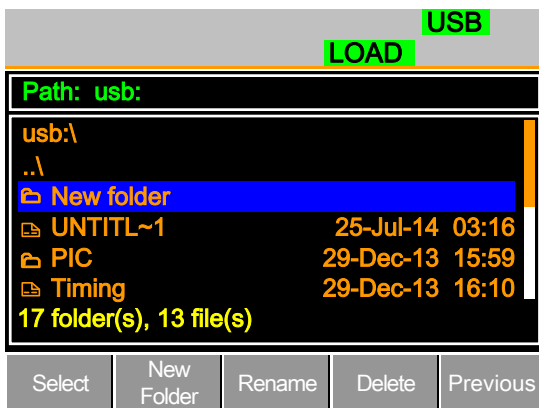

The new path will be shown in the upper Path box in green.


**Path: usb\New folder**

Create New Folder


7. To create a new directory, Press F2(New Folder)

**F2**


The On-Screen keyboard (OSK) appears. The directory has an 8 character size limit.

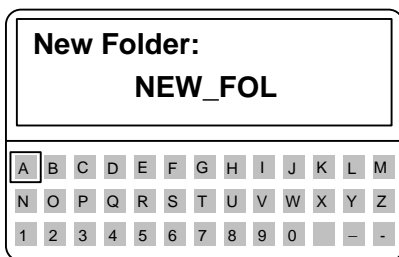

8. Use the Selector knob to scroll left and right through the keys.

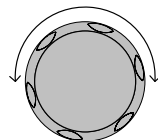

 9. When a key is highlighted, use the selector knob, F1 or Enter to confirm a key entry.



10. Use F2 (Back Space) to delete any previous entries/mistakes.



11. Press F3 (Save) to save the directory name.





12. Press F5 (Previous menu) to continue to the previous menus



Rename Folder


13. Use the Selector knob to highlight the file/directory that needs to be renamed.

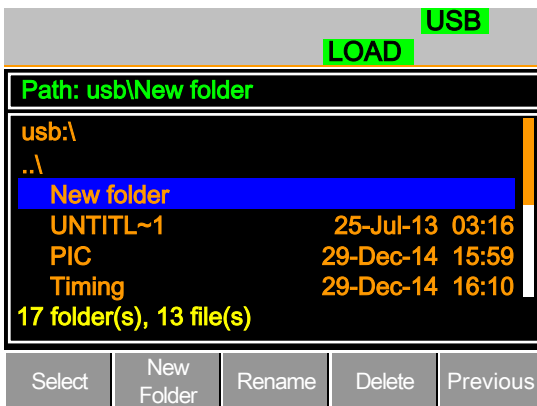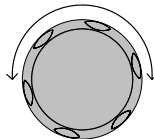


14. Press F3(Rename)




The On Screen Keyboard appears

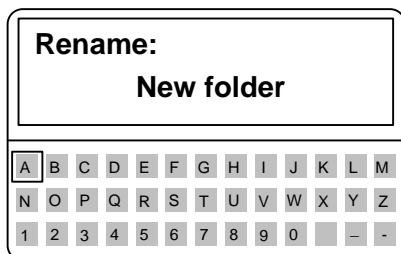

15. Use the Selector knob to scroll left and right through the keys.

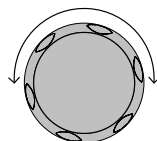

 16. When a key is highlighted, use the selector knob, F1 or Enter to confirm a key entry.



17. Use F2 (Back Space) to delete any previous entries/mistakes.




18. Press F3 (Save) to save the directory name.



19. Press F5 (Previous menu) to continue to the previous menus




- 
- Delete File Name 20. Use the Selector knob to highlight a file/directory.

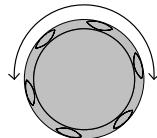

21. Press (F4) Delete.



22. To confirm deletion, press F4 again.

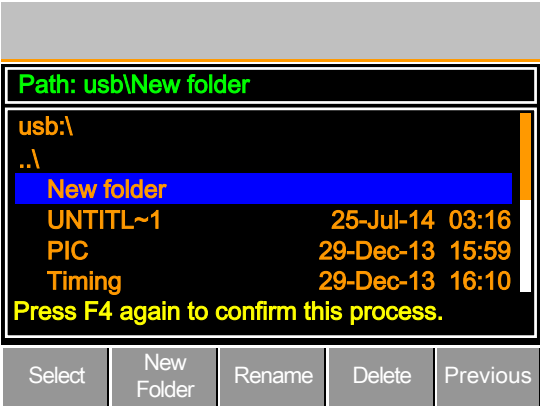


Saving Setups to USB Memory

**Background** Setup data contains all the channel data including Memory, Presets and Program Sequences.

There are four setups in internal memory. When saving to USB, all four setups will be saved. Conversely, when recalled, all four setups will be recalled to main memory.

The file extension \*.S is used for Setup data only.

Parameters	Save File	200X0_XX.S
	Update File	200X0_XX.S

- |                 |  |   |
|-----------------|--|---|
| Panel operation | 1. Insert a USB flash drive into the front panel USB slot. |  |
|                 | 2. Ensure the USB path has been set.                       |   |



Page 243.




3. Press the File key.




 4. Press F1 repeatedly until the Media USB menu appears.

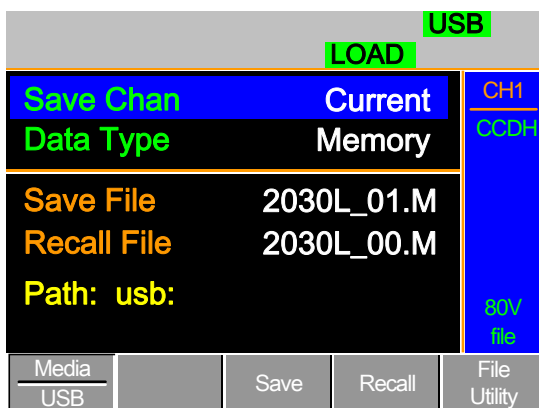

 5. Use the Selector Knob to edit Save Chan and Data Type.
6. Choose All and Setup.




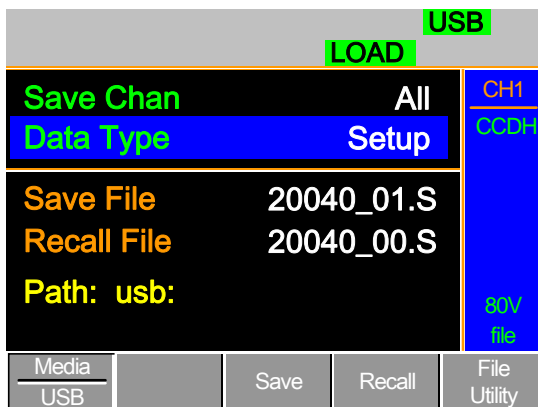


The screen will update to only show Setup files (\*.S) that are available to save/recall in the default path directory.

Save/ Recall  
Setups to USB

 7. Use the Selector Knob to edit Save File or Recall File. Rotating the selector knob will scroll through all the available setup files (\*.S).



 8. Choose a file name (20XXX\_XX.S).
9. Press F3 (Save) to save the setup data or F4 (Recall) to recall the setup data.



10. A screen message will appear when the save/recall has completed.

**20040\_01.S Save Ok**  
**20040\_00.S Recall Ok**




Note

Setups can only be saved if they have been saved to internal memory first. For details on how to save to internal memory see page 239.

Saving/Recalling Memory Data to USB

Background	<p>There are two options to save or recall Memory data to a USB flash drive:</p> <p>Save Chan Current: Saves the active Channel's Memory data(M001~M120) into the default file path (20XXX_XX.M).</p> <p>Save Chan All: Every channel's Memory data (CH1 M001~120 ~ CH8 M001~M120) will be saved into a directory (ALL00XX) as separate files for each channel (P0X0X_C1.M ~ P0X0X_C8.M).</p> <p>Recall File: Recalls the selected file to the active channel's Memory (MXXX). It is not possible to update all the channels at once, only one channel at a time can be recalled.</p> <p>The file extension *.M is used for Memory data only.</p> <p>For more information about the file structures see, page 97.</p>
------------	---



Parameters	<p>Save All Ch    Directory ALL0000 ~ ALL0099</p> <p>                  File: P0X0X_CX.M</p> <p>Save File      File: 20XXX_XX.M</p> <p>Update File    File: 20XXX_XX.M</p>
------------	---

Panel operation	<div><div>1. Insert a USB flash drive into the front panel USB slot.</div><div></div></div> <div><div>2. Ensure the USB path has been set.</div><div>Page 243.</div></div>
-----------------	---


3. Press the File key.



 4. Press F1 repeatedly until the Media USB menu appears.

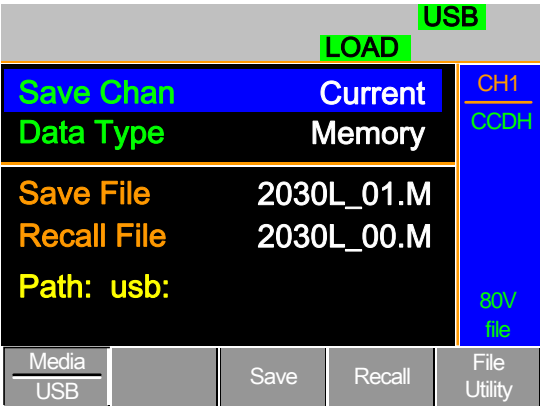


 Save all Channels 5. Use the Selector knob to edit Save Chan and Data Type.




6. Choose All, and Memory



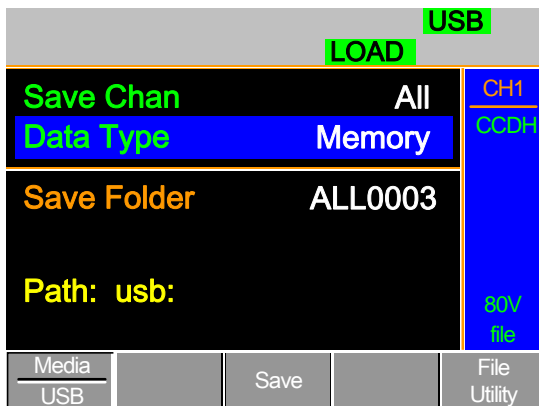

The screen updates to show Save Folder. Note it is not possible to recall all channels at once, only save.

 7. Use the Selector Knob to edit Save Folder.



8. Choose a directory name (ALL0000~ALL0099).

**Save Folder ALL0003**



Note

Any used directories will not be available. It is not possible to over-write older directories. They must be deleted first.

9. Press F3 (Save)

 


10. A screen message will be displayed when complete.


**ALL003 Save Ok**

Save /Recall File


11. Use the Selector Knob to edit Save Chan and Data Type.



12. Choose Current and Memory.

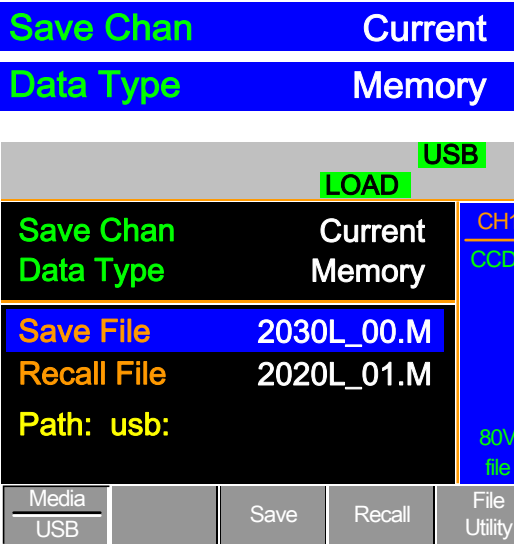

 - 13. Use the selector knob to edit Save or Recall File.
- 14. Choose a file name.
- 15. Press F3(Save) to save or F4(Recall) to recall the current channel. (MXXX)
- 16. A save or recall message will be displayed when complete.



2030L\_01.M Save Ok



 

Note

Remember only data that has been saved to internal memory will be saved to USB. Only the active channel will be saved.

If you try to recall data that originated from a different load module than the active channel, an error message will appear. The filename must reflect the active channel's load module type.

Machine Type Error



Saving/Recalling Presets to USB

Background	<p>There are two options to save or recall Channel Presets to a USB flash drive:</p> <p>Save Chan Current: Saves the active Channel's Presets (P0~P9) into the default file path (20XXX_XX.P).</p> <p>Save Chan All: Every channel's Presets (CH1 P0~P9 ~ CH8 P0~P9) will be saved into a directory (ALL00XX) as separate files for each channel (P0X0X_C1.P ~ P0X0X_C8.P)</p> <p>Recall: Recalls the selected file to the active channel's Presets (P0~P9). It is not possible to update all the channels at once, only one channel at a time can be recalled.</p> <p>The file extension *.P is used for channel Presets only.</p> <p>For more information about the file structures see page 97.</p>		
Parameter	Save All Ch	Directory: ALL0000 ~ ALL0099	
		File: P0X0X_CX.P	
	Save File	File: 20XXX_XX.P	
	Update File	File: 20XXX_XX.P	
Panel operation	<p>1. Insert a USB flash drive into the front panel USB slot.</p> <p>2. Ensure the USB path has been set.</p>		<div></div> <p>Page 243.</p>

3. Press the File key.




 4. Press F1 repeatedly until the Media USB menu appears.

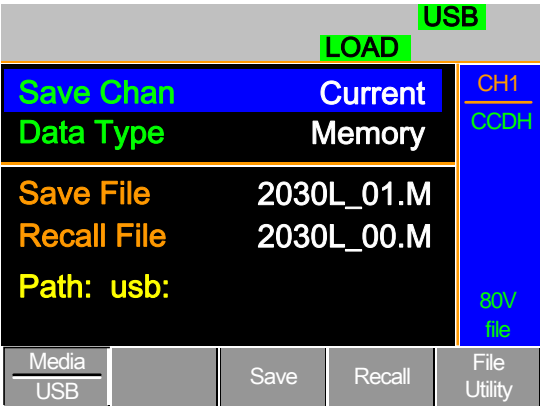


Save all Channel Presets

 5. Use the Selector knob to edit Save Chan and Data Type.
6. Choose All, and Preset






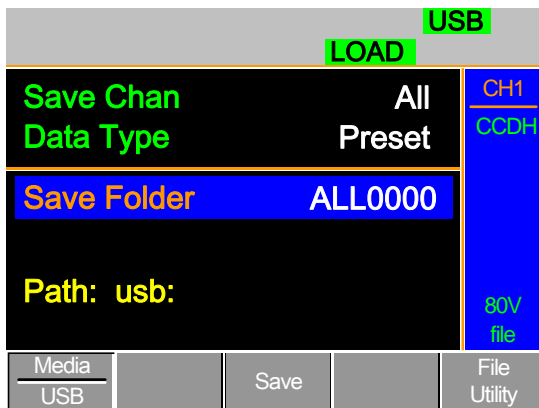

The screen updates to show Save Folder. Note it is not possible to recall all presets at once, only save.

 7. Use the Selector Knob to edit Save Folder.



8. Choose a directory name (ALL0000~ALL0099).

**Save Folder ALL0000**



Note

Any used directories will not be available. It is not possible to over- write older directories. They must be deleted first.

 
9. Press F3 (Save)




10. A screen message will be displayed when the save is complete.

**ALL0001 Save Ok**

- Save/Recall Preset 11. Use the Selector Knob to edit (current channel) Save Chan and Data Type.



12. Choose Current and Preset.

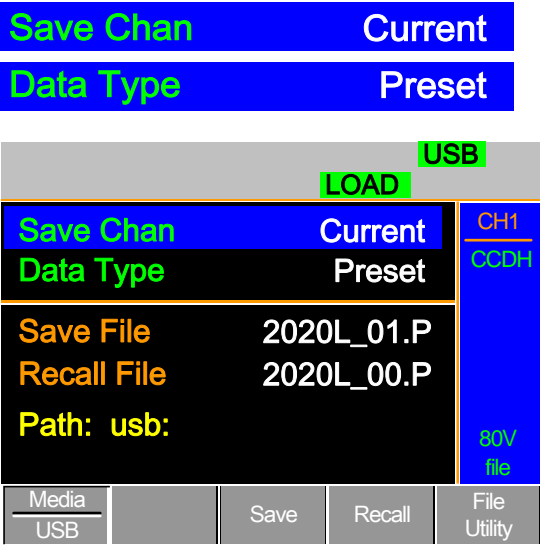

13. Use the selector knob to edit Save File or Recall file.
14. Choose a file name.
15. Press F3 (Save) to save or F4 (Recall) to recall the Channel Presets. (PXX)
16. A message will be displayed when the save or recall has completed.

2020L\_01.P Save Ok



Note

Remember only data that has been saved to internal memory will be saved to USB. Only the active channel presets will be saved.

If you try to recall data that originated from a different load module than the active channel, an error message will appear. The filename must reflect the active channel's load module type.

## Saving/Recalling Sequences to USB

**Background** There are two options to save or recall Sequences to a USB flash drive. Sequences can either be saved from all channels or from the current channel only.

**Save All:** Every channels' sequences will be saved into a directory (ALL00XX) as separate files for each channel (20XXX\_C1.A~ 20XXX\_C8.A).


 

**Save Current:** The current channel's sequence will be saved into the default directory (20XXX\_XX.A)

**Recall:** Sequences can only be recalled for the current channel. It is not possible to recall all channels' Sequences at once.



The file extension \*.A is used for Sequences only.

For more information about the file structures see page 97.

Parameters	Save All SEQ	Directory: ALL0000 ~ ALL0099 File: 20XXX_C1.A
	Save Current SEQ	File: 20XXX_XX.A
	Recall Current SEQ	File: 20XXX_XX.A


Panel operation	1. Insert a USB flash drive into the front panel USB slot.	 
	2. Ensure the USB path has been set.	Page 243.
	3. Press the File key.	

 
4. Press F1 repeatedly until the Media USB menu appears.

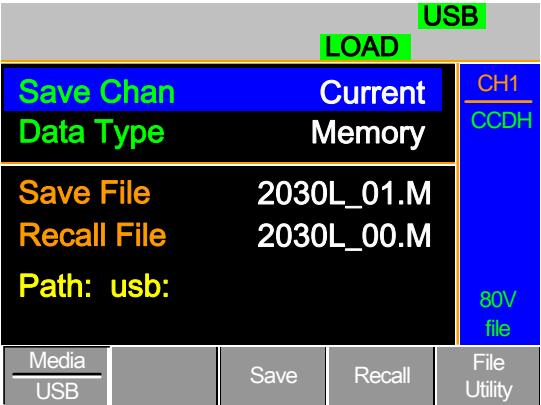

Save all Channel  
SEQ

 
5. Use the Selector knob to edit Save Chan and Data Type.
6. Choose All, and SEQ



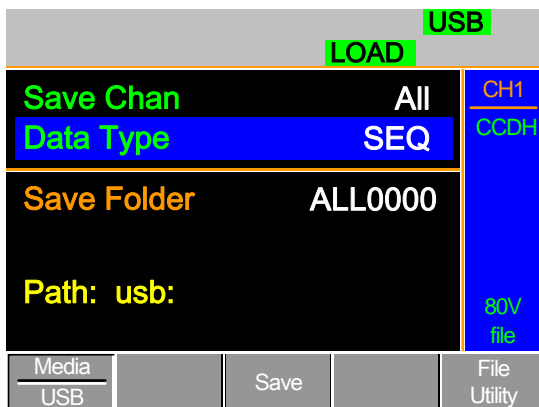

The screen updates to show Save Folder. Note it is not possible to recall all SEQ data at once, only save.

 7. Use the Selector Knob to edit Save Folder.



8. Choose a directory name (ALL0000~ALL0099).

**Save Folder ALL0000**



Note

Any used directories will not be available. It is not possible to over-write older directories. They must be deleted first.

9. Press F3 (Save)

 


10. A screen message will be displayed when saving.


**Save All Chan in ALL000**

Save/Recall SEQ  
(current channel)


11. Use the Selector Knob to edit Save Chan and Data Type.



12. Choose Current and SEQ.

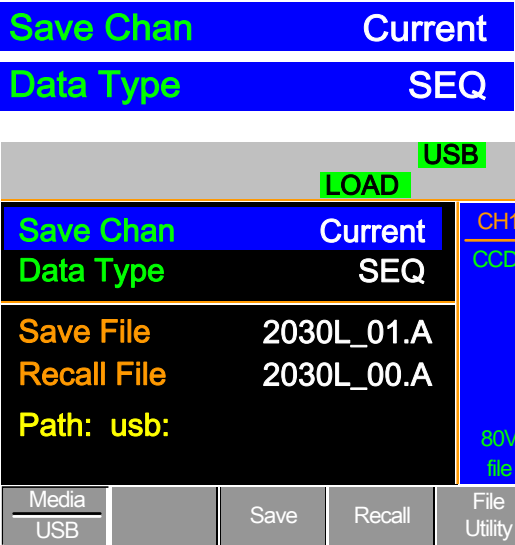

 - 13. Use the selector knob to edit Save File or Recall File.
- 14. Choose a file name.
- 15. Press F3 (Save) to save or F4 (Recall) to recall the current channel's sequence.
- 16. A message will be displayed when the file is saved/recalled.



Save in 2030L\_01.A



Remember a sequence must first be saved to (internal) memory before it can be saved to USB.

If you try to recall data that originated from a different load module than the active channel, an error message will appear. The filename must reflect the active channel's load module type.

Quick Preset Recall/Save

**Background**      The PEL-2000A series mainframes have up to 10 Channel Presets (P0~P9). Quick recalling or saving presets will only be applicable to the active channel. For example, P1 on CH1 is not the same as P1 on CH2.

 
**Parameter**      Presets    P0 ~ P9 (current channel)

**Panel Operation**    1.    Remove any USB devices from the front panel.

2.    Select the channel you want to save Channel Presets to.      Page 130.


**Save Current Channel Preset**    3.    To save a Channel Preset, press the Preset key and hold one of the number keys (0-9) for a short time until a beep is heard.

0 = P0  
1 = P1 etc.




**Save All Channel Presets**    4.    To save All Channel Presets, press the Shift key, the Preset key and hold one of the number keys (0-9) for a short time until a beep is heard.

0 = P0  
1 = P1 etc.

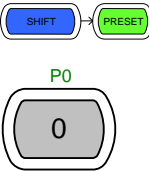

 
5.    Press the Preset key again to deactivate it.



The Preset will be saved to the one of 10 presets depending on the number pressed.

Recall Current  
Channel Preset

 
6. Press the Preset key and one of the number keys.




0 = P0  
1 = P0 etc.

Recall All Channel  
Presets

 
7. Press the Shift key, the Preset key and one of the number keys.



0 = P0  
1 = P0 etc.

 

 8. Press the Preset key again to deactivate it.



Only the active channel's Channel preset will be recalled.

### Recall Setup Memory (Frame link).

Background

A master mainframe can command all mainframes (master and slave) to recall setup memory from their internal memory. No setup data will be recalled from the master mainframe to the slave units.

Parameter

Setup memory 1~4.

Panel Operation

1. On the Master mainframe, follow the procedure for recalling setup memory for all channels.

Page 241

All mainframes will update setup memory upon recall



Recall Preset Memory (Frame link)

 
 
**Background**      A master mainframe can command all units to recall preset memory from their internal memory. Only the first three preset memories (P0~P2) can be recalled.

Channel presets can be recalled via the file menu or using the quick recall feature using the number pad.

Parameters	Presets	P0 ~ P2 (current channel)
------------	---------	---------------------------

Panel Operation:  
Quick Keys

1. Remove any USB devices from the front panel.
2. On the master mainframe, press the Shift and Preset key.
3. Press one of the number keys (0-2).  
0 = P0  
1 = P1 etc



The screen will flash momentarily when the presets are recalled.

Panel Operation:  
File menu

4. On the master mainframe follow the procedure to recall preset memory for all channels.


Page 239

The screen will flash momentarily when the presets are recalled.


## Recall Factory Defaults

 **Background** The Factory defaults can be recalled at any time. For details on the factory defaults please see the default settings in the appendix, page 285

**Panel Operation** 1. Press the File key.



2. Press F1 repeatedly until the Media Default menu appears.

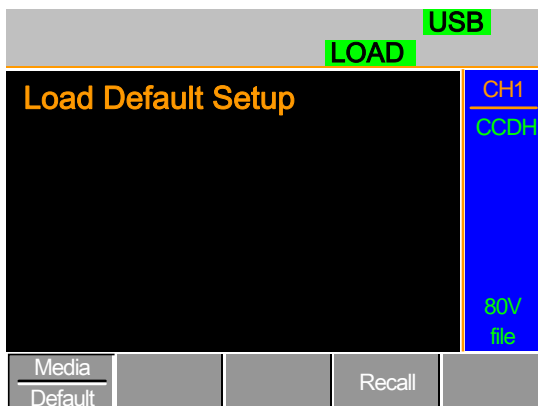

3. Press Recall (F4) to recall the factory default settings.



4. Wait a short time for the settings to be recalled.

# **I** NTERFACE

The Interface chapter details the pin configuration of the RS232, GPIB, Frame Link, Channel Control and Go/NoGo interfaces.

---

**Interface Configuration .....268**

- Configure RS-232C interface ..... 268
- Configure GPIB interface ..... 269
- Configure Channel Control interface .. 270
- Configure Frame Link Interface ..... 271
- Configure Go/NoGo Interface ..... 274
- USB Interface Connection ..... 275

 
---

# Interface Configuration


## Configure RS-232C interface

RS-232C configuration	Connector	DB-9, Male
	Baud rate	9600
	Parity	None
	Data bit	8
	Stop bit	1

Connect the RS-232C cable (GW Instek part no. GTL-232) to the rear panel port: DB-9 male connector.




### Pin assignment

 

- 2: RxD (Receive data)
- 3: TxD (Transmit data)
- 5: GND
- 1, 4, 6, 7, 8, 9: No connection


### PC connection

Use the Null Modem connection as shown in the diagram below.

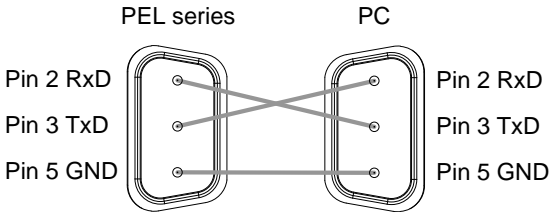


Configure GPIB interface

 Connection      Connect the GPIB cable to the rear panel port: 24-pin female connector.



Pin assignment

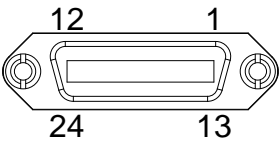


Pin1	Data line 1	Pin13	Data line 5
Pin2	Data line 2	Pin14	Data line 6
Pin3	Data line 3	Pin15	Data line 7
Pin4	Data line 4	Pin16	Data line 8
Pin5	EOI	Pin17	REN
Pin6	DAV	Pin18	Ground
Pin7	NRFD	Pin19	Ground
Pin8	NDAC	Pin20	Ground
Pin9	IFC	Pin21	Ground
Pin10	SRQ	Pin22	Ground
Pin11	ATN	Pin23	Ground
Pin12	Shield (screen)	Pin24	Signal ground

- GPIB constraints
- Maximum 15 devices altogether, 20m cable length, 2m between each device
  - At least 2/3 of the devices turned On
  - No loop or parallel connection

Configure Channel Control interface


Channel control configuration	Connector	Screwless connector.
	Wire Gauge	22-28 AWG (24 AWG recommended).
	Wire connection	10 mm strip gauge for connection.

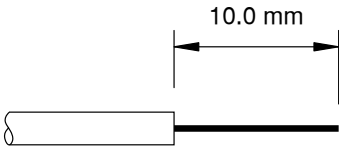

The diagram shows a horizontal strip gauge with a break in the middle. A dimension line above the right portion of the gauge indicates a length of 10.0 mm.

Input		0-10V.
-------	--	--------

 Pin Assignment





The diagram shows a 6-pin connector with pins numbered 1 to 6. Pins 1 and 6 are at the ends, and pins 2, 3, 4, and 5 are in the middle.

1	GND	Negative potential of the load input terminal.
2	I MON (OUTPUT)	Load input current monitor; where 0V = 0% of input current and 10V = 100% of input current.
3	V MON (OUTPUT)	Load input voltage monitor; where 0V = 0% of input voltage and 10V = 100% of input voltage.
4	Ext Voltage ref (INPUT)	External voltage reference; Where 0V=0% of rating voltage/current and 10V = 100% of rating voltage/current. The external voltage reference is for CC and CV mode.


5 Load On		Load On Input. Load on = Active low, 0-1V Load off = Active high, 4-5V. (Using the + load polarity in conjunction with a 10kΩ pull up resistor)
6 +15V		Internal power output. Max 50mA.
Channel Control Interface Constraints	Mode/Range	Mode and Range configuration is only selected via the front panel.

  Configure Frame Link Interface

Connection	Connect the Frame link cable (MIL 20 pin connector) to the rear panel port: 20-pin male connector.		
Pin assignment (Frame link connector 1)			
Pin1	A	Recall Preset memory 0 (All channels)	
Pin2	B	Recall Preset memory 1 (All channels)	
Pin3	C	Recall Preset memory 2 (All channels)	
Pin4	TRIG_OUT	Trigger out	
Pin5	MEM_0	Recall Setup memory 1 (All channels)	
Pin6	MEM_1	Recall Setup memory 2 (All channels)	

Pin7	MEM_2	Recall Setup memory 3 (All channels)
Pin8	MEM_3	Recall Setup memory 4 (All channels)
Pin9	Enable	Enable Load (On/Off), recall Preset memory (0- 3) and Setup memory (1- 4)
Pin10	Load On/Off	
Pin11	Not used	
Pin12	Not used	
Pin13	Not used	
Pin14	Not used	
Pin15	Load Status	Output, load on status.
Pin16	Alarm Status	Output alarm activated.
Pin17	+5V	Output, 5V+, 100mA.
Pin18	N.C	No connection.
Pin19	GND	Ground
Pin20	GND	Ground

 Pin assignment  
(Frame link  
connector 2)



Pin1	Sync._A	Sync signal, Recall Preset memory 0 (All channels)
Pin2	Sync._B	Sync signal, Recall Preset memory 1 (All channels)
Pin3	Sync._C	Sync signal, Recall Preset memory 2 (All channels)
Pin4	TRIG_IN	Reserved




Pin5	Sync._MEM_0	Sync signal, Recall Setup memory 1 (All channels)
Pin6	Sync._MEM_1	Sync signal, Recall Setup memory 2 (All channels)
Pin7	Sync._MEM_2	Sync signal, Recall Setup memory 3 (All channels)
Pin8	Sync._MEM_3	Sync signal, Recall Setup memory 4 (All channels)
Pin9	Sync._Enable	Sync signal, Enable Load (On/Off), recall Preset memory (0-3) and Setup memory (1-4)
Pin10	Sync._Load On/Off	Sync signal, Load On/Off
Pin11	Not used	
Pin12	Not used	
Pin13	Not used	
Pin14	Not used	
Pin15	Load Status	Sync signal, Output, load on status.
Pin16	Alarm Status	Sync signal, Output alarm activated.
Pin17	N.C	No connection
Pin18	+5V	+5V, 100mA
Pin19	GND	Ground
Pin20	GND	Ground


Connection	<ul style="list-style-type: none"><li>• Input: active low (0-1V), active high (4-5V)</li><li>• Inputs (5V, 10kΩ pull-up resistor)</li><li>• Open collector outputs (Load status, Alarm Status, +5V) maximum 30VDC with 1.1V saturation voltage (100mA).</li><li>• When enable is on (active low), the following is disabled from the mainframe: activating loads and recalling preset or setup memory.</li></ul>
Frame Link constraints	<ul style="list-style-type: none"><li>• Maximum 5 (1 master + 4 slave units) devices can be linked altogether with a maximum cable length of 30cm for each cable.</li><li>• All the connected devices must be turned on.</li><li>• No loop or parallel connections</li></ul>

Configure Go/NoGo Interface

Connection	Use a DSUB (DB-15 Female) connector to connect to the Go/NoGo port.  The Go/NoGo port is an output only port.
------------	---

 

Pin assignment

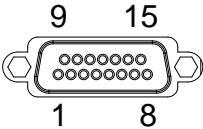

Pin1	Ch1_GO/NG	Pin9	Ch5_GO/NG
Pin2	GND	Pin10	GND
Pin3	Ch2_GO/NG	Pin11	Ch6_GO/NG
Pin4	GND	Pin12	GND

	Pin5	Ch3_GO/NG	Pin13	Ch7_GO/NG
	Pin6	GND	Pin14	GND
	Pin7	Ch4_GO/NG	Pin15	Ch8_GO/NG
	Pin8	GO/NG_Enable		
<hr/>				
Connection Type	Open collector output maximum 30VDC with 1.1V saturation voltage (100mA).			
	30 V DC (high)	Pass (Go) or SPEC Test: OFF		
	1.1 V DC (low)	Fail (NoGo)		

USB Interface Connection

---

Connection	For USB remote connection, use the USB-B port on the mainframe rear panel.	
------------	--	---

# FAQ

Q1. The load voltage indicated on the load module is below expected.

---

A1. Ensure the load leads are as short as possible, twisted and use the appropriate wire gauge. Ensure that voltage sense is used, this can help alleviate the voltage drop across the load the leads.

Q2. When I try to start a program sequence, it will not run. “No Active Channel” is displayed.

---

A2. Ensure the channel(s) is activated (not set to OFF) in the FUNC→Program→Active Channel menu.

Q3. When trying to save to USB, the USB memory stick is unresponsive.

---

A3. Try restarting the PEL mainframe. If this fails to solve the problem, ensure the USB memory is cleanly formatted.

Q4. When I try to clear an alarm, it doesn't work.

---

A4. Before clearing an alarm or using the Protection Clear All function, the load must be turned off. After the load is off, the alarm(s) can be cleared.


For more information, contact your local dealer or GW Instek at [www.gwinstek.com](http://www.gwinstek.com) / [marketing@goodwill.com.tw](mailto:marketing@goodwill.com.tw).

# A PPENDIX


## Fuse Replacement

---

- Step
1. Turn off the power at the wall socket and rear panel. Remove the power cord.
  2. Remove the fuse socket using a minus driver.

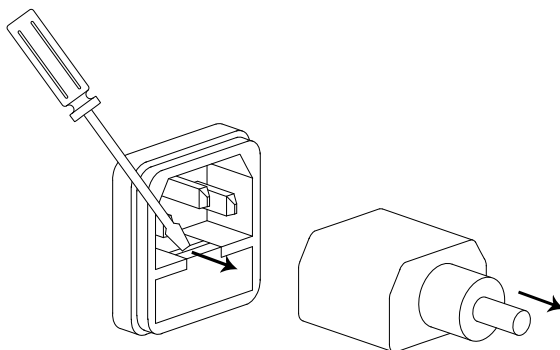

3. Replace the fuse in the holder.

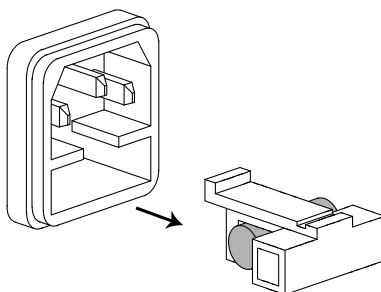

---

Rating                      T3.15A, 250V

## Firmware Update

**Background** The PEL-2000A firmware can be easily updated using a USB memory stick. For the latest firmware please see your local GW Instek distributor or download the latest firmware from [www.gwinstek.com](http://www.gwinstek.com).

**File Name** File: P2KAXXXX.UPG



Note

Copy the firmware file (\*.UPG) into the root directory of a USB stick before proceeding with the firmware update.

 
**Panel operation**

1. Insert a USB flash drive into the front panel USB slot.

2. Press the File key.




3. Press F1 repeatedly until the Media USB menu appears.



4. Press F5 (File Utility).



 5. Use the selector knob to scroll down to the firmware file (\*.UPG) and press the selector knob, Enter or F1.




6. Press F1 to confirm the firmware upgrade.



7. Wait for the firmware upgrade to finish, a message will be displayed upon completion.

 8. Turn the power Off and On from the front panel to reset the load generator.

**WARNING**

Do not turn the load generator off or remove the USB memory when the firmware is being read or upgraded.

## Calibration

---

### Background

The PEL-2000A load generator should be calibrated at least on a yearly basis.


GW Instek does not support End-User calibration. Please see your distributor for calibration details.

## Range Chart

PEL-2020A

Low Range


10W

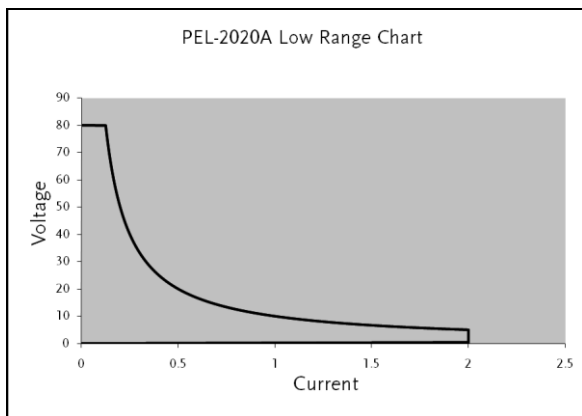

PEL-2020A

High Range

100W

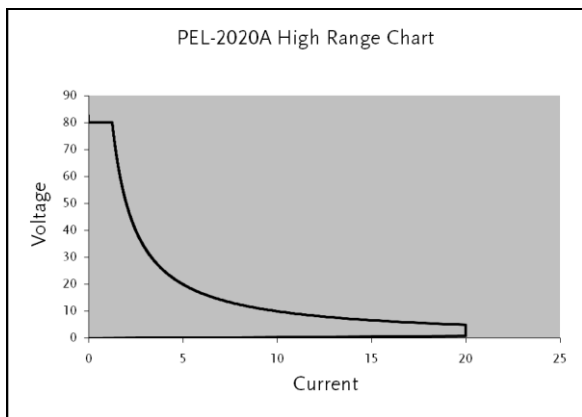




PEL-2030A

Left Channel

30W

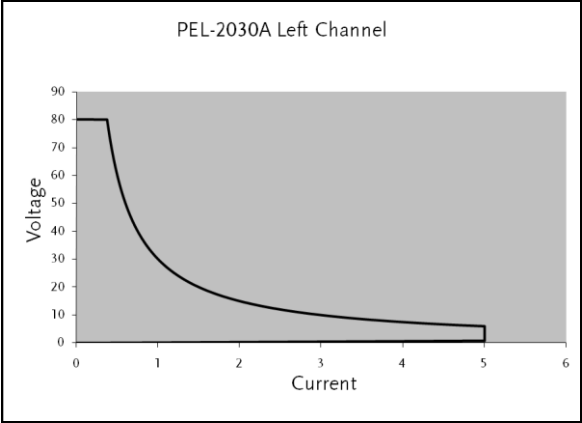


PEL-2030A

Right Channel

Low Range

25W

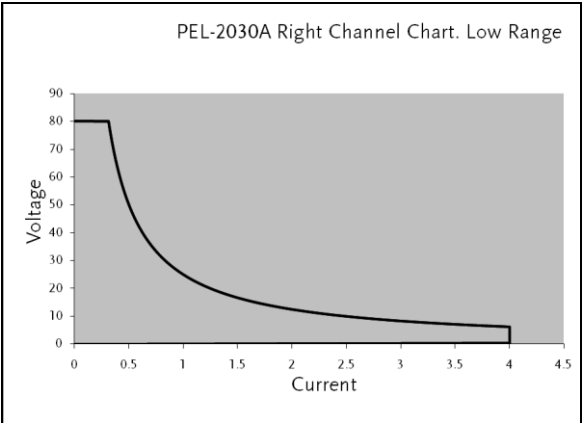


PEL-2030A

Right Channel

High Range


250W

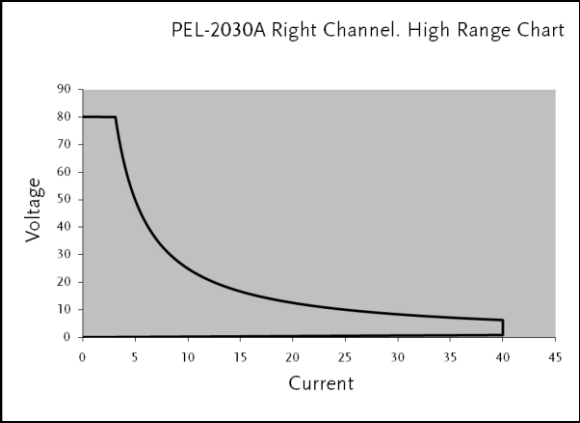

PEL-2040A

Low Range


35W

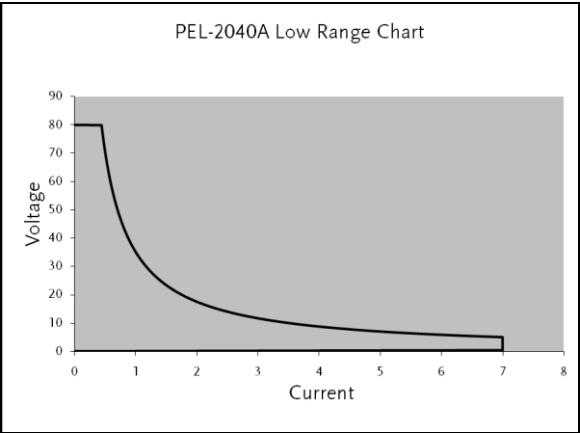

PEL-2040A

High Range


350W

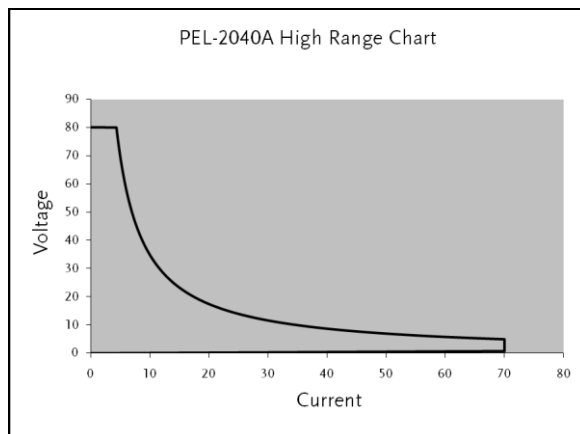

PEL-2041A

Low Range


35W

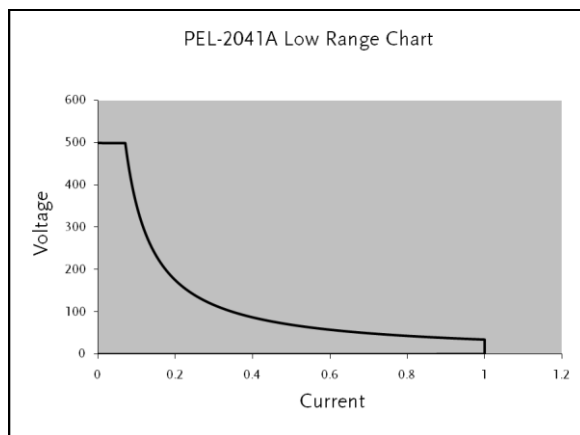

PEL-2041A

High Range

350W

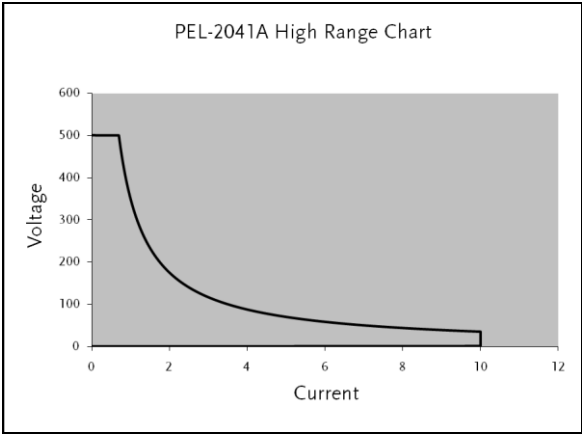

## Default Settings

Menu Item		
CC Mode	Mode: Static	A/B Value: Min A
	Rising Slew Rate: Max	Falling Slew Rate: Max
CR Mode	Mode: Static	A Value: Max $\Omega$
	Rising Slew Rate: Max	Falling Slew Rate: Max
CV Mode	Response: Slow	A Value: Max V
	Curr Limit: Max A	
CP Mode	Range: High	A/B Value: Min A
	Curr Limit: Max A	
Chan- Protection	OCP Level: Max	OCP Setting: OFF
	OVP Level: Max	OVP Setting: OFF
	OPP Level: Max	OPP Setting: OFF
	UVP Level: Off	UVP Setting: Clear
	Protection Clear: All	
Chan- Other	CC Vrange: High	Von Voltage: 0V
	Von Latch: Off	Short Key: Toggle
	CH CONT: OFF	Independent: OFF
	Load D-Time: 0.0s	CCH Step: Min
	CRH Step: Min	CRL Step: Min
	CV Step: Min	Response: Normal
Chan-Parallel	Parallel Unit: OFF	Parallel Mode: Para
	Display Mode: V,I	
Chan- Seq. Edit	A Value: 0	Rising/Falling SlewRate: Max
	Duration Time: 0.001s	

Chan- Seq. Edit - Loop	Repeat: Infinity Times	Start of Loop: 001 Step
	On End Of Seq.: OFF	CC Vrange: High
Chan- Go/NoGo	Spec Test: Off	Entry Mode: Value
	High: Max	Low: Min
FUNC- Program	PROG: 01	SEQ: 01
	Memory: 001	Run: Skip
	On-Time: 0.1s	Off-Time: Off
	P/F-Time: Off	On-Time: 0.1s
	Short Channel: All channels	
FUNC- Chain	Start: 01	P01~P12→: Off
FUNC- Run	CH 01~08: Active Off	
FUNC- Sequence	CH01~08: Time Setting Off	SEQ: Off
Utility- Load	Auto Load: Off	Auto Load On: Prog
Utility- Interface	USB	
Utility- Other	Speaker: Off	Contrast: 8
	Brightness: 70	Frame CONT: NA
	Alarm (M): On	Alarm (S): Off
	Knob Type: Updated	Go_NoGo Tone: Off
	Slave Knob: SetValue	Language: English

# Specifications

	PEL-2002A	PEL-2004A
MODULE SLOTS	2	4
GENERAL		
Operating Environment		
Temperature	0°C to 40°C	
Altitude	Up to 2000m	
Location	Indoor, no direct sunlight, dust free, almost non conductive pollution.	
Storage Environment		
Temperature	-10°C to 70°C	
Relative Humidity	< 80%	
Location	Indoor	
Power Supply	AC 115V±15%/230V±15% switchable, 50/60Hz, Transient overvoltage on the main supply is 2500V.	
Fuse	T3.15A/250V	
Pollution degree	2	
Measurement Category	1	
Rear panel USB class	USB 2.0 full speed (CDC-ACM)	

PEL-2020A (100Wx2)		
RANGE	Low	High
CURRENT	0~2A	0~20A
VOLTAGE	1~80V	
MIN.OPERATING	0.4V at 2A	0.8V at 20A
VOLTAGE(dc)Typ.)	0.2V at 1A	0.4V at 10A

### STATIC MODE

#### CONSTANT CURRENT MODE

Operating Range	0~2A	0~20A
Setting Range	0~2.04A	0~20.4A
Resolution	0.1mA	1mA
Accuracy	$\pm(0.1\%\text{set} + 0.1\%\text{F.S.})$	$\pm(0.1\%\text{set} + 0.2\%\text{F.S.})$

#### CONSTANT RESISTANCE MODE

Operating Range	0.075Ω~300Ω(100W/16V) 3.75Ω~15kΩ(100W/80V)
Setting Range	0.075Ω~300Ω(100W/16V) 3.75Ω~15kΩ(100W/80V)
Resolution	0.333mS(100W/16V) 6.667uS(100W/80V)
Accuracy	300Ω : $\pm(0.2\%\text{set} + 0.1\%)$ 15kΩ: $\pm(0.1\%\text{set} + 0.01\%)$

#### CONSTANT VOLTAGE + CONSTANT CURRENT MODE

Operating Range	1~80V
Setting Range	0~81.6V
Resolution	2mV
Accuracy	$\pm(0.05\%\text{set} + 0.1\%\text{F.S.})$
Current Setting Range	0~20A
Resolution	1mA
Accuracy	$\pm(0.1\%\text{set} + 0.2\%\text{F.S.}^{*1})$

NOTE : \*1: F.S. = Full scale of H Range

#### CONSTANT POWER MODE

Operating Range	1~10W	1~100W
Setting Range	0~10.2W	0~102W
Resolution	1mW	10mW
Accuracy	$\pm(0.5\%\text{set} + 0.5\%\text{F.S.}^{*1})$	$\pm(0.5\%\text{set} + 0.5\%\text{F.S.})$

NOTE : \*1: F.S. = Full scale of H Range



## DYNAMIC MODE

T1&T2	0.025ms ~ 10ms / Res: 1us 10ms ~ 30s / Res: 1ms
Accuracy	1us / 1ms $\pm$ 100ppm

## CONSTANT CURRENT MODE

Slew Rate	0.32 ~ 80mA/us	3.2 ~ 800mA/us
Slew Rate	0.32mA/us	3.2mA/us
Resolution		
Slew Rate Setting	$\pm(10\% + 15\mu\text{s})$	$\pm(10\% + 15\mu\text{s})$
Accuracy		
Current	0~2A	0~20A
Current	0.1mA	1mA
Resolution		
Current Accuracy	$\pm 0.4\%$ F.S.	

## CONSTANT RESISTANCE MODE

Slew Rate	0.32 ~ 80mA/us	3.2 ~ 800mA/us
Slew Rate	0.32mA/us	3.2mA/us
Resolution		
Slew Rate Setting	$\pm(10\% + 15\mu\text{s})$	$\pm(10\% + 15\mu\text{s})$
Accuracy		
Resistance	0.075 $\Omega$ ~300 $\Omega$ (100W/16V)	
Setting Range	3.75 $\Omega$ ~15k(100W/80V)	
Resistance	0.333mS(100W/16V)	
Resolution	6.667 $\mu\text{S}$ (100W/80V)	
Resistance	300 $\Omega$ : $\pm(0.5\%\text{set} + 0.1\text{S})$	
Accuracy	15k $\Omega$ : $\pm(0.5\%\text{set} + 0.01\text{S})$	

## MEASUREMENT

## VOLTAGE READBACK

Range	0~16V	0~80V
Resolution	0.32mV	1.6mV
Accuracy	$\pm(0.025\%\text{set} + 0.025\% \text{ F.S.})$	

## CURRENT READBACK

Range	0~2A	0~20A
Resolution	0.04mA	0.4mA
Accuracy	$\pm(0.05\%\text{set} + 0.05\% \text{ F.S.})$	

## POWER READBACK

Range	0~10W	0~100W
Accuracy	$\pm(0.1\%\text{set} + 0.1\% \text{ F.S.}^{*1})$	

NOTE : \*1 : Power F.S. = Vrange F.S. x Irange F.S.

## PROTECTIVE

## Over Power Protection

Range	1~102W
Resolution	0.5W
Accuracy	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$

## Over Current Protection

Range	0~20.4A
Resolution	0.05A
Accuracy	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$

## Over Voltage Protection

Range	1~81.6V
Resolution	0.2V
Accuracy	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$

Over  $\cong 85^{\circ}\text{C}$

Temperature

Protection

## Rated Power Protection :

Value	110W
Accuracy	$\pm 2\%\text{set}$

## GENERAL

## SHORT CIRCUIT

Current(CC)	$\cong 2.2/2\text{A}$	$\cong 22/20\text{A}$
Voltage(CV)	0V	0V
Resistance(CR)	$\cong 3.75\Omega$	$\cong 0.075\Omega$

INPUT  $500\text{k}\Omega$  (Typical)

RESISTANCE

(LOAD OFF)

PEL-2030A (30W/250W)			
RANGE	Low	Low	High
CURRENT	0~5A	0~4A	0~40A
VOLTAGE	1~80V		
MIN.OPERATING	0.8V at 5A	0.4V at 4A	0.8V at 40A
VOLTAGE(dc)	0.4V at 2.5A	0.2V at 2A	0.4V at 20A
STATIC MODE			

**CONSTANT CURRENT MODE**

Operating Range	0~5A	0~4A	0~40A
Setting Range	0~5.1A	0~4.08A	0~40.8A
Resolution	0.125mA	0.1mA	1mA
Accuracy	$\pm(0.1\%\text{set} + 0.1\%\text{F.S.})$	$\pm(0.1\%\text{set} + 0.1\%\text{F.S.})$	$\pm(0.1\%\text{set} + 0.2\%\text{F.S.})$

**CONSTANT RESISTANCE MODE**

Operating Range	0.3 $\Omega$ ~1.2k $\Omega$ (30W/16V) 15 $\Omega$ ~60k $\Omega$ (30W/80V)	0.0375 $\Omega$ ~150 $\Omega$ (250W/16V) 1.875 $\Omega$ ~7.5k $\Omega$ (250W/80V)
Setting Range	0.3 $\Omega$ ~1.2k $\Omega$ (30W/16V) 15 $\Omega$ ~60k $\Omega$ (30W/80V)	0.0375 $\Omega$ ~150 $\Omega$ (250W/16V) 1.875 $\Omega$ ~7.5k $\Omega$ (250W/80V)
Resolution	83.333 $\mu$ S (30W/16V) 1.666 $\mu$ S (30W/80V)	0.666mS(250W/16V) 13.333 $\mu$ S(250W/80V)
Accuracy	1.2k $\Omega$ : $\pm$ (0.2%set + 0.1S) 60k $\Omega$ : $\pm$ (0.1%set + 0.01S)	150 $\Omega$ : $\pm$ (0.2%set + 0.1S) 7.5k $\Omega$ : $\pm$ (0.1%set + 0.01S)

**CONSTANT VOLTAGE + CONSTANT CURRENT MODE**

Operating Range	1~80V	1~80V
Setting Range	0~81.6V	0~81.6V
Resolution	2mV	2mV
Accuracy	$\pm(0.05\%\text{set} + 0.1\%\text{F.S.})$	$\pm(0.05\%\text{set} + 0.1\%\text{F.S.})$
Current Setting Range	0~5A	0~40A
Resolution	0.125mA	1mA
Accuracy	$\pm(0.1\%\text{set} + 0.2\%\text{F.S.})$	$\pm(0.1\%\text{set} + 0.2\%\text{F.S.}^{*1})$

NOTE : \*1 : F.S. = Full scale of H Range

#### CONSTANT POWER MODE

Operating Range	1~30W	1~25W	1~250W
Setting Range	0~30.6W	0~25.5W	0~255W
Resolution	1mV	1mV	10mV
Accuracy	$\pm(0.5\%\text{set} + 0.5\%\text{F.S.})$		$\pm(0.5\%\text{set} + 0.5\%\text{F.S.}^{*1})$

NOTE : \*1 : F.S. = Full scale of H Range

#### DYNAMIC MODE

T1&T2	0.025ms ~ 10ms / Res: 1us 10ms ~ 30s / Res: 1ms		
Accuracy	1us / 1ms + 100ppm		

#### CONSTANT CURRENT MODE

Slew Rate	0.8 ~ 200mA/us	0.64 ~ 160mA/us	6.4 ~ 1600mA/us
Slew Rate	0.8mA/us	0.64mA/us	6.4mA/us
Resolution			
Slew Rate setting	$\pm(10\% + 15\text{us})$	$\pm(10\% + 15\text{us})$	$\pm(10\% + 15\text{us})$
Accuracy			
Current	0~5A	0~4A	0~40A
Current	0.125mA	0.1mA	1mA
Resolution			
Current Accuracy	$\pm 0.4\% \text{ F.S.}$		

#### CONSTANT RESISTANCE MODE

Slew Rate	0.8 ~ 200mA/us	0.64 ~ 160mA/us	6.4 ~ 1600mA/us
Slew Rate	0.8mA/us	0.64mA/us	6.4mA/us
Resolution			
Slew Rate Setting	$\pm(10\% + 15\text{us})$	$\pm(10\% + 15\text{us})$	$\pm(10\% + 15\text{us})$
Accuracy			
Resistance	0.3Ω~1.2kΩ	0.0375Ω~150Ω(250W/16V)	
Setting Range	(30W/16V)	1.875Ω~7.5kΩ(250W/80V)	
	15Ω~60kΩ		
	(30W/80V)		
Resistance	83.333uS	0.666mS(250W/16V)	
Resolution	(30W/16V)	13.333uS(250W/80V)	
	1.666uS		
	(30W/80V)		
Resistance	1.2kΩ: $\pm(0.5\%\text{set} + 0.1\text{S})$	150Ω: $\pm(0.5\%\text{set} + 0.1\text{S})$	
Accuracy	+ 0.1S)	7.5kΩ: $\pm(0.5\%\text{set} + 0.01\text{S})$	
	60kΩ: $\pm(0.5\%\text{set} + 0.01\text{S})$		

## MEASUREMENT

## VOLTAGE READBACK

Range	0~16V	0~80V	0~16V	0~80V
Resolution	0.32mV	1.6mV	0.32mV	1.6mV
Accuracy	$\pm(0.025\%\text{set} + 0.025\% \text{ F.S.})$			

## CURRENT READBACK

Range	0~5A	0~4A	0~40A
Resolution	0.1mA	0.08mA	0.8mA
Accuracy	$\pm(0.05\%\text{set} + 0.05\% \text{ F.S.})$		

## POWER READBACK

Range	0~30W	0~25W	0~250W
Resolution	$\pm(0.1\%\text{set} + 0.1\% \text{ F.S.}^{*1})$	$\pm(0.1\%\text{set} + 0.1\% \text{ F.S.}^{*1})$	

NOTE : \*1 : Power F.S. = Vrange F.S. x Irange F.S.

## PROTECTIVE

## Over Power Protection

Range	1~30.6W	1~255W
Resolution	0.15W	1.25W
Accuracy	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$

## Over Current Protection

Range	0~5.1A	0~40.8A
Resolution	0.0125A	0.1A
Accuracy	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$

## Over Voltage Protection

Range	1~81.6V	1~81.6V
Resolution	0.2V	0.2V
Accuracy	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$

Over Temperature Protection  $\cong 85^{\circ}\text{C}$

## Rated Power Protection

Value	33W	275W
Accuracy	$\pm 2\%\text{set}$	$\pm 2\%\text{set}$

## GENERAL

## SHORT CIRCUIT

Current(CC)	$\cong 5.5/5\text{A}$	$\cong 4.4/4\text{A}$	$\cong 44/40\text{A}$
Voltage(CV)	0V	0V	0V

Resistance(CR)	$\approx 15\Omega$	$\approx 0.3\Omega$	$\approx 1.875\Omega$	$\approx 0.0375\Omega$
INPUT	500k $\Omega$ (Typical)			
RESISTANCE				
(LOAD OFF)				

	PEL-2040A		PEL-2041A	
RANGE	Low	High	Low	High
CURRENT	0~7A	0~70A	0~1A	0~10A
VOLTAGE	0~80V		0~500V	
MIN.OPERATING	0.4V at 7A	0.8V at 70A	0.4V at 1A	0.8V at 10A
VOLTAGE(dc)Typ.)	0.2V at 3.5A	0.4V at 35A	0.2V at 0.5A	0.4V at 5A

### STATIC MODE

#### CONSTANT CURRENT MODE

Operating Range	0~7A	0~70A	0~1A	0~10A
Setting Range	0~7.14A	0~71.4A	0~1.02A	0~10.2A
Resolution	0.2mA	2mA	0.05mA	0.5mA
Accuracy	$\pm(0.1\%\text{set} + 0.1\%\text{F.S.})$	$\pm(0.1\%\text{set} + 0.2\%\text{F.S.})$	$\pm(0.1\%\text{set} + 0.1\%\text{F.S.})$	$\pm(0.1\%\text{set} + 0.2\%\text{F.S.})$

#### CONSTANT RESISTANCE MODE

Operating Range	0.025Ω~100Ω(350W/16V) 1.25Ω~5k(350W/80V)	1.25Ω~5kΩ (350W/125V) 50Ω~200k(350W/500V)
Setting Range	0.025Ω~100Ω(350W/16V) 1.25Ω~5k(350W/80V)	1.25Ω~5kΩ(350W/125V) 50Ω~200k(350W/500V)
Resolution	1mS(350W/16V) 20uS(350W/80V)	20uS(350W/125V) 0.5uS(350W/500V)
Accuracy	100Ω: $\pm(0.2\%\text{set} + 0.1\text{S})$ 5kΩ: $\pm(0.1\%\text{set} + 0.01\text{S})$	5kΩ: $\pm(0.2\%\text{set} + 0.02\text{S})$ 200kΩ: $\pm(0.1\%\text{set} + 0.005\text{S})$

#### CONSTANT VOLTAGE + CONSTANT CURRENT MODE

Operating Range	1~80V	2.5~500V
Setting Range	0~81.6V	0~510V
Resolution	2mV	10mV
Accuracy	$\pm(0.05\%\text{set} + 0.1\%\text{F.S.})$	$\pm(0.05\%\text{set} + 0.1\%\text{F.S.})$
Current Setting Range	0~70A	0~10A
Resolution	2mA	0.5mA
Accuracy	$\pm(0.1\%\text{set} + 0.2\%\text{F.S.}^{*1})$	$\pm(0.1\%\text{set} + 0.2\%\text{F.S.}^{*1})$

NOTE : \*1 : F.S. = Full scale of H Range

#### CONSTANT POWER MODE

Operating Range	1~35W	1~350W	1~35W	1~350W
Setting Range	0~35.7W	0~357W	0~35.7W	0~357W
Resolution	1mW	10mW	1mW	10mW
Accuracy	$\pm(0.5\%\text{set} + 0.5\%\text{F.S.}^{*1})$	$\pm(0.5\%\text{set} + 0.5\%\text{F.S.}^{*1})$	$\pm(0.5\%\text{set} + 0.2\%\text{F.S.}^{*1})$	$\pm(0.5\%\text{set} + 0.5\%\text{F.S.}^{*1})$

NOTE : \*1 : F.S. = Full scale of H Range

### DYNAMIC MODE

T1&T2	0.025ms~10ms/Res: 1us 10ms ~ 30s / Res: 1ms	0.025ms~10ms/Res: 1us 10ms ~ 30s / Res: 1ms
Accuracy	1us / 1ms $\pm$ 100ppm	1us / 1ms $\pm$ 100ppm

### CONSTANT CURRENT MODE

Slew Rate	0.001 ~ 0.28A/us	0.01 ~ 2.8A/us	0.16 ~ 40mA/us	1.6 ~ 400mA/us
Slew Rate	0.001A/us	0.01A/us	0.16mA/us	1.6mA/us
Resolution				
Slew Rate Setting	$\pm(10\% +$ 15us)	$\pm(10\% +$ 15us)	$\pm(10\% +$ 15us)	$\pm(10\% +$ 15us)
Accuracy				
Current	0~7A	0~70A	0~1A	0~10A
Current	0.2mA	2mA	0.05mA	0.5mA
Resolution				
Current Accuracy	$\pm 0.4\%$ F.S.		$\pm 0.4\%$ F.S.	

### CONSTANT RESISTANCE MODE

Slew Rate	0.001 ~ 0.28A/us	0.01 ~ 2.8A/us	0.16 ~ 40mA/us	1.6 ~ 400mA/us
Slew Rate	0.001A/us	0.01A/us	0.16mA/us	1.6mA/us
Resolution				
Slew Rate Setting	$\pm(10\% +$ 15us)	$\pm(10\% +$ 15us)	$\pm(10\% +$ 15us)	$\pm(10\% +$ 15us)
Accuracy				
Resistance	0.025 $\Omega$ ~100 $\Omega$ (350W/16V)	1.25 $\Omega$ ~5k $\Omega$ (350W/125V)	50 $\Omega$ ~200k(350W/500V)	
Setting Range	1.25 $\Omega$ ~5k(350W/80V)			
Resistance	1mS(350W/16V)	20uS(350W/125V)		
Resolution	20uS(350W/80V)	0.5uS(350W/500V)		
Resistance	100 $\Omega$ : $\pm(0.5\%$ set + 0.1S)	5K $\Omega$ : $\pm(0.5\%$ set + 0.02S)		
Accuracy	5k $\Omega$ : $\pm(0.5\%$ set + 0.01S)	200k $\Omega$ : $\pm(0.5\%$ set + 0.005S)		

### MEASUREMENT

#### VOLTAGE READBACK

Range	0~16V	0~80V	0~125V	0~500V
Resolution	0.32mV	1.6mV	2.5mV	10mV
Accuracy	$\pm(0.025\%$ set + 0.025% F.S.)		$\pm(0.025\%$ set + 0.025% F.S.)	

#### CURRENT READBACK

Range	0~7A	0~70A	0~1A	0~10A
Resolution	0.14mA	1.4mA	0.02mA	0.2mA
Accuracy	$\pm(0.05\%$ set + 0.05% F.S.)		$\pm(0.05\%$ set + 0.05% F.S.)	



**POWER READBACK**

Range	0~35W	0~350W	0~35W	0~350W
Accuracy	$\pm(0.1\%\text{set} + 0.1\% \text{ F.S.}^{*1})$		$\pm(0.1\%\text{set} + 0.1\% \text{ F.S.}^{*1})$	

NOTE : \*1 : Power F.S. = Vrange F.S. x Irange F.S.

**PROTECTIVE**
**Over Power Protection**

Range	1~357W	1~357W
Resolution	1.75W	1.75W
Accuracy	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$

**Over Current Protection**

Range	0~71.4A	0~10.2A
Resolution	0.175A	0.025A
Accuracy	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$

**Over Voltage Protection**

Range	1~81.6V	1~510V
Resolution	0.2V	1.25V
Accuracy	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$	$\pm(2\%\text{set} + 0.25\% \text{ F.S.})$

Over  $\cong 85^{\circ}\text{C}$

$\cong 85^{\circ}\text{C}$

Temperature

Protection

**Rated Power Protection:**

Value	385W	385W
Accuracy	$\pm 2\%\text{set}$	$\pm 2\%\text{set}$

**GENERAL**
**SHORT CIRCUIT**

Current(CC)	$\cong 7.7/7\text{A}$	$\cong 77/70\text{A}$	$\cong 1.1/1\text{A}$	$\cong 11/10\text{A}$
Voltage(CV)	0V	0V	0V	0V
Resistance(CR)	$\cong 1.25\Omega$	$\cong 0.025\Omega$	$\cong 50\Omega$	$\cong 1.25\Omega$

INPUT 500k $\Omega$ (Typical)


500k $\Omega$ (Typical)

RESISTANCE


(LOAD OFF)

## Dimensions

### PEL-2002A/PEL-2004A

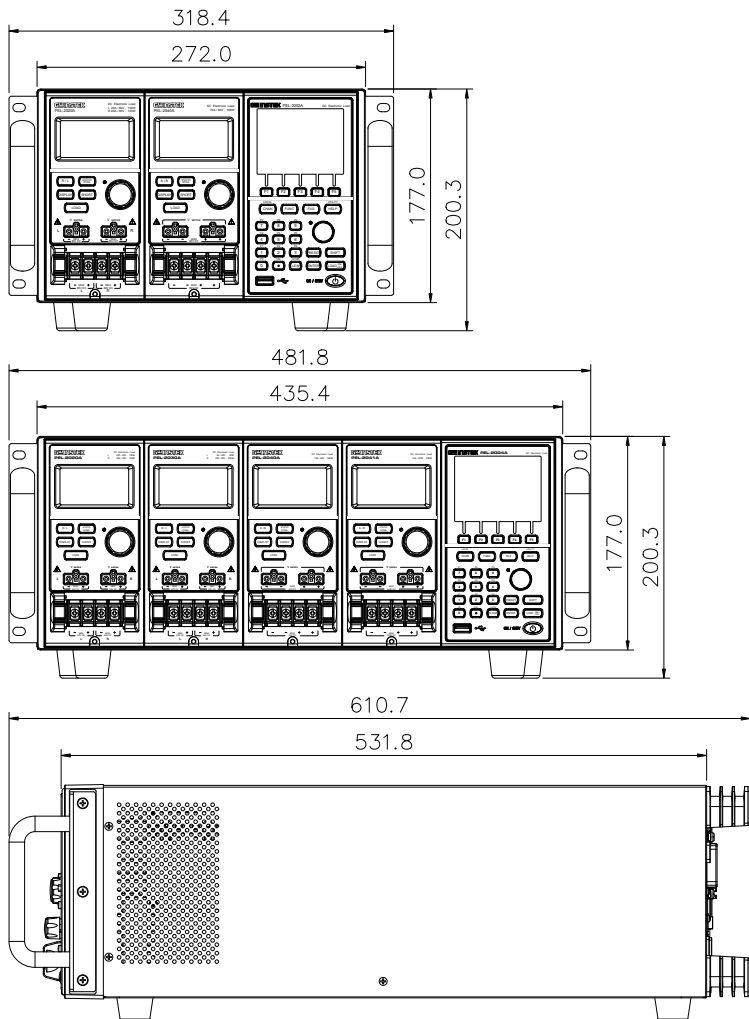

PEL-2020A/PEL-2030A/PEL-2040A/PEL2041A

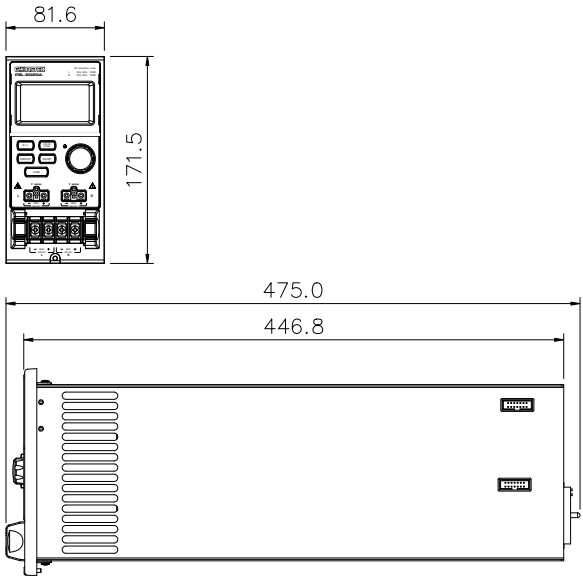

## EC Declaration of Conformity

We

**GOOD WILL INSTRUMENT CO., LTD.**

No. 7-1, Jhongsing Rd, Tucheng Dist., New Taipei City 236, Taiwan

**GOOD WILL INSTRUMENT (SUZHOU) CO., LTD.**

No. 69 Lushan Road, Suzhou New District Jiangsu, China.

declare that the below mentioned product

**Type of Product: Programmable Electronic Load**

**Model number:** PEL-2004, PEL-2004A, PEL-2002, PEL-2002A.

**Load module:** PEL-2002, PEL-2020A, PEL-2030, PEL-2030A, PEL-2040, PEL-2040A, PEL-2041A, PEL-2041A.

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2004/108/EC and 2014/30/EU) and Low Voltage Directive (2006/95/EC and 2014/35/EU).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

◎ EMC	
EN 61326-1 EN 61326-2-1	Electrical equipment for measurement, control and laboratory use -- EMC requirements (2013)
Conducted Emission Radiated Emission EN55011: 2009+A1: 2010	Electrostatic Discharge EN 61000-4-2: 2009
Current Harmonics EN 61000-3-2: 2014	Radiated Immunity EN 61000-4-3: 2006 +A1:2008+A2:2010
Voltage Fluctuations EN 61000-3-3: 2013	Electrical Fast Transients EN 61000-4-4: 2012
-----	Surge Immunity EN 61000-4-5: 2006
-----	Conducted Susceptibility EN 61000-4-6: 2014
-----	Power Frequency Magnetic Field EN 61000-4-8: 2010
-----	Voltage Dip/ Interruption EN 61000-4-11: 2004
Low Voltage Equipment Directive 2006/95/EC and 2014/35/EU	
Safety Requirements	EN 61010-1: 2010 EN 61010-2-030: 2010

# I NDEX

Alarm configuration .....	224	Channel duration time	
All Chan save/recall		settings mode description ..	83
description .....	101	Cleaning the instrument.....	7
Baud rate configuration.....	231	Clear key.....	19
Brightness & contrast.....	219	Configuration mode	
Calibration .....	279	description .....	87
Calibration key .....	19	Connection	
CC vrange mode description..	89	Channel control.....	59
CC+CV mode.....	71	Frame link.....	57
Channel configuration		Go/NoGo control .....	62
CC voltage range.....	192	Remote sense.....	50
Go/NoGo mode .....	208	Wire gauge .....	46
Go/NoGo On/Off.....	209, 214	Wire Inductance.....	46
Independent setting.....	198	Connection procedure .....	48
Load delay time.....	200	Constant power mode	
Parallel mode .....	211	description .....	73
Protection All Clear.....	191	Constant Resistance mode	
Response time.....	206	description .....	67
SPEC test ON/OFF .....	209, 214	Constant voltage + constant	
Step resolution .....	202	current mode description...	71
Channel configuration		Constant voltage mode	
Configuration menu.....	187	description .....	70
OCP/OCV/OPP.....	188	Declaration of conformity ....	300
Channel configuration		Default Settings .....	285
Von voltage configuration .	194	Delay time mode description	92
Channel configuration		Dimensions .....	298
Short.....	195	Display key .....	30
Channel configuration		Display settings .....	219
channel control .....	197	Disposal instructions .....	8
Channel control configuration	197, 270	Dynamic constant current	
Channel control connection...	59	mode description .....	65
Channel control description ..	93	Dynamic loads Constant	
Channel control mode		Resistance mode description	68
description .....	91	EC Declaration of Conformity	300

EN61010	233
measurement category .....	6
Pollution degree .....	8
Enter key .....	21
Environment	
operation .....	7
Storage .....	8
External memory save	
description .....	100
External voltage mode	
description .....	93
Features .....	12
File format mode description	102
Firmware update .....	278
Frame control configuration	221
Frame Link configuration .....	271
Frame link connection .....	57
Front panel overview .....	17
Function Keys .....	17
Fuse	
rating .....	7
Fuse replacement .....	277
Go/NoGo Alarm Sound .....	225
Go/NoGo connection .....	62
Go/NoGo constant current	
mode description .....	66
Go/NoGo constant Resistance	
mode description .....	69
Go/NoGo constant voltage	
mode description .....	72
Go/NoGo interface	
configuration .....	274
GPIB card installation .....	40
GPIB configuration .....	233, 269
Independent configuration .	198
Independent mode description	91
Installation	
GPIB card .....	40
Load module .....	37
Rack mount .....	41
Interface configuration .....	268
Baud Rate .....	231
GPIB .....	233
Interface menu .....	230
RS232 .....	231
USB configuration .....	234
Internal memory save	
description .....	100
Knob configuration .....	223
Language Settings .....	229
List of features .....	12
Load (module )key .....	31
Load connections .....	45
Load Connections	
Auxiliary voltage connection	53
DC Connection .....	53
Dual channel load module .....	52
Low voltage connections .....	53
Multiple output power source	56
Parallel load modules .....	54
Parallel loads .....	54
Parallel mainframes .....	55
Precautions .....	45
Single channel load module .....	52
Single load .....	52
Load delay time configuration	200
Load D-Time mode	
description .....	92
Load key .....	21
Load Menu .....	217
Load module installation .....	37
Load module Overview .....	30
Load profiling description ....	80
Load terminals .....	31
Load wire induction .....	46
Load wiring .....	47
Local operation	
A&B Value .....	124
Channel selection .....	124
coarse mode .....	129
Display .....	128
Dynamic .....	125
Editing the load .....	129
fine mode .....	129
Load .....	126

Operation.....	123	Program Sequences .....	156
R/L keys .....	124	Programming .....	156
Shorting .....	127	Recall default chain .....	163
Static.....	125	Recall default sequence.....	160
Lock key .....	19	Run Sequence.....	176
Mainframe configuration		Save chain.....	163
alarm sound .....	224	Save Program chain.....	163
Brightness & contrast.....	219	Save sequence .....	160
Configuration menu.....	215	Sequence loop .....	172
Frame control.....	221	Trig out .....	174
Go/NoGo Tone .....	225	Measurement types.....	15, 16
Knob type .....	223	Memory data description.....	98
Language .....	229	Number pad.....	19
Load menu .....	217	OCP test automation.....	179
Slave knob .....	227	OCP Test Automation	
Speaker .....	218	description .....	85
System Info.....	216	Operating configurations	
Utility menu .....	216	mode description .....	89
Mainframe operation		Operating Description .....	63
CC Dynamic mode.....	135	Operating Modes	
CC Mode.....	133	Channel duration time	
CC Range.....	134	settings.....	83
CC Static mode .....	137	Configuration.....	87
CC Static Values.....	138	Configuration - Over current	
Channel duration time		protection .....	88
settings .....	174	Configuration - Over power	
Channel Selection .....	131, 132	protection .....	89
CP Current limit .....	153	Configuration - Over voltage	
CP mode .....	152	protection .....	88
CP Power values.....	153	Constant current - Go/NoGo66	
CP range .....	155	Constant current - Slew rate 66	
CR Range .....	141	Constant current -Dynamic..65	
CR Static Parameters.....	145	Constant current -static.....65	
CR Dynamic mode .....	142	Constant Power.....	73
CR mode .....	141	Constant Resistance.....	67
CR Static mode .....	145	Constant Resistance -	
CV Current limit.....	149	Dynamic loading.....	68
CV mode .....	148	Constant Resistance - Slew	
CV response speed .....	151	rate.....	69
CV Voltage values .....	149	Constant Resistance	
Edit Sequence.....	169	Go/NoGo .....	69
OCP test automation.....	179	Constant Voltage .....	70
Program chain.....	161	Constant Voltage - Response	
Program Execution.....	163	speed .....	72

Constant Voltage + Constant Current Mode.....	71	Over voltage mode description.....	88
Constant Voltage -Go/NoGo.....	72	Overview .....	13
Constant Voltage -levels .....	70	Display Overview .....	23
External Voltage Control.....	93	Front panel .....	17
File format .....	102	LED display .....	34
File System .....	97	Load module .....	30
Go/NoGo.....	79	Rear Panel.....	27
Interface.....	97	Parallel Dynamic loading description.....	86
Memory data .....	98	pass/fail test multiple step tutorial .....	105
Operating Configuration s - Von Voltage.....	90	Power key .....	22
Operating Configurations.....	89	Power supply Safety information.....	7
Operating Configurations - CC vrange.....	89	Power up .....	43
Operating Configurations - independent .....	91	Power up sequence .....	43
Operating Configurations - Load D-Time .....	92	Preset data description .....	98
Operating Configurations - Short .....	91	Preset key .....	20
Operating Configurations - Step Resolution .....	92	Program Chain mode description.....	79
Parallel Dynamic Loading .....	86	Program mode description ...	77
Preset data.....	98	Protection All clear.....	191
Program Chain .....	79	Quick save Presets to internal memory .....	263
Reverse voltage protection ..	89	R/L key.....	30
Run Program .....	77	Rack mount installation.....	41
save/recall All Chan.....	101	Range Chart .....	280
SEQ data.....	99	Recall factory defaults .....	266
Sequences.....	80	Recall Memory data to USB .....	251
Setup data .....	99	Recall Presets - Framelink ...	265
Trig Out.....	82	Recall Setups - Framelink ....	264
USB save/recall.....	101	Remote sense connections.....	50
Operation Contents .....	119	Response speed constant voltage mode description..	72
Local load.....	123	Response time .....	206
Operation Environment .....	7	Reverse voltage protection....	89
Operation keys.....	20	RS232 configuration .....	231
Over Current mode description.....	88	RS-232C configuration.....	268
Over power mode description.....	89	Safety Instructions.....	5
Over protection configuration .....	188	Safety symbols .....	5
		Save Memory data.....	237



- Save Memory data to USB ...251
- Save Preset memory .....239
- Save presets to USB.....255
- Save Sequences to USB.....259
- Save setup memory.....241
- Save setup to USB .....248
- Save to internal memory237, 243
- Save to internal setup memory241
- Save/Recall
  - default USB path ..... 243
  - FrameLink Preset Recall..... 265
  - FrameLink Setup Recall..... 264
  - Preset memory ..... 239
  - Quick save Presets to internal memory ..... 263
  - Recall factory defaults ..... 266
  - Recall Memory data to USB251
  - Save Memory data to USB.. 251
  - Save Preset Memory ..... 239
  - Save presets to USB..... 255
  - Save SEQ (Sequences) to USB259
  - Save setup to USB..... 248
  - Save to internal Memory .... 243
  - Save to setup Memory ..... 241
  - Setup memory..... 241
  - USB path..... 243
- Save/Recall
  - File menu ..... 236
  - Memory data..... 237
  - Save to internal Memory .... 237
- Selector Knob .....20
- SEQ data description .....99
- Sequence editing/creating...169
- Sequence mode description...80
- Sequences mode description .77
- service contance point .....276
- Setup data description.....99
- Shift key .....21
- Short configuration .....195
- Short key .....33
- Shorting mode description ....91
- Slave knob
  - settings..... 227
- Slave knob
  - description.....32
- Slew rage constant current
  - mode description .....66
- Slew rate Constant Resistance
  - mode description .....69
- Speaker Settings .....218
- Specifications .....287
  - PEL-2030A ..... 291
- Static constant current mode
  - description .....65
- Static/ Dynamic key .....32
- Step resolution.....202
- Step Resolution mode
  - description .....92
- Storage Environment.....8
- System Info .....216
- System Keys.....18
- Terminals.....31
- Trig out .....174
- Trig out mode description ....82
- Tutorials
  - Channel control.....116
  - Frame link.....114
  - General configuration options118
  - Local load .....105
  - Parallel load.....109
  - Program .....113
  - Single load .....107
- Tutorials
  - Basic Operation.....104
- Twisted pair description .....47
- UK power cord .....9
- USB configuration.....234
- USB path.....243
- USB remote interface
  - connection .....275
- USB save/recall description 101
- Utility Menu.....216
- View parallel information ....213
- Voltage levels constant
  - voltage mode description ..70

Voltage sense terminal.....	31	Wire gauge .....	45
Von voltage configuration ..	194	Wire induction.....	46
Von voltage mode description	90	Wiring procedure .....	48
Wire Connections .....	45		