



LEOPARD FAMILY

DL-40-HZ

**Leopard Line Frequency Meter
4 Digit 0.56" LEDs
in a 1/8 DIN CASE**



Optional Large 0.8" Green and Red LED Display

Optional Green LED Display

Optional Custom Faceplate

**AC Frequency Meter Controller and Transmitter
with ranges of 0.01Hz, 0.1Hz and 1Hz**

General Features

- Line Frequency input. Easily user scaled.
- Three frequency ranges of 99.99Hz, 999.9Hz and 9999Hz.
- Optional isolated 16 bit analog output. User or factory scalable to 4 to 20 mA, 0 to 20 mA or 0 to 10 V across any desired digital span from \pm one count to the full scale range of 0 to 9999.
- Standard red or optional green or super bright red 4-digit LED
- Red or green 0.8" LED large display option.
- Four annunciator LEDs provide front panel alarm status indication for up to four setpoints.
- Optional relays. Two 9 Amp Form C and two 4 Amp Form A relay, or optionally four 4 Amp Form A relays are available.

Software Features

- Three-button programming from the front panel (UP, DOWN and PROGRAM buttons).
- Three front panel selectable ranges.
- Front panel selectable four-level brightness control of digital display, and setpoint LEDs.
- Four programmable setpoints.
- Relay activation can be selected to occur above (HI) or below (LO) each setpoint.
- Hysteresis setting for all four setpoints. Delay on make and delay on break for SP1 and SP2.
- Peak and Valley. View and Reset.

Specifications

Input Specs: Depends on Input Signal Conditioner
A/D Converter: 14 Bit Single Slope
Accuracy: \pm (0.05% of reading + 2 counts)
Temp. Coeff.: 100 ppm/ $^{\circ}$ C (Typical)
Warm up time: 2 minutes
Conversion Rate: 5 conversions per second (Typical)
Display: **4 digit 0.56" Red LED display (std)**,
 0.56" Green, 0.8" Red/Green, or
 0.56" Super Bright Red are optional.
 Range 0 to 9999 counts.
Polarity: Assumed positive. Displays – negative
Decimal Selection: Automatic by resolution select XXX•X
Positive Overrange: Top segments of digital display flash
Negative Overrange: Bottom segments of digital display flash
Relay Output: Two 4 Amp Form A relays and two 9
 Amp Form C, or 4 Amp form A relays.
Analog Output: Isolated 16 bit user scalable mA or V
 AIC (mA out) 4-20 mA @ 0 to 500 Ω max loop resistance
 AIV (volts out) 0-10 V DC @ 500 Ω or higher resistance
Power Supply: AC/DC Auto sensing wide range supply
PS1 (std) **85-265 VAC 50-400Hz / 95-300 VDC @ 3W**
 PS2 15-48 VAC 50-400HZ / 10-72 VDC @ 2.5W
Operating Temp.: 0 to 50 $^{\circ}$ C
Storage Temp.: –20 $^{\circ}$ C to 70 $^{\circ}$ C.
Relative Humidity: 95% (non condensing)
Case Dimensions: 1 1/8 DIN, Bezel: 96x48 mm
 (3.78"x1.89")
 Depth behind bezel: 117 mm (4.61")
 Plus 11.8 mm (0.47") for Right-angled
 connectors, or plus 20 mm (0.79") for
 Straight-thru connector.
Weight: 6.5 oz., 8.5 oz when packed

Index

Case Dimensions	8	Digital Span Selection for Analog Range Output	5	Range, Decimal Point & Brightness Selection	5
Clear Lockable Water-proof Lens Cover OP-N4X/96X48 ..	9	General Features	1	Setpoint Setting & Relay Configuration Mode	6
Component Layout	8	Glossary of Programming Symbols	2	Software Features	1
Connector Pinouts	7	Metal Surround Case OP-MTL96X48	9	Software Logic Tree	3
Controls and Indicators	2	Ordering Information	10	Specifications	1
Digital Rescaling	4	Pin Descriptions	7	Two Point Analog Output Range Setting & Calibration ..	5
Digital Rescaling Procedure	4				



Front Panel Buttons

Program Button

The **[P]** button is used to move from one program step to the next. When pressed at the same time as the **[↑]** button, it initiates the **calibration mode**. When pressed at the same time as the **[↓]** button, it initiates the **setpoint setting mode**.

Up Button

When in the operational display, pressing the **[↑]** button alone allows you to view, but not change, the setting of **setpoint 1**.

When in the **calibration mode** or the **setpoint setting mode** the **[↑]** button is used to increase the value of the displayed parameter.

Down Button


When in the operational display, pressing the **[↓]** button alone allows you to view, but not change, the setting of **setpoint 2**.

When in the **calibration mode** or the **setpoint setting mode** the **[↓]** button is used to decrease the value of the displayed parameter.


Glossary of Programming Symbols

To explain software programming procedures, logic diagrams are used to visually assist in following the programming steps. The following symbols are used throughout the logic diagrams to represent the buttons and indicators on the meter:


Symbol	Explanation
	This symbol represents the OPERATIONAL DISPLAY.
	This is the PROGRAM button.
	This is the UP button.
	This is the DOWN button.
	When a button is shown, press and release it to go onto the next step in the direction indicated by the arrow. When an alternative dotted line is shown, this indicates that an alternative logic branch will be followed when a particular option is present.
	When two buttons are shown side by side and enclosed by a dotted line, they must be pressed at the same time then released to go onto the next programming step.
	If the display is shown with XXXX it means the value displayed will be the previously set value. When a number is shown it indicates the initial factory default setting or a specific "example number".

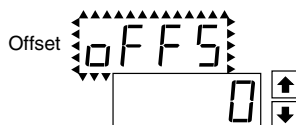


When two displays are shown together with bursts, this indicates that the display is toggling (flashing) between the name of the function and the value.




Text or numbers shown between square brackets in a procedure indicate the programming code name of the function or the value displayed on the meter display.



When the **[↑]** and **[↓]** buttons are shown together, the display value can be increased by pressing and releasing the **[↑]** button or decreased by pressing and releasing the **[↓]** button.



When the **[↑]** and **[↓]** buttons are shown with two displays, either display can be selected by pressing and releasing the **[↑]** or **[↓]** buttons.

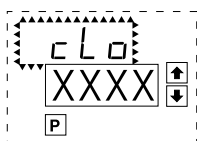


When there are more than two display selections they are shown in brackets below the first display and are also selectable by pressing and releasing the **[↑]** or **[↓]** buttons.

A dotted box indicates these functions are omitted or bypassed when the related hardware is not present

Software Logic Tree for DL-40F Leopard Frequency Meter

The DL-40F is an intelligent meter with a hierarchical software structure designed for easy programming and operation, as shown below in the software logic tree.

After the meter has been powered up, the four digits light up for three seconds and then settle to the operational display indicating the input signal.

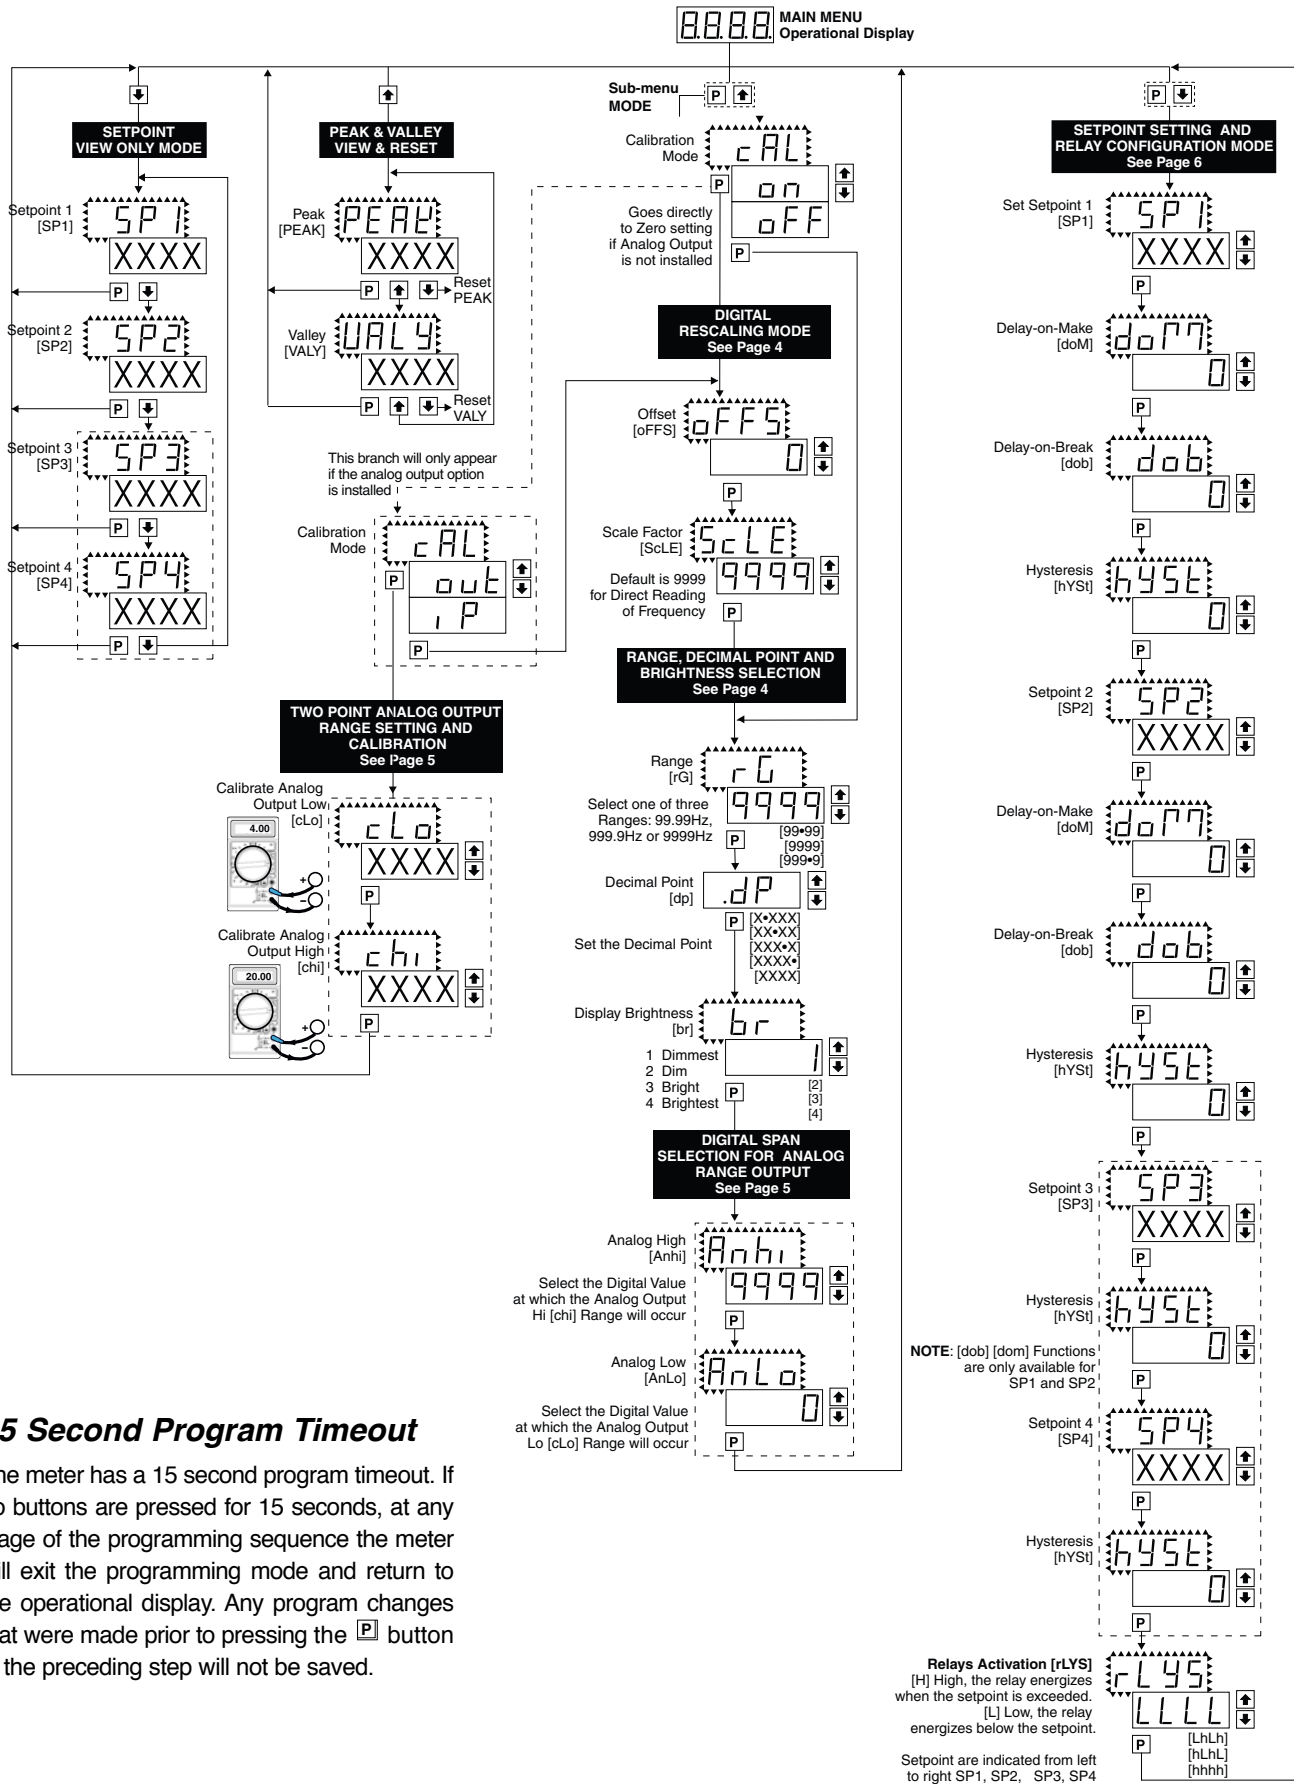

15 Second Program Timeout

The meter has a 15 second program timeout. If no buttons are pressed for 15 seconds, at any stage of the programming sequence the meter will exit the programming mode and return to the operational display. Any program changes that were made prior to pressing the **P** button in the preceding step will not be saved.

Digital Rescaling

This Frequency meter may be rescaled without the necessity of applying an external signal by changing the Offset and Scale factor.

Offset is the reading that the meter will display for a zero input. The Offset may be set to any value from -1999 to +9999. The default value of the Offset is 000.

Scale factor is the digital gain of the meter. The displayed reading is directly proportional to the Scale factor. The default value of the scale factor is 9999, for direct frequency measurement, but it may be set to any value between -1999 and +9999 for reading any desired engineering unit.

Digital Rescaling Procedure

STEP A Enter the Calibration Mode

- 1) Press the **[P]** and **[↑]** buttons at the same time.
Display toggles between [cAL] and [oFF].
- 2) Press the **[↑]** or **[↓]** button.
Display changes from [oFF] to [on].
- 3) Press the **[P]** button. Display toggles between [cAL] and [out].

STEP B Select Between Calibration of Input or Output

Note: If the analog output option is not present, Step B is skipped and the program goes directly from Step A to Step C.

- 1) Press the **[↑]** or **[↓]** button to select the display toggling from [cAL] to [iP].
- 2) Press the **[P]** button. Display toggles between [oFFS] and the previous offset setting.

STEP C Set the Offset

- 1) Press the **[P]** button. Display toggles between [oFFS] and the previous offset setting. For direct frequency measurement, set the offset to 0.
If a display that is scaled to read in engineering units is required, this offset may be set to any value from -1999 to +9999.
- 2) Press the **[P]** button. Display toggles between [rG] and the previous setting. (See page 5 for setting range, decimal point and brightness)

STEP D Set the Scale Factor

- 1) Press the **[↑]** or **[↓]** button. Display changes from [out] to [iP].
- 2) Press the **[P]** button. Display toggles between [ScLE] and the previous scale setting.
- 3) For direct frequency measurement, set the scale to 9999.
If a display that is scaled to read in engineering units is required, this scale factor may be set to any value from 0 to 9999.

The Digital Rescaling Procedure Mode is Now Complete.

The menu branches to the RANGE, DECIMAL POINT AND BRIGHTNESS SELECTION.

Range, Decimal Point and Brightness Selection

STEP E Select the Range


- 1) Using the **[↑]** and **[↓]** buttons, select the required range. There are three ranges of 99.99Hz, 999.9Hz and 9999Hz
- 2) Press the **[P]** button. Display shows the previous [dp] decimal point selection.

STEP F Select the Decimal Point

- 1) Using the **[↑]** and **[↓]** buttons, adjust the display to the desired decimal point setting.
- 2) Press the **[P]** button. Display toggles between [br] and the previous brightness setting.

STEP G Set the Display Brightness

- 1) Using the **[↑]** and **[↓]** buttons, adjust the display to the desired brightness setting (4 is the brightest setting).
- 2) Press the **[P]** button. Display brightness changes to new setting and display toggles between [Anhi] and the previous [Anhi] setting.

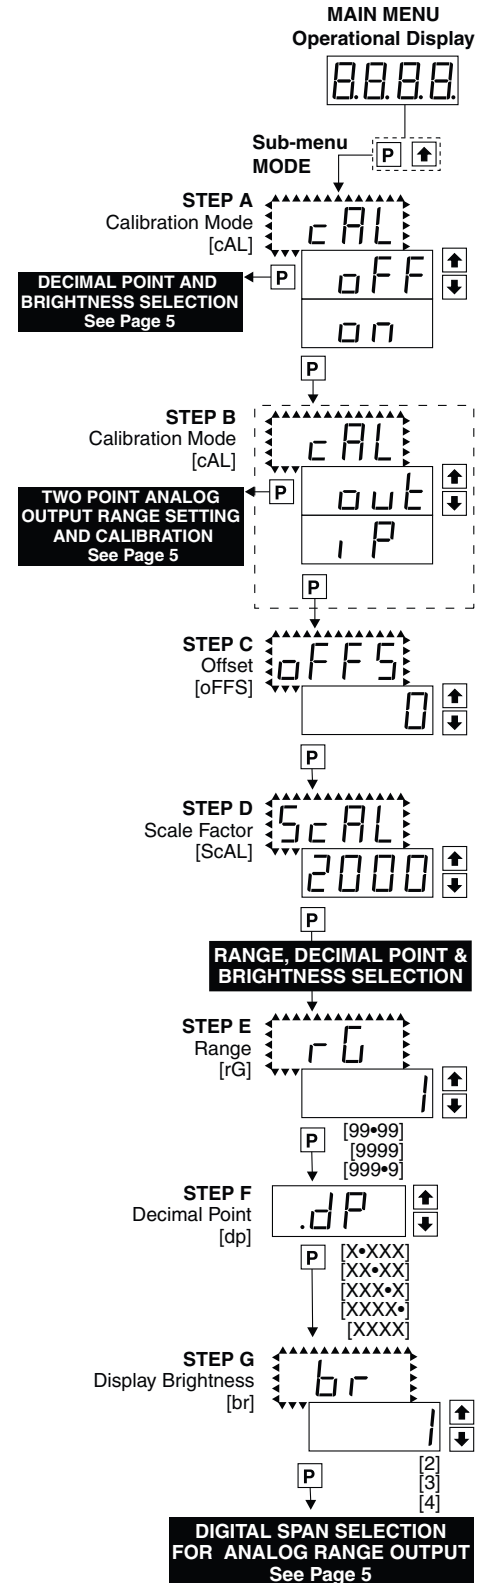

Two Point Analog Output Range Setting and Calibration

STEP A Enter the Calibration Mode

- 1) Press the **[P]** and **[↑]** buttons at the same time. Display toggles between [cAL] and [oFF].
- 2) Press the **[↓]** or **[P]** button. Display changes from [oFF] to [on].
- 3) Press the **[P]** button. Display toggles between [cAL] and [out] input calibration.

Note: If at this point the display skips directly to toggle between [oFFS] and the previous [oFFS] setting, the software is detecting that the optional analog output hardware is NOT installed.

STEP B Enter the Analog [oUT] Output Mode

- 1) Press the **[P]** button. Display toggles between [cLo] and an internal scale factor.

STEP C Set or Calibrate the [cLo] Low Analog Output Range

- 1) Select the voltage or current loop output header position on the output module. (See Component Layout on page 9).
- 2) Connect a multimeter to pins 16 and 17 on the output module. (See Rear Panel Pinouts on page 8). Using the **[↑]** and **[↓]** buttons, adjust the analog output to the desired low value as shown on the multimeter display. cLo may be adjusted to any value from -0.3 mA to 17 mA (mA output selected) or from -0.6 V to 8 V (volt output selected)
- 3) Press the **[P]** button. Display toggles between [cHi] and an internal scale factor.

STEP D Set or Calibrate the [cHi] High Analog Output Range

- 1) Using the **[↑]** and **[↓]** buttons, adjust the analog output to the desired high value as shown on the multimeter display. cHi may be adjusted to any value from 17 mA to 21 mA (mA output selected) or from 8 V to 10.3 V (volt output selected). However, the value must be higher than the value selected for cLo.
- 2) Press the **[P]** button. The display exits the calibration mode and returns to the operational display.

Note: Having established the Low and High range of the analog output, the two digital points between which the analog output will occur can now be selected. (See Digital Span Selection below).

Range, Decimal Point and Brightness Selection

STEP A Enter the Range, Decimal Point and Brightness Mode Through the Sub Menu [CAL] [oFF]

- 1) Press the **[P]** and **[↑]** buttons at the same time. Display toggles between [cAL] and [oFF].
- 2) Press the **[P]** button. Display shows previous [rG] selection.
- 3) Press the **[P]** button 3 times to enter the Digital Span Section for Analog Range Output.

Note: For details on selecting Range, Decimal Point and Brightness see page 4.

Digital Span Selection for Analog Range Output


STEP E Selecting the [Anhi] Digital Value for Analog High Output

- 1) Using the **[↑]** and **[↓]** buttons, adjust the display to the desired digital value at which the [chi] Calibrated Analog High output will occur. For digital readings outside the digital span selected, the analog output will linearly rise above the value set for chi, up to the maximum analog output capability. However, the analog output will not go lower than the calibrated value set for cLo (see below).
- 2) Press the **[P]** button. Display toggles between [AnLo] and previous [AnLo] setting.

STEP F Selecting the [AnLo] Digital Value for Analog Low Output

- 1) Using the **[↑]** and **[↓]** buttons, adjust the display to the desired digital value at which the [cLo] Calibrated Analog Low output will occur. For Digital readings outside the Digital Span selected, the analog output will not go lower than the calibrated value set for cLo.
- 2) Press the **[P]** button. The display toggles between [cto] and [oFF].

Note: Any two digital span points from -1999 to 9999 can be selected. The digital values for [Anhi] analog high and [AnLo] analog low can be reversed to provide a 20 to 4mA output. The digital span selected can be as small as two counts, when using the analog output to function as a Control or Alarm Driver. Small digital spans will cause the high resolution 16 bit D to A to increment digitally in stair case steps.

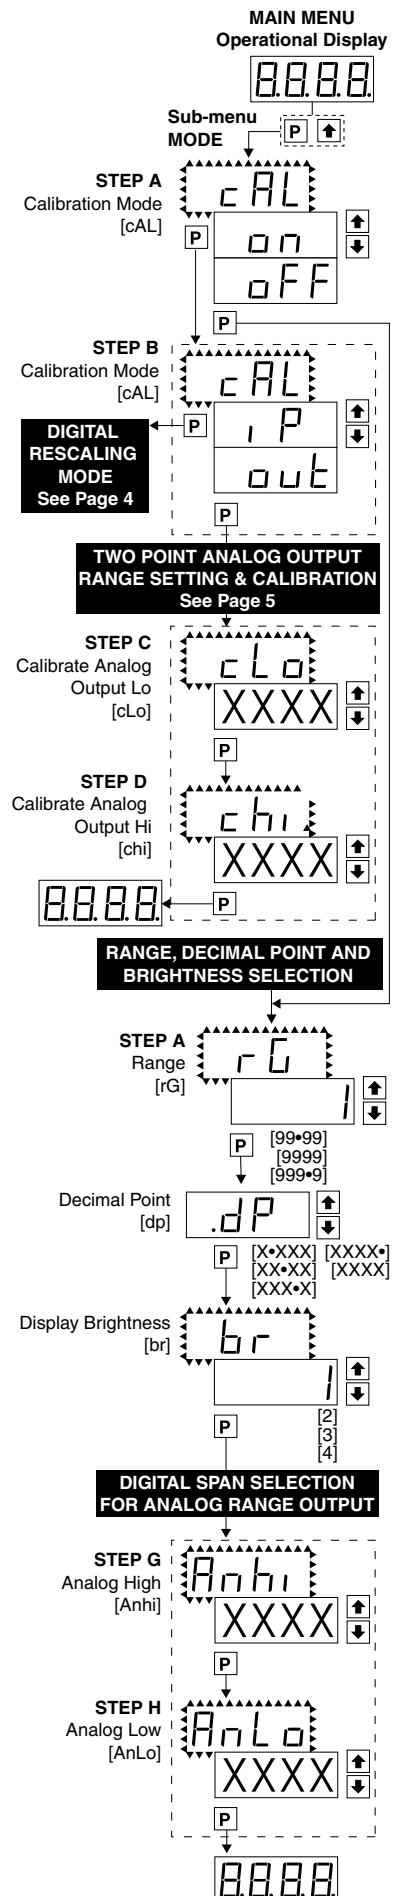

Setpoint Setting and Relay Configuration Mode

The following programming steps are required to enter the setpoint values and configure the relay functions in a meter with four relays using four setpoints. Generally if less than four relays are installed the software auto detects missing relays and deletes reference to them from the menu. In some cases setpoints without relays are operational for display only purposes.

STEP A Enter the Setpoint Mode

- 1) Press the **P** and **↓** buttons at the same time.
Display toggles between [SP1] and the previous [SP1] setting.

STEP B Set Setpoint 1 (SP1)

- 1) Using the **↑** and **↓** buttons, adjust the display to the desired SP1 value.
- 2) Press the **P** button. Display toggles between [doM] and the previous [doM] setting.

STEP C Set the SP1 Delay-on-Make (doM) Delay Time Setting

- 1) Using the **↑** and **↓** buttons, adjust the display to the desired [doM] value (0 to 9999 seconds). The reading must continuously remain in an alarm condition until this delay time has elapsed before the relay will make contact (energize).
- 2) Press the **P** button. Display toggles between [dob] and the previous [dob] setting.

STEP D Set the SP1 Delay-on-Break (dob) Delay Time Setting

- 1) Using the **↑** and **↓** buttons, adjust the display to the desired [dob] value (0 to 9999 seconds). The reading must continuously remain in an alarm condition until this delay time has elapsed before the relay will break contact (de-energize).
- 2) Press the **P** button. Display toggles between [hYSt] and the previous [hYSt] setting.

STEP E Set the Hysteresis Setting for Setpoint 1

- 1) Using the **↑** and **↓** buttons, adjust the display to the desired hysteresis [hYSt] value.
 - 2) Press the **P** button. Display toggles between [SP2] and the previous [SP2] setting.
- NOTE:** Half of the Hysteresis value selected is applied above and below the setpoint.

NOTE: Steps F, G, H and J have functionally the same procedure as steps B, C, D, and E shown above.

STEP F Set Setpoint 2 (SP2)

STEP G Set the SP2 Delay-on-Make (doM) Delay Time Setting

STEP H Set the SP2 Delay-on-Break (dob) Delay Time Setting

STEP I Set the Hysteresis Setting for Setpoint 2

- 1) Using the **↑** and **↓** buttons, adjust the display to the desired hysteresis [hYSt] value.
- 2) Press the **P** button. Display toggles between [SP3] and the previous [SP4] setting.

STEP J Set Setpoint 3 (SP3) (No [doM] or [dob])

- 1) Using the **↑** and **↓** buttons, adjust the display to the desired SP3 value.
- 2) Press the **P** button. Display toggles between [hYSt] and the previous [hYSt] setting.

STEP K Set the Hysteresis Setting for Setpoint 3

- 1) Using the **↑** and **↓** buttons, adjust the display to the desired hysteresis [hYSt] value.
- 2) Press the **P** button. Display toggles between [SP4] and the previous [SP4] setting.

STEP L Set Setpoint 4 (SP4) (No [doM] or [dob])


- 1) Using the **↑** and **↓** buttons, adjust the display to the desired SP4 value.
- 2) Press the **P** button. Display toggles between [hYSt] and 0.

STEP M Set the Hysteresis Setting for Setpoint 4

- 1) Using the **↑** and **↓** buttons, adjust the display to the desired hysteresis [hYSt] value.
- 2) Press the **P** button. Display toggles between [rLYS] and the previous relay setting.

STEP N Set Relay Activation mode [rLYS]

- (h) High the relay energizes when the setpoint is exceeded. (L) Low the relay energizes below the setpoint. The setpoint is indicated from left to right SP1, SP2, SP3, SP4.
- 1) Using the **↑** and **↓** buttons, adjust the reading on the display to the desired relay settings: [LLLL], [LhLh], [hLhL], [hhhh].
If only 2 relays installed [Lh] [hL] [hh] [LL].
 - 2) Press the **P** button.
The meter exits the setpoint mode and returns to the operational display.

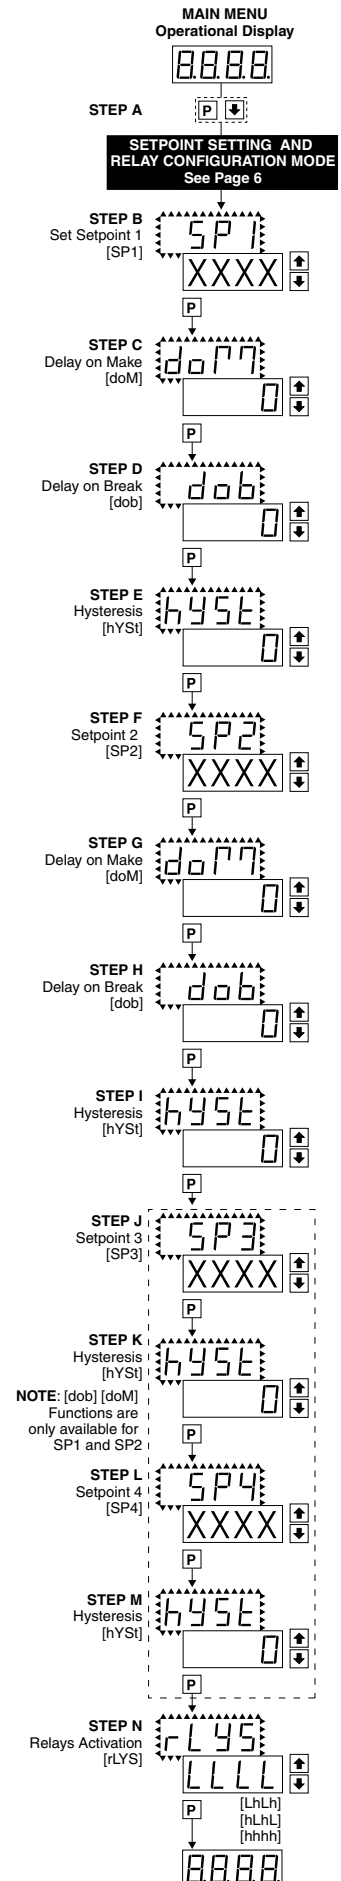

The Setpoint Relay programming mode is now complete.

Connector Pinouts


Pinout Diagram

The Rear View of the Meter diagram shows the meter with the relay configuration: dual 9 Amp Form C and dual 4 Amp Form A relays. An analog output module is also shown as installed.

The DL-40-ACA/DL-40-ACV use plug-in type screw terminal connectors for all input and output connections. The power supply connections (pins 14 and 15) have a unique plug and socket outline to prevent cross connection. The main board and input signal conditioner use right-angled connectors as standard. The output module uses straight-thru connectors as standard.



WARNING: AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

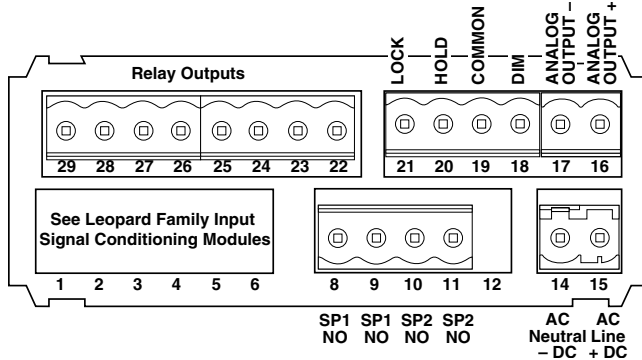

Auto-sensing AC/DC power supply. For voltages between 85-265 V AC / 95-300 V DC (PS1) or 18-48 V AC / 10-72 V DC (PS2).

Pin Descriptions

Input Signal – Pins 1 to 3

Pin 1 to 3 Input

Pins 8 to 12 – Relay Output Pins

Note: If relays for setpoints 1 & 2 are installed on the main board, and a relay output module is used that also has relays in the setpoints 1 & 2 positions, the duplicate relays will operate in unison.

- Pin 8 SP1 NO.
- Pin 9 SP1 NO. Normally Open 4 Amp Form A.
- Pin 10 SP2 NO.
- Pin 11 SP2 NO. Normally Open 4 Amp Form A.
- Pin 12 NO CONNECTION.

Pins 14 and 15 – AC/DC Power Input

Auto-sensing AC/DC power supply. For voltages between 85-265 V AC/95-300 V DC (PS1) or 18-48 V AC/10-72 V DC (PS2).

- Pin 14 AC/DC Neutral. Neutral power supply line.
- Pin 15 AC/DC line. Live power supply line.

Optional Carrier Board Output Pins

Pins 16 and 17 – Analog Output

Pins 16 and 17 are the analog output pins on the optional output module. Their pin definitions are:

- Pin 16 Positive (+) analog output.
- Pin 17 Negative (-) analog output.

Pins 18 to 21 – Rear Panel Function Pins

Pins 18 to 21 provide functions that can be implemented with an external switch. Their pin definitions are:


- Pin 18 DIM. By connecting the display dim (DIM) pin to the COMMON pin, the display brightness setting is halved.
- Pin 19 COMMON. To activate the LOCK or DIM functions from the rear of the meter, the respective pins have to be connected to the COMMON pin. This pin is connected to the internal power supply ground.

Pin Descriptions (continued)


- Pin 20 HOLD. By connecting the HOLD pin to the COMMON pin, the displayed reading is frozen, however, A/D conversions continue. When the HOLD pin is disconnected from the COMMON pin, the correct reading is displayed.
- Pin 21 LOCK. By connecting the LOCK pin to the COMMON pin, the meter's programmed parameters can be viewed but not changed.

Pins 22 to 29 – Output Module Pins


Relay Modules with 4 Independent 300V (210mA DC only)

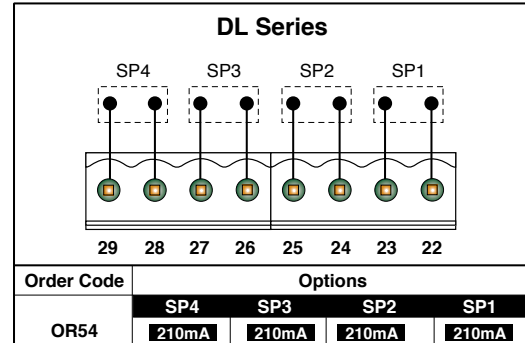

Relay Modules with 2 Non-Isolated 4A Form A Relays, and 2 Non-Isolated 9A Form C Relays

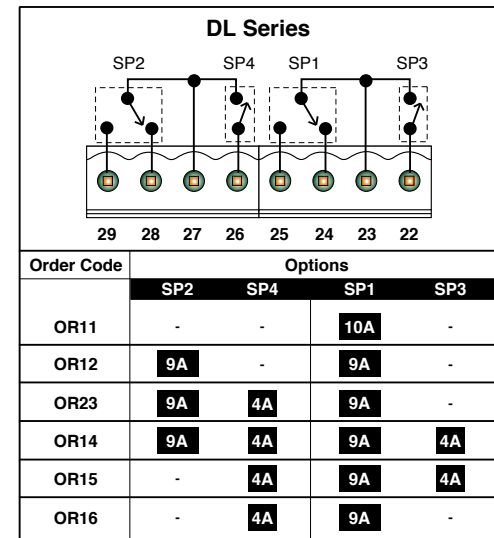


Relay Modules with 4 Isolated 5A Form A Relays

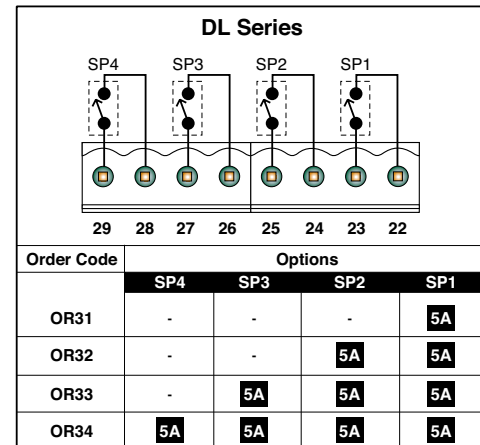


Component Layout

MAIN BOARD

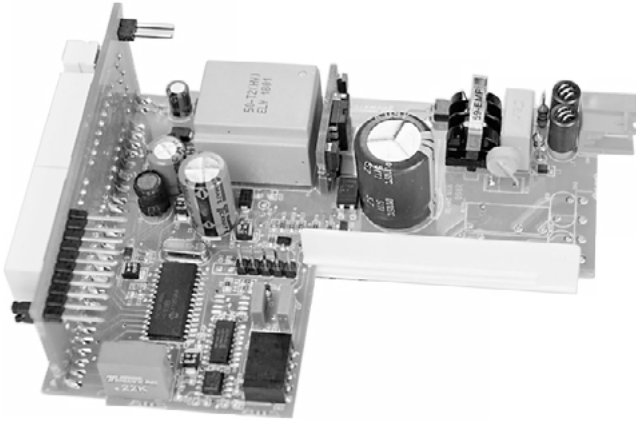


MAIN BOARD HI VOLTAGE

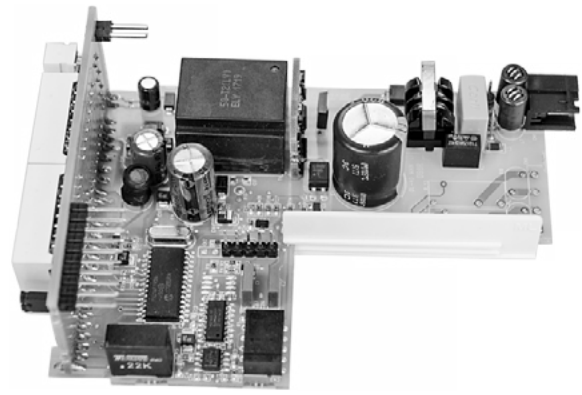


MAIN BOARD LOW VOLTAGE

Input Module IF08

Line Frequency 99.99/999.9/9999Hz

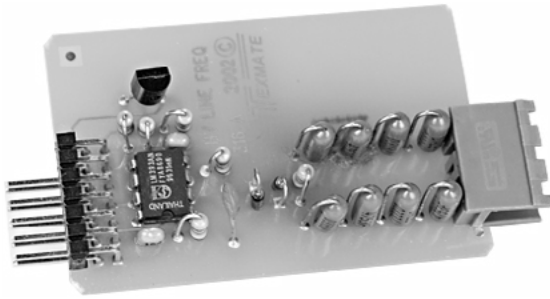

IF08: Line Frequency

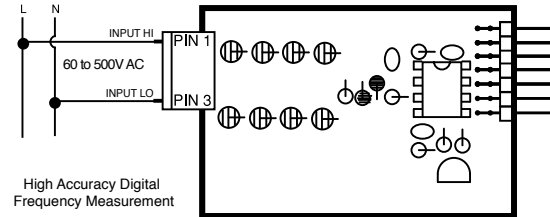

Case Dimensions

PANEL CUTOUT
Case will mount in standard 1/8 DIN cutouts *

4mm (0.16") 8 places
3mm (0.12") 8 places
1/8 DIN Cutout spacers

Mosaic Fitting 87.4mm* (3.45")
40.8mm* (1.61")
43.4mm (1.71")
45mm (1.77")
91.6mm (3.6")
92mm (3.62")
Loose Fitting

* These dimensions are increased by 1.6mm (0.06") when the metal surround case is installed.

FRONT VIEW
1/8 DIN 96x48mm

48mm (1.89")
96mm (3.78")
3.9mm (0.15") typical

SIDE VIEW

3.7mm (0.15")
43.4mm (1.71") DIN Cutout spacers
5.3mm (0.21")
117mm (4.61")
40.8mm (1.61")
11.8mm (0.47")

Straight-thru Connector for meters with output board 20mm (0.79")
Right-angled Connector

TOP VIEW

50mm (1.97") Max. panel thickness
96mm (3.78")
91.6mm (3.6") DIN Cutout Spacer
95.4mm (3.77")
87.4mm* (3.45") mosaic fitting
2mm (0.08") Connector Socket
4.7mm (0.19") DIN Cutout Spacer

To open rear cover, use a small flat bladescrew driver. Press down lightly to release catch on top or bottom of case and lever outwards.

For additional strength, extra Mounting Slide Clips can be ordered and doubled up one behind the other. P/N: (75-DMTCLIPF)

Metal Surround Case
P/N: (OP-MTL96X48) uses Metal Screw Mount Clips and has a max. panel thickness mounting of 15.5mm (0.61").
NOTE: The Metal Surround Case is pre-installed at the factory and cannot be removed without damage to the case.

Clear Lockable NEMA 4X Splash Proof Cover
P/N: (OP-N4/96x48)
Removable Key-lock
Safety Catch
Cam Opening

Various bezel colors are available. Black is standard.

When extra panel mounting tightness is required, order the optional screw mount clip. P/N: (OP-MTLCLIP)

Panel adaptor plates are available to retrofit most existing panel cutouts.

High Strength Panel Mounting Kit
P/N: OP-PMA96X48

The 96x48mm case is particularly suitable for mounting in mosaic panels or insulative panels up to 2" thick. They can also stack mount, 2 up in existing cutouts for 1/4 DIN (96x96mm) or 4 up in 1/2 DIN (96x192mm).

Installation Guidelines

Installation

1. Install and wire meter per local applicable codes/regulations, the particular application, and good installation practices.
2. Install meter in a location that does not exceed the maximum operating temperature and that provides good air circulation.
3. Separate input/output leads from power lines to protect the meter from external noise. Input/output leads should be routed as far away as possible from contactors, control relays, transformers and other noisy components. Shielding cables for input/output leads is recommended with shield connection to earth ground near the meter preferred.

4. A circuit breaker or disconnect switch is required to disconnect power to the meter. The breaker/switch should be in close proximity to the meter and marked as the disconnecting device for the meter or meter circuit. The circuit breaker or wall switch must be rated for the applied voltage (e.g., 120VAC or 240VAC) and current appropriate for the electrical application (e.g., 15A or 20A).

5. See *Case Dimensions* section for panel cut-out information.

6. See *Connector Pinouts* section for wiring.

7. Use 28-12 AWG wiring, minimum 90°C (HH) temperature rating. Strip wire approximately 0.3 in. (7-8 mm).

8. Recommended torque on all terminal plug screws is 4.5 lb-in (0.51 N-m).




Clear Lockable Water-proof Lens Cover OP-N4X/96X48



The clear lockable cover is designed to be dust and water proof to NEMA-4X, IP65 standards. The assembly consists of a base and cover with a cam hinge and key-lock fastening mechanism. An O-ring, or neoprene gasket forms a seal between the base and the panel. The cam hinge prevents the cover from closing when opened until pushed closed. The cover has a tapered recess that, when closed, forms a seal with a tapered spigot on the base. A key-lock employs a cam locking device to force the spigot into the recess, ensuring seal integrity. A safety catch keeps the cover closed even when the key is removed, and the keyhole can be used to attach a safety seal clip, preventing unauthorized opening.

Metal Surround Case Option OP-MTL96X48

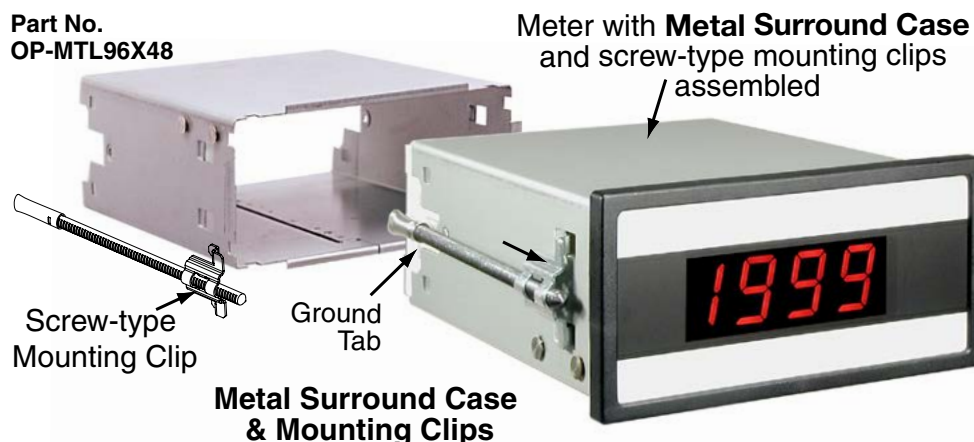

The meter's plastic case is made from fire retardant polycarbonate. A metal surround case can be ordered to enhance the meter's fire retardant capabilities and also provide shielding against electromagnetic interference (EMI). The metal case slides over the polycarbonate case and is held firmly in place by spring-type non-return clips. The Metal Surround Case must be factory installed on the polycarbonate case and once installed, it cannot be removed in the field.

With the metal case in place, the meter's standard ratchet-type mounting clips can not be used. Instead a pair of screw-type DIN standard mounting clips are provided, which clip into holes on the side of the metal case and tighten against the rear of the panel. A ground tab on the metal case enables the metal case to be easily connected to the panel ground.

Ordering Information



Add to the basic model number the order code suffix for each standard option required. The last suffix is to indicate how many different special options and or accessories that you may require to be included with this product. *Except when when R1 or R2 relay output is selected, a meter ordered with an analog output or a relay output module requires an Output Module Carrier Board which should be automatically included with the order. (See special Options and Accessories section)

Ordering Example: DL-40F-DR-PS1-IA01-AIC-R1-0A2, the 2 OA's are, CR-CHANGE and a OP-N4X/96X48

► **BASIC MODEL NUMBER**

DL-40-HZ . . . 96x48mm, Leopard, 4 Digit, Line Frequency \$110

Standard Options for this Model Number

Order Code Suffix	Description	List
-------------------	-------------	------

► **DISPLAY**

DR Red LED, 0.56 inch high
 DB . . . Super-bright Red LED, 0.56 inch high
 DG . . . Green LED, 0.56 inch high
 LG . . . Large Green LED, 0.8 inch high
 LR . . . Large Red LED, 0.8 inch high

► **POWER SUPPLY**

PS185 - 265VAC / 95 - 300VDC
 PS2 . . .15 - 48VAC / 10 - 72VDC

► **INPUT MODULES (Partial List. See www.texmate.com)**

Unless otherwise specified Texmate will ship all modules precalibrated with factory preselected ranges and/or scalings as shown in **BOLD** type.

IF08 . .Line Frequency **99.99/999.9/9999Hz**

► **ANALOG OUTPUT *Add \$7 for an Output Module Carrier Board**

AIC . . . Isolated 16 Bit Current Output, 0-20mA and 4-20mA, pls. specify
 AIV . . Isolated 16 Bit Voltage Output, 0-10VDC

► **RELAY OUTPUT**

Note: R1 and R2 are located on the main board, and are generally used when only two Form A Relays or less are required and an Analogy Output is not required.

R1 . . . Single 4A Form A Relay
 R2 . . . Dual 4A Form A Relays

► **RELAY OUTPUT MODULES**

Note: If a meter is ordered with a Relay Output Module, but without Analog Output, an Output Module Carrier Board should be automatically added to the order.

OR11 . . One 9 Amp Form C Relay, Isolated
 OR15 . . One 9 Amp Form C and Two 4 Amps Form A Relays
 OR16 . . One 9 Amp Form C and One 4 Amp Form A Relays
 OR12 . . Two 9 Amp Form C Relays, Isolated
 OR14 . . Two 9 Amp Form C and Two 4 Amps Form A Relays
 OR23 . . Two 9 Amp Form C and One 4 Amp Form A Relay, Isolated
 OR31 . . One 4 Amp Form A Relay, Isolated
 OR32 . . Two 4 Amp Form A Relays, Isolated
 OR33 . . Three 4 Amp Form A Relays, Isolated
 OR34 . . Four 4 Amp Form A Relays, Isolated

Solid State Relay (SSR) Output Modules DC Only

OR54 . . Four 400V DC Solid State Relays (SSR) 210mA

Special Options and Accessories (OA's)

Part Number	Description	List
-------------	-------------	------

► **SPECIAL OPTIONS (Specify Inputs or Outputs & Req. Reading)**

Output Module Carrier Board

*One carrier board must be ordered with any meter that includes any one or more of the following options: Analog Output and/or Relay Output Modules.
 SA-DL/OM-CB . . .Output Module Carrier Board, DL series

CR-CHANGE . . Range Change from Standard Range shown in **BOLD** type
 CS-3/3.5/4 . . . Custom display scaling within standard ranges . . .
 COA-3/3.5/4 . . . Custom scaling of analog output

► **ACCESSORIES**

75-DBBZ9648F . . . Black Bezel for 96x48mm Case
 75-DMTCLIPP . . . Side Slide Brackets (2 pc) - extra set, extra strength . . .
 76-DL40G-N4"Touch" Green LED Faceplate, NEMA 4, Factory install
 76-DL40LG-N4 . . ."Touch" Large Green LED Faceplate, NEMA 4, Factory install
 76-DL40LR-N4 . . ."Touch" Large Red LED Faceplate, NEMA 4, Factory install
 76-DL40R-N4 . . ."Touch" Red LED Faceplate, NEMA 4, Factory install . .
 ART-FS-S/DNRC for artwork & set-up Faceplate/Desc.
 ART-FS-001Install Custom Faceplate per meter - 1 color.
 OP-MTLCLIPScrew Mounting Clips (2 pc) - to screw tighten slide brackets
 OP-MTL96X48Metal Surround Case, includes screw mounting clips . . .
 OP-N4X/96X4896x48mm clear lockable front cover-NEMA 4X, splash proof

Prices subject to change without notice.

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, **NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE** is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the proDXct for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



450 State Place • Escondido, CA 92029
 Tel: 1-760-598-9899 • USA 1-800-839-6283 • 1-800-TEXMATE
 Fax: 1-760-598-9828 • Email: orders@texmate.com • Web: www.texmate.com

DL-40-HZ Technical Manual Copyright © 2018 Texmate Inc. All rights reserved. Published by: Texmate Inc. USA. Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is proprietary to Texmate, Inc. and may not be copied, reproduced or transmitted, in whole or in part, in connection with the design, manufacture, or sale of apparatus, device or private label product without the express written consent of Texmate, Inc.