

AcuSplitCT Series 600/800/1000/1200/1500A

Split Core Current Transformer

The Accuenergy split core CTs are compact and low-cost current transformers with high accuracy. The Split Core CTs are ideal for quick and easy installation without disconnecting cables during installation. The internal precision burden resistor across the secondary winding of the CT provides a safe low voltage output and permits safe opening of the secondary.

FEATURES

- Clamp-on design, easy installations
- 333mV output, safe installations
- Most cost-effective

SPECIFICATIONS

Rated Primary Current	600A, 800A, 1000A, 1200A, 1500A
Rated Secondary Current	333mV
Linearity Accuracy	0.5% (at 10%-130%)
Lead	8'(2.5m), twisted pair, White-Positive, Brown-Negative Bare-Shield, 22AWG
Window Size	2 inches
Insulation Voltage	600Vac, Category III
Frequency range	50/60Hz
Withstand Voltage	3,000Vac
Standard	IEC 60044-1
Certification	UR, CE approved & RoHS compliant
Construction	Epoxy encapsulated housing


ORDERING INFORMATION

	Rated Input		
Ordering Number:	AcuCT- 200	-	: 333
Ordering Example:	AcuCT- 200	-	800 : 333
	600:	600A	
	800:	800A	
	1000:	1000A	
	1200:	1200A	
	1500:	1500A	

Contact:
Industrial Process Measurement, Inc.
3910 Park Avenue, Unit 7
Edison, NJ 08820
732-632-6400
support@instrumentation2000.com
<https://www.instrumentation2000.com/>



DIMENSIONS

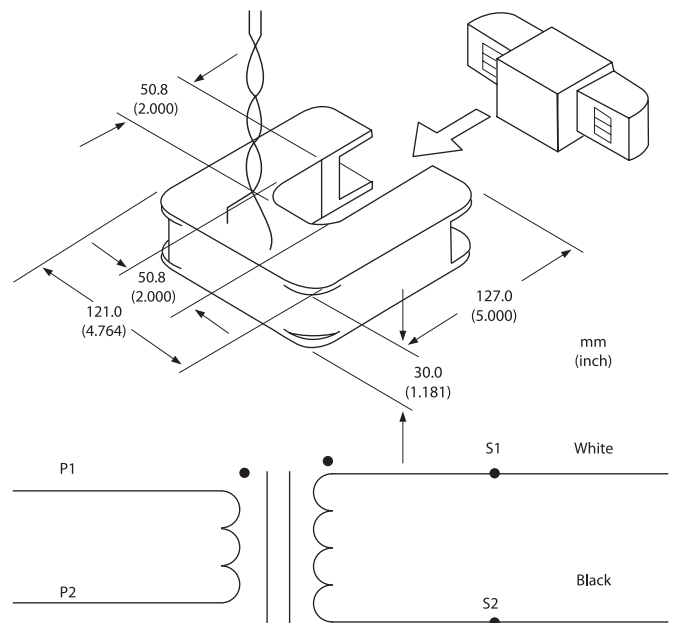

ACCUEnergy
Your Power and Automation Partner