

Combustion Gas Analyzer

Instruction Manual

Configuration • Operation • Maintenance



P/N: 0024-9487 Revision 2 August 2014

WARRANTY

Bacharach, Inc. warrants to Buyer that at the time of delivery this product will be free from defects in material and manufacture and will conform substantially to Bacharach Inc.'s applicable specifications. Bacharach's liability and buyer's remedy under this warranty are limited to the repair or replacement, at Bacharach's option, of this product or parts thereof returned to seller at the factory of manufacture and shown to Bacharach Inc.'s reasonable satisfaction to have been defective; provided that written notice of the defect shall have been given by buyer to Bacharach Inc. within two (2) years after the date of delivery on Product, CO sensor, and O₂ sensor, and within three (3) years after the date of delivery of the LL O₂ sensor.

Bacharach, Inc. warrants to buyer that it will convey good title to this product. Bacharach's liability and buyer's remedy under this warranty of title are limited to the removal of any title defects or, at the election of Bacharach, to the replacement of this product or parts thereof that are defective in title.

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND ARE GIVEN AND ACCEPTED IN LIEU OF (I) ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE: AND (II) ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY IN CONTRACT OR TORT, WHETHER OR NOT ARISING FROM BACHARACH'S NEGLIGENCE, ACTUAL OR IMPLIED. The remedies of the buyer shall be limited to those provided herein to the exclusion of any and all other remedies including, without limitation incidental or consequential damages. No agreement varying or extending the foregoing warranties, remedies or this limitation will be binding upon Bacharach, Inc. unless in writing, signed by a duly authorized officer of Bacharach.

Register your warranty by visiting www.MyBacharach.com

ii 0024-9487 Rev 2

NOTICE

Product improvements and enhancements are on-going, therefore the specifications and information contained in this document may change without notice.

Bacharach, Inc. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Bacharach, Inc.

Copyright © 2014, Bacharach, Inc., all rights reserved.

BACHARACH, Fyrite, INSIGHT, and B-SMART are registered trademarks of Bacharach, Inc. All other trademarks, trade names, service marks and logos referenced herein belong to their respective companies.

0024-9487 Rev 2 iii

Table of Contents

SECTION 1. OVERVIEW	1
1.1. Introduction	1
1.2. Conventions	1
1.3. Safety	1
1.4. Product Overview	3
1.5. North American (NA) vs. Siegert (S) Combustion Equations	3
1.6. Components	5
1.7. Features	
1.8. Combustion Test Process Overview	
1.9. Fyrite [®] INSIGHT [®] Plus Sales Combinations	
1.10. Specifications	11
SECTION 2. SETUP	15
2.1. Connecting the Probe and Thermocouple	15
2.2. Front Panel Buttons	16
2.3. Power Options	
2.4. Turning the Fyrite [®] INSIGHT [®] Plus On/Off	19
SECTION 3. CONFIGURATION	21
3.1. Menu Structure Overview	21
3.2. The Warm-up Sequence	21
3.3. Main Menu	
3.4. Select Fuel Menu	
3.5. Pressure Menu	
3.6. Temperature Menu	
3.7. Tune-Rite Option (North American Only)	
3.8. Leak Test Menu (Siegert Only)	
3.9. Ambient CO Menu (Siegert Only)	
3.10. Memory Options Menu	
3.11. Setup Menu	
3.12. Calibration Menu	
3.13. Diagnostics Menu	
SECTION 4. OPERATION	_
4.1. Prerequisites	61

Fyrite[®] INSIGHT[®] Plus Manual

	4.2.	Samp	ling Point Examples	61
	4.3.	Comb	oustion Testing Process	64
	4.4.	The R	RUN Screen	66
	4.5.	Maki	ng a Draft or Pressure Measurement	68
	4.6.	Printi	ng Using the Optional IrDA Printer	69
			hics Screens	
		4.7.1.	Overview	72
		4.7.2.	Graphical Line Graph Trend Screen	73
			Bar Graph Screen	
		4.7.4.	Stack Temperature Hot Spot Screen	. 77
	4.8.	Takin	g Ambient CO Measurements (Siegert Only)	. 77
	4.9.	PC In	terface and Fyrite [®] User Software	78
SEC	TION	15.	CALIBRATION AND MAINTENANCE	. 79
	г 1		ceability	
			ling the Probe	
	5.2.		Equipment Required	
			Procedure	
	E 2		r Trap and Filter Replacement	
			rd/or CO Sensor Replacement	
	5.4.		Accessing the Sensors	
			Material Required (As Needed)	
			O ₂ Sensor Replacement Procedure	
			CO Sensor Replacement Procedure	
			B-SMART® CO Sensor Replacement	
	5 5		ure Sensor Calibration	
	٥.٥.		Materials Required	
			Procedure	
	5.6		ck Calibration	
	5.0.		Materials Required	
			T-Stack Calibration Procedure	
	5.7		Calibration	
	3.7.		Materials Required	
			T-Air Calibration Procedure	
	5.8		ensor Calibration	
	5.0.		Materials Required	
			CO Manual Zero Procedure	
			CO Sensor Span Procedure	
	5.9.		Sensor Calibration	
CEC.			TROUBLESHOOTING	
JEC	TION	ı D.	INCUDEESHOUTING	סכ.

0024-9487 Rev 2

Fyrite[®] INSIGHT[®] Plus Manual

6.1. Error and Warning Messages	96
6.2. Replacement Parts	
6.3. Accessories	
6.4. Instrument Identification	100
6.5. Service Centers	100
CE Declaration of Conformity	101
Index	103



vi 0024-9487 Rev 2

Section 1. Overview

1.1. Introduction

Thank you for investing in a Bacharach Fyrite[®] INSIGHT[®] Plus combustion analyzer. To assure proper use and operator safety, please read the contents of this manual for important information on the operation and maintenance of the analyzer.

1.2. Conventions



WARNING: A warning statement denotes a potential hazard associated with the use of this equipment. Failure to follow this information could result in serious personal injury or death.



CAUTION: A caution statement indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. Caution statements may also be used to alert against unsafe practices.



IMPORTANT: An important statement provides emphasis of an important feature, operation, etc. Failure to follow this information could void your warranty, result in improper operation, or cause equipment damage.



NOTE: A note statement provides emphasis of a feature, operation, practice, etc.

1.3. Safety



WARNING: This analyzer is not intended to be used as a safety device.



WARNING: When testing an appliance, a full visual inspection of the appliance should be performed to ensure its safe operation.



CAUTION: This analyzer is not intended to be used on a continuous basis.



CAUTION: Do not store instrument or its sensors with solvents or products that contain solvents.



CAUTION: Except for sensor and battery replacement, this analyzer should only be opened and/or serviced by authorized Bacharach personnel. Failure to comply may void the warranty.



HAZARDOUS AREA WARNING: This instrument has not been designed to be intrinsically safe for use in areas classified as hazardous locations. For your safety, **DO NOT** use it in hazardous (classified) locations.



CAUTION: Do not use flammable or combustible substances (like carburetor fluid used for cleaning the probe) near an open flame.

CAUTION: When the instrument is used in an inefficient oil-fueled appliance where there is a high emission of soot, the probe's sample filter may become clogged. Before every use confirm that the filter is clean and replace it with a new filter if necessary.



To prevent soot intake and a clogged filter, a smoke test should be performed before operating under such conditions. This ensures that the furnace or boiler is burning at a level appropriate for the use of this instrument.

When the CO_2 level exceeds the allowable threshold, a warning will prompt the user to consider performing a smoke test. This screen is cleared by pressing the ENTER button. Once the warning is cleared, it will not be displayed again for that particular test. If a new test is started (by pressing the HOLD button), the warning will be displayed again if the limit has been exceeded.



IMPORTANT: Never disconnect the probe from the instrument until purging is complete. Otherwise, leftover target gas (for example, CO) may remain in the probe and cause inaccurate zeroing at power up that could lead to inaccurate gas measurements afterwards.

1.4. Product Overview

The Fyrite[®] INSIGHT[®] Plus is a portable hand-held combustion analyzer for use in residential and light commercial applications. It is intended to be used by:

- HVAC contractors
- home inspectors
- maintenance personnel
- energy auditors

to conduct combustion efficiency analysis on residential and light commercial furnaces and appliances in the worldwide market.

The instrument is supplied with all of the following components:

- probe and hose assembly
- four disposable "AA" alkaline batteries
- hard carrying case
- rubber boot
- spare filters
- factory-calibrated and installed sensors as ordered

and, depending on the model and kit, some or all of the following:

- Fyrite[®] User Software (FUS)
- USB cable (type A to Mini B)
- Infrared Data Association (IrDA) printer with four disposable "AA" alkaline batteries
- printer paper.

1.5. North American (NA) vs. Siegert (S) Combustion Equations

Though the combustion *process* is fairly standardized across the globe, a combustion analyzer intended for worldwide use demands a degree of flexibility for a few regional preferences. The Fyrite[®] INSIGHT[®] Plus provides a North American (NA) configuration and a Siegert (S) configuration (see page 52) to address these and other needs, which are contrasted below.



NOTE: Detailed differences between North American and Siegert configurations are noted where appropriate in this manual.

Feature	North American (NA) versus	Siegert (S) Configurations		
Countries	Typical North American	Typical		
	(NA) Users	Siegert (S) Users		
	Asia	Belgium		
	Australia	Denmark		
	Latin America	France		
	North America	Germany		
	South America	Italy		
		Netherlands		
		Poland		
		Spain		
		United Kingdom		
Heating Values	For combustion calculations, Siegert uses the fuel's <i>lower</i> heating value; NA uses the <i>higher</i> value (see page 66).			
Fuels	Different fuel sets and composition (see page 24)			
Different RUN Parameters	EFF (NA) vs. Stack loss and ETA (S) Excess Air (NA) vs. Lambda (S) (Lambda is similar to excess air) (see page 66)			
Extra Siegert Parameters	CO/CO ₂ ratio, boiler temperature, smoke number, and oil derivative are displayed for Siegert only (see page 66).			
CO ₂ Max	In the Siegert configuration, the user can set a CO ₂ Max number for the fuel (see page 24).			
Print Average Feature	There is a print average feature for Siegert (see page 32).			
Time and Date	NA: MM/DD/YY w/ 12-hour time format with AM/PM o			
Format	DD/MM/YY w/ 24-hour time format (see page 49)			
	Siegert: DD/MM/YY w/ 24-hr ti	me format only		
Languages	3 for the North American (NA) configuration and 8 for the Siegert (S) configuration (See language list on page 46)			



NOTE: The Combustion Equations setting is used to configure the instrument to use either North American combustion equations or Siegert combustion equations (see page 52). Changing *this* setting resets memory and the values of *other* settings. Refer to page 52 for a list of affected parameters.

1.6. Components

- 1 Graphic Color Display
- 2 Function Keys (F1, F2, and F3)
 - · Context sensitive
 - Functions shown at bottom of display
- 3, 4 Up and Down Arrow Keys
 - Scroll up/down through a list
 - Increase/decrease alphanumeric values
- 5, 6 Left and Right Arrow Keys
 - Scroll left/right through a field
 - Jump to top/bottom of list
- 7 Enter Key
 - · Choose highlighted item
 - Accept value/characters
- 8 Escape Key
 - Cancel most operations and display previous screen
- 9 Power Kev

Press & release Power ON

• Press & hold (2 secs) Begin power OFF sequence

10 Run/Hold Key

• While in HOLD Turns on pump, displays RUN screen, and

begins combustion test.

• While in RUN Turns off pump, displays HOLD screen and last


set of combustion data.

In most menus Displays HOLD screen.


During power down Returns display to HOLD screen

(cancels power down).



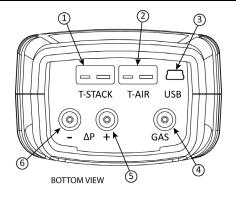

- 1 Stack Temperature Connector (T-STACK)
- 2 Primary Ambient Air Connector (T-AIR)
- 3 USB Connector (Mini B)
- 4 Sample Gas Connector
- 5 Draft Connector (+ ΔP)
- 6 Differential Pressure Connector (- ΔP)

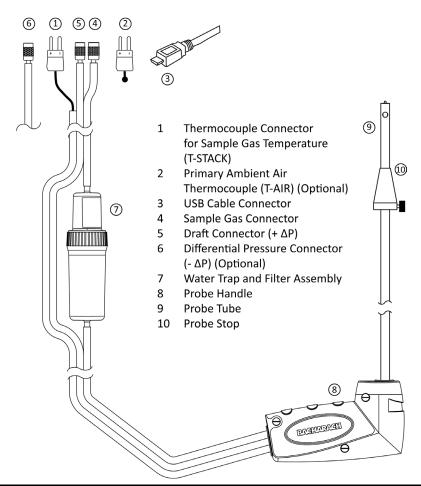

1.7. Features

Sensors

- Field-replaceable electrochemical sensors (O₂ and B-SMART[®] CO) (pp 82-84)
- Optional long life O₂ sensor (pp 10, 82)
- o Pressure sensor (pp 6, 26)
- Flue gas (and optionally T-AIR) temperature measurement using a
 Type K thermocouple (p 6)

Fuel codes

- Nine available fuels (in North American configuration) (p 24)
- o Ten available fuels (in Siegert configuration) (p 24)
- Custom fuel code entry (p 25)

Power

- USB cable (PC or wall adapter) (p 12)
- 4 AA alkaline batteries (included) (p 12)
- 4 AA lithium batteries (p 12)
- 4 AA rechargeable batteries (externally charged) (p 12)
- Low battery warning (pp 12, 96)

Testing Features

- Complete test results (100 sets) can be stored, recalled, displayed, downloaded, and printed (pp 10, 30, 66)
- Secure calibration function (password protected) (p 55)
- Auto power-off feature with sensor purge feature (p 48)
- Graphic screens showing trending, bar, and hotspot graphic functions (p 72)
- Status and diagnostic menus (pp 56, 59)
- Manual entry of values (Siegert only) (pp 24, 34, and 35)
- Calibration reminder function (p 47)
- o Custom display formats (pp 43, 49, 69, and 71)
- Zoom feature (p 38)
- o Print range feature (p 31)
- Ambient CO (Siegert Only) (pp 29, 77)

User Customizations


- North American and Siegert combustion calculations (pp 52, 66)
- Multi-language interface (46)
- Auto/Manual zero functions for the CO sensor (pp 21, 50, 93)
- o Customized logo on printouts (192 x 384 pixels) (p 71)
- Customized user information (3 lines of 20 characters) (pp 43, 69)

o Ten sets of test IDs to customize printouts (p 39)

- Temperature and pressure unit selection (p 32)
- Hardware
 - Probe/hose assembly for gas transport and temperature input (p
 6)
 - Sample pump to provide gas sample delivery
 - Backlit color graphic LCD (p 5)
 - Hard carrying case (see below)
 - o Time and date stamping of 100 test results
 - USB 2.0 (mini-B connection) for PC interface and communications (p 5)
- PC Interface (p 78)
 - USB cable (Type A to Mini B)
 - o Fyrite[®] User Software (FUS) (Windows compatible)
 - o Updates, instrument configuration, and downloading test results



1.8. Combustion Test Process Overview

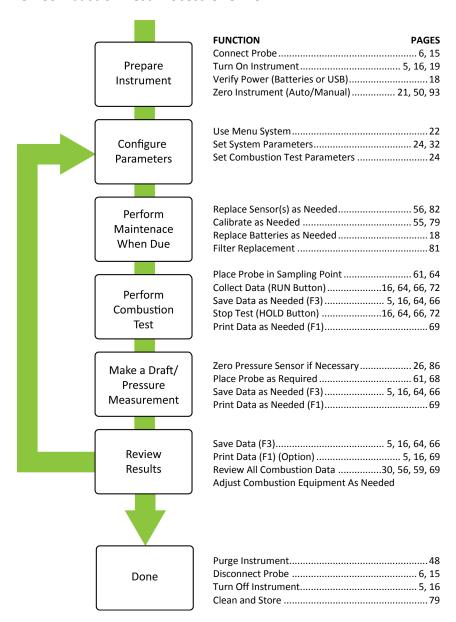

1.9. Fyrite[®] INSIGHT[®] Plus Sales Combinations

Fuel Equations	North American				Sie	gert		
Final Assembly	0024- 7343			24- 44	00: 73			
O ₂ Sensor Type	Stan	dard	Long Life		Stan	Standard		Life
Kit Type: B=Basic R=Reporting	В	R	В	R	В	R	В	R
Sales Kit P/N	0024- 8515	0024- 8516	0024- 8517	0024- 8518	0024- 8519	0024- 8520	0024- 8521	0024- 8522
Hard Case	✓	✓	✓	✓	✓	✓	✓	✓
Sampling Probe & Hose	√	√	√	√	√	√	√	√
Manual	✓	✓	✓	✓	✓	✓	✓	✓
Batteries	✓	✓	✓	✓	✓	✓	✓	✓
Boot	✓	✓	✓	✓	✓	✓	✓	✓
Spare filters	✓	✓	✓	✓	✓	✓	✓	✓
CO Sensor w/NO _x Filter	✓	✓	✓	✓	✓	✓	✓	✓
Pressure	✓	✓	✓	✓	✓	✓	✓	✓
T-Air	✓	✓	✓	✓	✓	✓	✓	✓
T-Stack	✓	✓	✓	✓	✓	✓	✓	✓
O ₂ Sensor	✓	✓			✓	✓		
LL O ₂ Sensor			✓	✓			✓	✓
Fuels	9	9	9	9	10	10	10	10
Memory	100	100	100	100	100	100	100	100
Fyrite [®] User Software (FUS)		√		√		√		~
USB Cable		✓		✓		✓		✓
Printer		✓		✓		✓		✓

1.10. Specifications

Specification	Description		
Temperature	Storage: -20° to 50° C (-4° to 122° F)		
	0° to 20° C (32° to 68° F) optimal		
	Operation: -5° to 45° C (23° to 113° F)		
	Reference: $20^{\circ} \pm 2^{\circ} \text{ C}$ $(68^{\circ} \pm 4^{\circ} \text{ F})$		
Humidity	Storage: 15 to 90% RH, non-condensing		
	Operation: 15 to 95% RH, non-condensing		
	Reference: 45 ± 10% RH, non-condensing		
Pressure	1 atmosphere ± 10%		
Weight	16 ounces (454 g) with batteries		
Dimensions (HxWxD)	8.0" x 3.6" x 2.3" (20.3 cm x 9.1 cm x 5.8 cm)		
Warm-up Time	Minimum = 30 seconds; Maximum = 60 seconds		
Gas Sample Flow Rate	300 to 700 cc/min		
Sensors	O ₂ Electrochemical (P/N: 0024-0788)		
	CO w/ NOx Filter Electrochemical (P/N: 0024-1593)		
	LL O ₂ (Optional) Electrochemical (P/N: 0024-1591)		
	Temp (Stack) K-Type thermocouple		
	Temp (Air) K-Type thermocouple		
	Pressure Piezo-resistive		
Product Approvals and	EN50270: (CE Mark) EMC tested in accordance with European Directive 2004/108/EC.		
Regulatory Compliance	EN50379: Standard for portable electrical apparatus designed to measure combustion flue gas parameters of heating appliances (Siegert only) Parts 1 and 3.		
	ROHS Compliance		
Case	High impact ABS plastic with rubber over mold		
Construction	Protective rubber boot with molded-in magnets.		
Display	Color 2.8" graphics LCD		
USB Connector	Mini B (USB 2.0)		

Specification	Description			
IrDA Port	Protocol: I	IrDA-SIR	Data Bits: 8	
	Baud Rate: 9600		Stop Bits: 1	
	Parity:	None		
Memory	100 locations	for storing te	st results	
Power Supply		Туре:	Disposable Alkaline (Included)	
Options		Duration:	15 hours min, continuous max draw	
	Batteries	Type:	Disposable Lithium	
	(4 AA)	Duration:	20 hours, continuous max draw	
			Rechargeable	
		Duration:	8 hours, continuous max draw	
	USB Cable	Source:	PC	
	(A to Mini B)	Source:	AC source (via Wall Adapter)	

Measure- ment	Range	Resolution	Accuracy	Response Time (T ₉₀)
O ₂ and LL O ₂	0 to 20.9 %	0.1% O ₂	± 0.3% O ₂	< 20 sec
CO w/ NO _x filter	0 to 4000 ppm	1 ppm	± 10 ppm (0 to 200 ppm) ± 5% (201 to 4000 ppm)	< 40 sec
Ambient Temp	-20° to 316° C (-4° to 600° F)	0.1° C (0.1° F)	± 1° C (0 to 100° C)	< 70 sec
Stack Temp	-20° to 650° C (-4° to 1202° F)	1° C (1° F)	± 2° C (0° to 124° C) ± 3° C (125° to 249° C) ± 4° C (250° to 400° C)	< 50 sec
Differential Temp	± 600° C (± 1112° F)	0.1° C (0.1° F)	N/A	N/A
Pressure / Differential Pressure	± 100 mB (± 40 inwc)	0.01 mB (0.01 inwc)	± 0.03 mB (-1 to 1 mB) ± 3% (-40 to -1 mB) ± 3% (1 to 40 mB)	N/A



NOTE: The North American (NA) configuration of the Fyrite[®] INSIGHT[®] Plus computes and displays the calculations as long as the measured oxygen is not above 16% O_2 and the stack temperature is not above 650° C (1202° F). The Siegert configuration of the Fyrite[®] INSIGHT[®] Plus computes and displays the calculations as long as the measured oxygen is not above 18.8% O_2 and the stack temperature is not above 650° C (1202° F).

Calculation	Calculation Bours	Reso-	Configuration	
Calculation	Calculation Range	lution	NA	Siegert
Efficiency (HHV)	0.1 to 100 %	0.1%	Х	Х
ETA (LHV)	0 to 115%	0.1%		Х
Excess Air	1 to 250 %	1%	Х	
Stack Loss	0.1 to 100 %	0.1 %		Х
Lambda	1 to 9.55	0.01		Х
CO ₂ (dry basis)	0.1 to a fuel-dependent max in %	0.1 %	Х	Х
CO Ref to O ₂	0 to 9999 ppm	1 ppm	Х	Х
CO/CO ₂ Ratio	0.0001 to fuel-dependent max	0.0001		Х



Section 2. Setup

2.1. Connecting the Probe and Thermocouple

A rigid stainless steel probe with handle is connected to a flexible hose with an integral water-trap / filter used to draw a gas sample into the analyzer from the room, grills, diffusers, and furnace flues. Refer to page 6.

- 1. Inspect the sample gas hose for cracks. If a hose is defective, replace the entire probe assembly.
- 2. Before using the analyzer, check that the water trap/filter is clean and dry. If necessary, dry out the trap and replace the filter element (see page 81).
- 3. Push the probe's sample gas hose onto the GAS inlet connector.
- 4. Push the probe's draft hose (+ ΔP) onto the "+" pressure connector.
- 5. Push the probe's thermocouple into the T-STACK connector on the instrument, noting its orientation.



IMPORTANT: The T-STACK connector tabs are keyed to fit into the connector in only one orientation. DO NOT force the thermocouple connector tabs into the T-STACK connector.


6. Push the optional ambient/primary-air thermocouple into the T-AIR connector.



NOTE: Refer to page 6 for locations and details of components.

2.2. Front Panel Buttons

Button	Description
PWR	Powers the analyzer ON and OFF. Hold this button down for at least 2 seconds to turn the power OFF.
**************************************	 UP (▲), DOWN (▼), LEFT (◄), and RIGHT (▶) arrows are context-specific navigation buttons for the menus. UP (▲) and DOWN (▼) arrow buttons scroll to menu options that are hidden from view (when a side scroll bar is displayed indicating additional information). UP (▲) and DOWN (▼) arrow buttons cause the displayed value to increase or decrease accordingly. LEFT (◄) and RIGHT (▶) arrow buttons jump to the top and bottom of lists, respectively. LEFT (◄) and RIGHT (▶) arrow buttons scroll through additional graphics screens. LEFT (◄) and RIGHT (▶) arrow buttons position the active cursor on specific elements of a value to be changed.
	The ENTER button. Performs the action selected.
RUN	 While in the HOLD screen, turns the sample pump on, displays the RUN screen, and begins a combustion test. While in the RUN screen, turns the sample pump off, displays the HOLD screen and the last set of combustion data. Displays the HOLD screen while pressing it from most menus. Return the display to the HOLD screen while pressing it during the shutdown sequence.
ESC	The ESC button cancels most operations and displays the previous screen.
F1 F2 F3	Pressing function keys accepts the corresponding function defined above that key at the bottom of the display (for example, PRINT, SAVE, MENU, etc.).

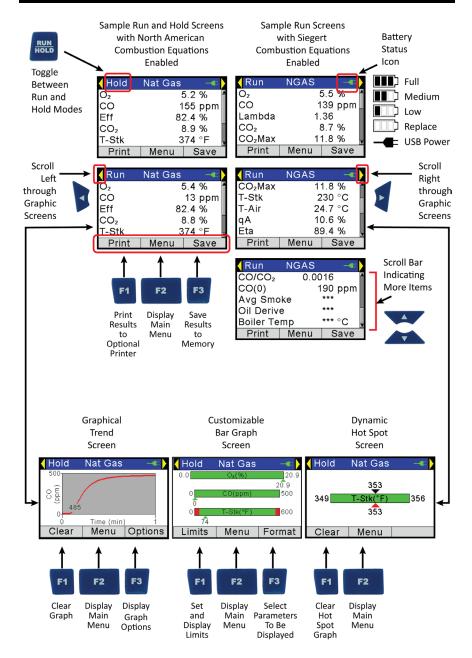

2.3. Power Options

Power options include:

- Disposable AA alkaline batteries (included)
- Disposable AA lithium (Li) batteries
- Externally charged rechargeable NiMH batteries
- Power via USB cable (PC or wall adapter).

Check the Fyrite[®] INSIGHT[®] Plus for sufficient power prior to each use. Replace the batteries if the low (or replace) battery symbol appears in the upper right corner of the Fyrite[®] INSIGHT[®] Plus screen.



= USB Power

The battery symbol changes colors from green to red as battery voltage decreases. In addition, the red Replace Battery symbol flashes.

The optional USB cable can be used to power the instrument in place of batteries. The USB Power symbol is displayed when the cable is connected between a Fyrite[®] INSIGHT[®] Plus and a computer or wall adapter.


Batteries (4 AA, Fresh or Fully Charged)	Estimated Life Span in Hours (Continuous, Pump On)
Alkaline (disposable)	15 hours
Lithium (disposable)	20 hours
Rechargeable	8 hours

Replace batteries as follows.

- 1. Remove the battery cover from the back of analyzer.
- 2. If old batteries are installed, remove them and properly discard them.
- Observing the polarity markings inside the battery compartment, install four 'AA' disposable (alkaline or lithium) batteries or four fullycharged (externally charged) AA rechargeable NiMH batteries.
- 4. Replace the battery cover.




NOTE: The Fyrite[®] INSIGHT[®] Plus does NOT charge rechargeable batteries.

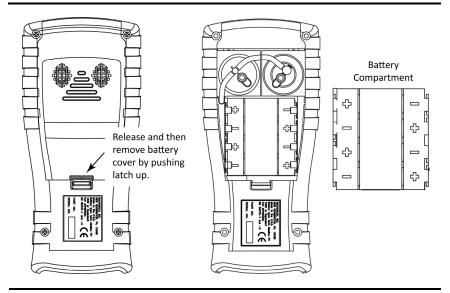



NOTE: A Set Clock error message will be displayed if the instrument is without power for an extended period of time.

2.4. Turning the Fyrite® INSIGHT® Plus On/Off







NOTE: After turning on the Fyrite[®] INSIGHT[®] Plus, it performs a warm-up procedure which includes an auto-zero procedure for the sensors. For this reason, be sure to turn on the Fyrite[®] INSIGHT[®] Plus in a clean air environment.

 $\nabla \nabla \nabla \nabla$

Section 3. Configuration


3.1. Menu Structure Overview



NOTE: The Fyrite[®] INSIGHT[®] Plus may be configured to use either North American combustion equations or Siegert combustion equations. As a result, several parameters are unique to each configuration. This section shows a mix of screens that have been configured for North American combustion equations as well as Siegert combustion equations. Depending on how you have configured your instrument, your screens may vary slightly from those pictured in this section.

Menus and the items contained within them are described in a top-down fashion, starting from the warm-up screens and working sequentially through the menus and menu items.

3.2. The Warm-up Sequence

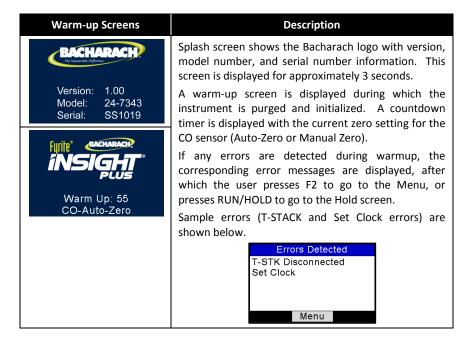


3.3. Main Menu

Main Menu	Function
Main Menu Fuel Pressure Temperature Tune-Rite Menu	Access the Select Fuel Menu (see page 24). • Select combustion fuel
Main Menu Fuel Pressure Temperature Tune-Rite Menu	 Access the Pressure Menu (see page 26). View current pressure readings Gas pressure, Differential across heat exchanger, draft reading, and differential pressure Corresponding zero, save, and print functions
Main Menu Fuel Pressure Temperature Tune-Rite Menu	 Access the Temperature Menu (see page 26). View current temperature readings Differential across heat exchanger and differential temperature Corresponding zero, save, and print functions
Main Menu Fuel Pressure Temperature Tune-Rite Menu	 Access the Tune-Rite option (see page 27). Available on North American units only. Get guidance based on live data and typical characteristics of the combustion equipment Print a detailed, customizable, and value-added service report
Main Menu Fuel Pressure Temperature Leak Test Menu	Access the Leak Test Menu (Siegert only) (see page 27). Let-by and Tightness functions
Main Menu Temperature Leak Test Ambient CO Test Memory Menu	Access the Ambient CO Test Menu (Siegert only) (see page 29).

Main Menu	Function
Main Menu Pressure Temperature Tune-Rite Memory Menu	Access the Memory Options Menu (see page 30). Access previously saved test results Delete all previously saved test results
Main Menu Temperature Tune-Rite Memory Setup Menu	Access the Setup Menu (see page 32). Edit/view instrument preferences Edit/view system parameters Edit/view combustion test parameters
Main Menu Tune-Rite Memory Setup Calibration	Access the Calibration Password Screen and the Calibration Menu (see page 55). • Calibrate sensors
Main Menu Memory Setup Calibration Diagnostics Menu	Access the Diagnostics Menu (see page 56). • View "run" meters • View system diagnostic values • Check O₂ sensor life • Fresh air diagnostics
Main Menu Setup Calibration Diagnostics Status Menu	Access the Device Status Menu (see page 59). • Access model number, serial number, and firmware version information

3.4. Select Fuel Menu

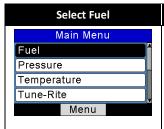


Fuel List

Select the combustion fuel from the fuel list. Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to highlight the desired fuel and use the ENTER button to select.

Function

NA Fuel List	Siegert Fuel List
Natural Gas	Natural Gas
Oil 2	KOKS
Oil 4	LEG
Oil 6	Propane
Propane	Oil 2
Coal	Oil 6
Wood	Coal
Kerosene	Biofuel
B5 (Biodiesel 5%)	LPG
Custom #1*	Butane
Custom #2*	Custom #1*
	Custom #2*


^{*} See below for information on custom fuels.



CO₂ Max Value (Siegert Only)

In Siegert configurations, additional screens are added after the fuel is selected. These screens permit the adjustment of the CO_2 max value. Use the DOWN (\blacktriangledown) arrow key to highlight "Adjust" and use the ENTER button to select. Use the arrow buttons to select and adjust the desired value of CO_2 Max.

Select Fuel

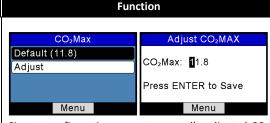

Siegert configurations accept manually adjusted ${\rm CO_2}$ max values which are used for combustion calculations and represent corrections for fuel variations. Adjusted ${\rm CO_2}$ max values are stored with saved combustion records and displayed in the RUN/HOLD screen. ${\rm CO_2}$ max values are entered through software menu selections when a fuel type is selected.

Custom Fuel Codes


In addition to the fuel codes built-in to the Fyrite[®] INSIGHT[®] Plus, the instrument supports 2 additional fuels from which you may choose. If your combustion application requires a fuel type not listed in the Fuel Type menu, contact Bacharach for information on additional fuel codes.

Custom fuel codes are developed by Bacharach at a customer's request and can be loaded into the instrument using the Fyrite[®] User Software (FUS). If one or more fuel codes are downloaded to the instrument, they will appear at the bottom of the fuel list in the Fuel Menu.





NOTE: Custom fuel codes are specific to the combustion equations that are being used (see page 52), so be sure to include your combustion equation type (North American or Siegert) with any custom fuel code requests.

3.5. Pressure Menu

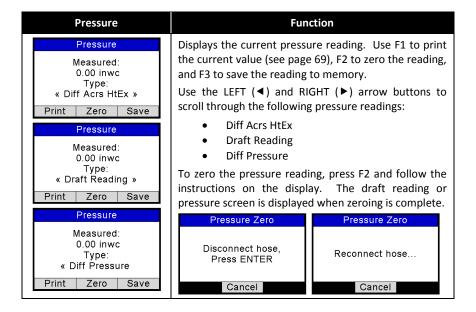

3.6. Temperature Menu

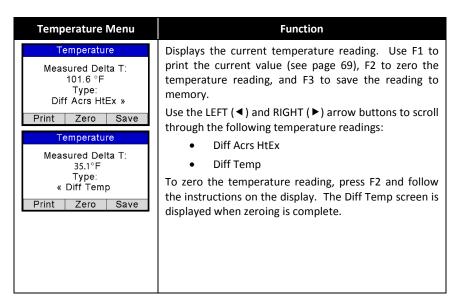

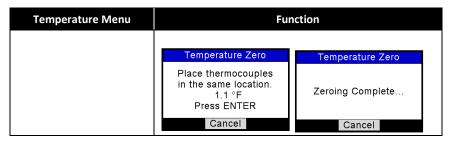



3.7. Tune-Rite Option (North American Only)

Tune-Rite Option	Function
Disclaimer IMPORTANT: Read appliance and analyzer instructions before use.	Provides access to the Tune-Rite combustion assistant software (North American version only). Refer to the Tune-Rite™ Software Operation manual (P/N 0024-9504) for information.
Decline Accept	


3.8. Leak Test Menu (Siegert Only)

Let-by and Tightness are regional requirements for the UK market with very specific procedures. While they may be useful in other local jurisdictions to provide means to have safe readings for leak checks of gas and safe combustion processes, they are simply one way to test for these problems. Other procedures may be specified by local authorities. Please refer to your local and regional regulations to be sure you are in compliance accordingly.

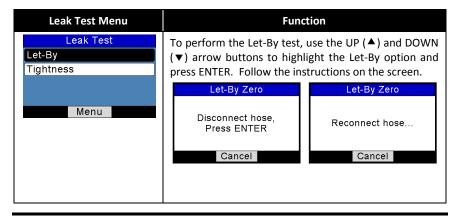

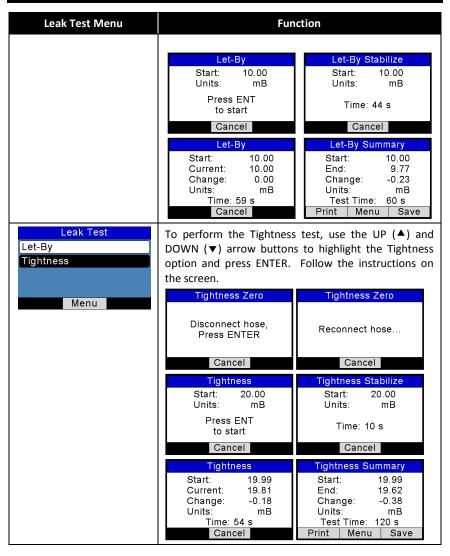

3.9. Ambient CO Menu (Siegert Only)



Function

Access the Ambient CO Menu (Siegert only).

When initiated, the Ambient CO feature monitors CO values continuously and captures a reading every minute for 15 minutes (a total of 16 readings from t_0 to t_{15}).

Press ENTER to initiate the Ambient CO test. This begins a 15-minute test cycle, during which a status screen is displayed. It shows the starting ambient CO value, the current CO value, and the elapsed time into the test.






NOTE: Press the F2 key to cancel a test in progress.


After the test is complete, the Ambient CO Summary screen is displayed. This is a scrollable window that shows the 16 CO "snapshot" readings, as well as the maximum CO reading that was sampled during the entire test.





NOTE: The Max CO Reading is the highest sampled CO reading – even if the reading was taken in between one of the sample "snapshot" readings.

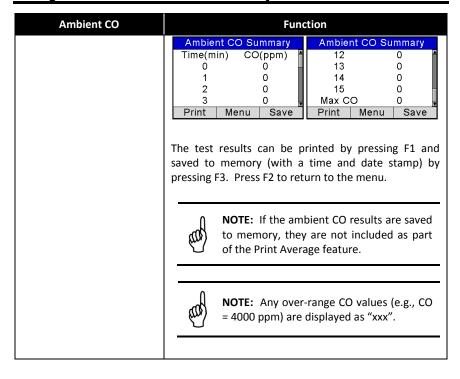


3.10. Memory Options Menu

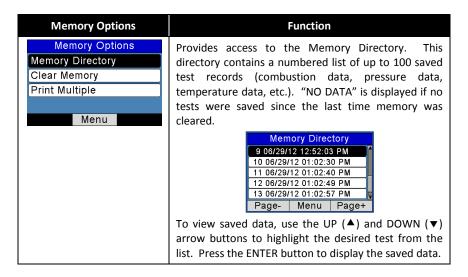


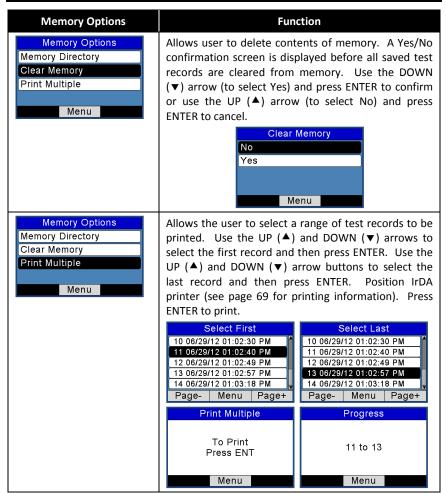

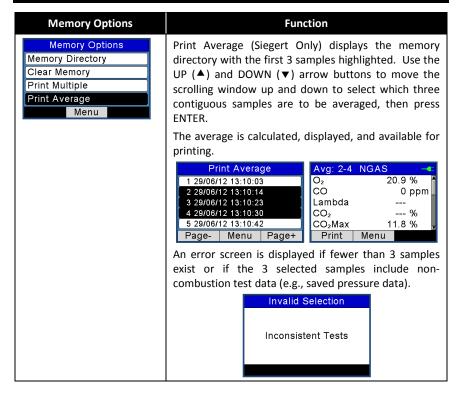

3.11. Setup Menu

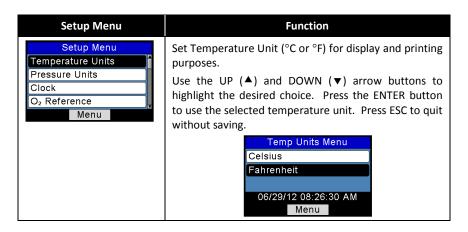

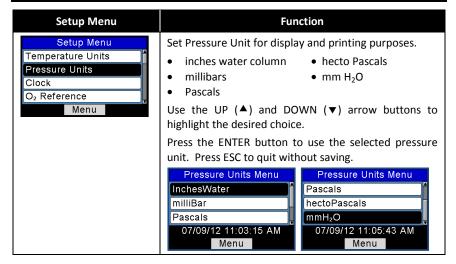


Setup Menu

Setup Menu Temperature Units Pressure Units Smoke Number Oil Derivative Menu

Function

Smoke Number (Siegert only) is used to calculate and display an average smoke value based on 3 smoke test results that are entered by the user. A sample smoke scale is shown below.



Perform 3 smoke tests then enter the results in the 3 smoke number parameters shown below.

Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to highlight smoke number 1, 2, or 3, then press ENTER.

Use the LEFT (◀) and RIGHT (▶) arrow buttons to set the smoke number (0-9) that most closely matches the numerical value on your smoke scale for that sample. Press ENTER when finished. The average smoke number is displayed, and will be included on printouts.





and)

WARNING: DO NOT use the Fyrite® INSIGHT® Plus to sample gas from an oil-based combustion system without first doing a smoke test and adjusting your combustion process as needed. Smoke test results of greater than 1 indicate improper combustion, and demonstrate the need for process adjustment. Only use the Fyrite® INSIGHT® Plus to sample flue gas AFTER the combustion process is adjusted and the smoke test indicates a smoke level of 0 or 1.




Function


Oil Derivative (Siegert only) specifies whether or not oil derivatives were present during the smoke tests (see page 34).

For incomplete combustion, oil derivatives present in the sample can be precipitated onto the filter paper, causing a color change in the smoke spot.

Use the UP (\triangle) and DOWN (∇) arrow buttons to select the YES option if oil derivatives were present during the smoke test. Otherwise select NO and press ENTER.




This information is included on printouts.




A boiler temperature (Siegert only) can be recorded manually. Enter the boiler temperature as measured by an external thermocouple.

Use the LEFT (◀) and RIGHT (▶) arrow buttons to change position. Use the UP (♠) and DOWN (▼) arrow buttons to scroll through numerals 0-9 for the selected position. Press ENTER when finished.



This information is included on printouts.

Setup Menu



Function

The Clock option provides access to the clock setup function to set date and time.

Use the LEFT (◀) and RIGHT (▶) arrow buttons to select the desired field to edit. Then use the UP (♠) and DOWN (▼) arrow buttons to change the value of the selected field. Press ENTER to save new date and time. Press ESC to quit without saving.

NOTE: Siegert configurations display time and date information in DD/MM/YY and 24-hour time format only.



Time and date information in North American configurations is userselectable (see Date Format setting on page 49) between:

- MM/DD/YY w/ 12-hr time format or
- DD/MM/YY w/ 24-hr time format.



NOTE: The presence of AM or PM after the time on the Set Clock display indicates 12-hour time format and MM/DD/YY date format. (This also indicates that the instrument must be in the North American configuration.)



Similarly, the absence of AM or PM indicates 24-hour time format and the date is in DD/MM/YY format (either by default if Siegert configuration, or by choice through the Date Format parameter if North American configuration).

Setup Menu


Setup Menu Temperature Units Pressure Units Clock O₂ Reference Menu

Function

The measured value of CO can be referenced to a specific $\rm O_2$ percentage (0% to 15%) as referenced in the equation below.


$$CO(n) = \frac{20.9 - O_2 \, Reference}{20.9 - O_2 \, Measured} \times CO$$

Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to enter the O₂ reference value (n) from 0% to 15%. Press ENTER to save the selection or ESC to revert to the previous setting.






NOTE: The O_2 reference has a default value of 0%. CO with respect to a 0% O_2 reference is also known as *CO Air Free* or CO(0).



Select whether to print (YES) or not print (NO) the pressure measurement on the combustion test printout.

Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to select YES or NO. Press ENTER to save your choice.





Function

Combustion test data in the Run/Hold screen can be shown with enlarged characters to make viewing easier. The operator can set zoom levels to Standard, 2X or 3X.

- The Standard zoom setting will display 5 lines of combustion test data at one time.
- 2X will display 4 lines of data with enlarged characters.
- 3X will display 3 lines of data with enlarged characters.

Select the desired zoom level using the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons. Press the ENTER button to save the selection, or press ESC to revert to the previous setting.



The operator can scroll through the complete list of data (using the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons) regardless of the zoom level.

Setup Menu Print Pressure Zoom Test ID Username Menu

Setup Menu

Function


TEST ID OVERVIEW

Test records can be identified by manually entering up to three lines of text, with each line containing a maximum of 20 alphanumeric characters representing a customer's name, burner number, location, etc.



NOTE: This data can also be entered using the Fyrite[®] User Software (FUS).

From the Test ID screen, you can select, edit, and clear Test IDs.




SELECT TEST ID

After a Test ID is selected, the information:

- is associated with all succeeding test records
- will appear at the top of each printed test record
- will appear in CSV files when records are downloaded to a PC.

The chosen Test ID remains in effect until it is deselected, a new Test ID is selected, or the instrument is turned off. Up to 10 Test IDs can be entered. A "No Test ID" option is also available.

To select a Test ID to be associated with future test records, use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to highlight the Select Test ID option and press ENTER. Then use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to highlight your desired choice from the list of 10 Test IDs (or "No Test ID" if you don't want to assign one). Once highlighted, press ENTER to select that Test ID.

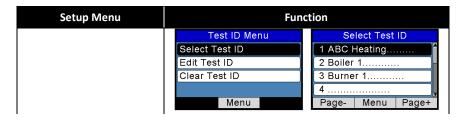

Setup Menu **Function EDIT TEST ID NOTE:** This data can also be entered using the Fyrite[®] User Software (FUS). To Edit the contents of a Test ID record, use the UP (A) and DOWN (▼) arrow buttons to highlight the Edit Test ID option and press ENTER. Test ID Menu Select Test ID Edit Test ID Clear Test ID Menu Use the UP (▲) and DOWN (▼) arrow buttons to highlight your desired choice from the list of 10 Test IDs (the first line of each Test ID is shown). Once highlighted, press ENTER to select that Test ID. The text associated with the selected Test ID (if any) is displayed (3 lines per Test ID) along with the EDIT COMPLETE option. Edit Test ID Edit Test ID 1 ABC Heating ABC Heating 2 Boiler 1 Burner 1 3 Edit Complete Menu Page+ Menu Clear Page-Use the UP (▲) and DOWN (▼) arrow buttons to choose which of the three Test ID lines to edit and then press the ENTER key to begin editing the chosen line. Use the UP (▲) and DOWN (▼) arrow buttons to select the desired letter, number, or special character. / ! @ # \$ & * - ' <SPACE> a-z A-Z 0-9 Use the LEFT (◀) and RIGHT (▶) arrow buttons to


0024-9487 Rev 2 41

press ENTER to finish.

move the cursor horizontally on the selected row.

Repeat for all 3 lines. Then select EDIT COMPLETE and

Press ENTER to save the row's changes.

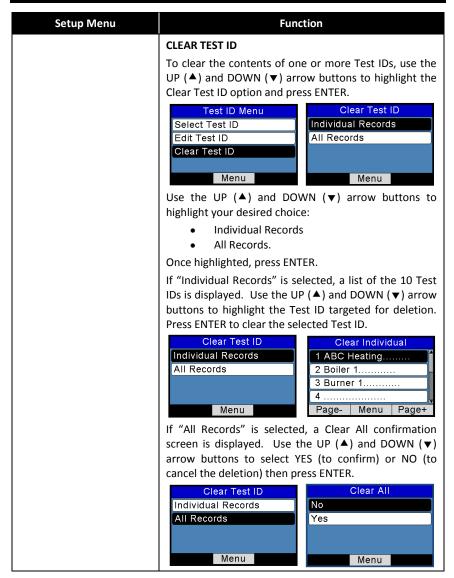

Setup Menu Print Pressure Zoom Test ID Username Menu

Setup Menu

Function

Provides an interface for entering user identification information used on printouts. Generally, the Username fields contain the HVAC company and related information.



NOTE: This data can be entered using the Fyrite[®] User Software (FUS).

Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to choose a row and press ENTER to begin editing the selected row. Then use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to select the desired letter, number, or special character for the current text position.

/ ! @ # \$ & * - ' <SPACE> a-z A-Z 0-9

Use the LEFT (◀) and RIGHT (▶) arrow buttons to move the cursor horizontally on the selected row and repeat the character selection process for each text position. When finished, press ENTER to save the row's changes.

Repeat for all 3 lines. Then select EDIT COMPLETE and press ENTER to finish.







RUN/HOLD Format Overview

Allows the user to select the order in which parameters are displayed in the RUN/HOLD screen.

The combustion parameters shown on the RUN/HOLD screen are dependent on the combustion equations (NA vs. Siegert) that are beings used (see page 52 for more information). The order in which the parameters and data appear in the RUN/HOLD screen can be changed using the RUN/HOLD Format option in the Setup Menu.

Setup Menu	Function	
	Changing the RUN/HOLD Format	
	 Use the UP (▲) and DOWN (▼) arrow buttons to select EDIT FORMAT. Press ENTER to display the current format. 	
	Run/Hold Format Edit Format Reset Format Menu	
	 Change data for a particular location by first using the UP (▲) and DOWN (▼) arrow buttons to select the location in the list that you want to edit. Note that the entire line of each position is highlighted. Press ENTER when the desired row is highlighted. 	
	Edit Run/Hold Format O2 CO Eff CO2 Menu Edit Run/Hold Format O2 CO Eff CO2 Menu Menu	
	Note that this action causes <i>only the text portion</i> of the row to be highlighted. See above. You are now able to scroll through the list of available parameters for this position.	
	3. Use the UP (▲) and DOWN (▼) arrow buttons to scroll through and select the desired data to appear in that position of the display. Press ENTER to save the selection for that row.	
	4. Change the data displayed at other locations by repeating steps 2 and 3.	
	 When finished, use the UP (▲) and DOWN (▼) arrow buttons to select EDIT COMPLETE, located at the bottom of the list. Press ENTER to save the new display format and return to the RUN/HOLD Format options. 	

Setup Menu	Function	
	NOTE: Changing the RUN/HOLD format also can be done through the Fyrite® User Software (FUS).	
	Reset Format (Factory Default) Reset the display format back to the factory default settings as follows:	
	 From the SETUP MENU, use the UP (▲) and DOWN (▼) arrow buttons to select RESET FORMAT. Press ENTER to display the Reset Format confirmation prompt. 	
	Run/Hold Format Edit Format Reset Format Menu	
	 Use the UP (▲) and DOWN (▼) arrow buttons to select YES to confirm the reset of the RUN/HOLD display format to the factory default format. 	
Reset Format? No Yes Menu		

Setup Menu Test ID Username Run/Hold Format Language Selection Menu

Function


The Language Selection option allows the user to choose a language for all menus. Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to scroll through language options (varies based on instrument model). Use ENTER to enable the selected language.





NOTE: The number of available languages may differ based on the combustion equation setting.

Three languages are available for North American (NA) configurations and eight languages are available for Siegert (S) configurations. Refer to the table below and the SETUP MENU for more information.





The audible sound used to signal when a button is pressed can be turned OFF and ON as follows.

Use the UP (♠) and DOWN (▼) arrow buttons to highlight the desired BUTTON SOUND (On or Off), and then press ENTER to select or ESC to discard changes.

Butto	n Sound Menu
Off	
On	
06/29/	12 09:00:51 AM
	Menu

Setup Menu



Function

The analyzer can be set to indicate a calibration reminder during warmup. Calibration reminders can be disabled (set to "Never"), or set to occur at 6, 8, 10, 12, or 15 months after the last calibration. When the preset period is exceeded the instrument will display the reminder, and how long since the sensors were last calibrated. If a calibration reminder is displayed, the operator can press the RUN/HOLD key to move to the RUN/HOLD Screen for normal operation. Regular calibration periods of 6 months to 1 year are recommended.



NOTE: The default CAL Reminder Period is set to NEVER.

Set the calibration reminder period as follows:

 Use the UP (▲) and DOWN (▼) arrow buttons to select the desired time period.



Press ENTER to save the selection or ESC to revert to the previous setting.



NOTE: The date and time settings must be correct to get accurate calibration reminders.


Setup Menu



Function

Provides a list from which to select an inactivity (key press) timeout for automatic shutdown. If no key presses occur for the time specified, the Fyrite[®] INSIGHT[®] Plus initiates an automatic shutdown.


Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to scroll through Inactivity Timeout options (never [default], 20, 30, or 60 minutes). Use the ENTER key to enable the selected timeout.



and


IMPORTANT: The instrument overrides the inactivity timeout, cancels the automatic shutdown (that is, the instrument remains ON), and restarts the timeout countdown if:

- any key is pressed,
- CO is greater than 50 ppm, or
- O₂ is less than 18.8 %.



Provides a list from which the user may chose a *minimum* purge duration time (*minimum* length of time that the pump continues to run) after shutdown is initiated. Use a longer Post-Purge Period if the Fyrite[®] INSIGHT[®] Plus has been exposed to large amounts of CO gas. "PURGING SENSORS" is displayed on the shutdown screen if a Post-Purge Period is enabled.


Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to scroll through Post-purge Period options. Use ENTER to enable the selected Post-Purge Period.



Setup Menu **Function IMPORTANT:** Never disconnect the probe from the instrument until purging is complete. Otherwise, leftover target gas (for example, CO) may remain in the probe and cause inaccurate zeroing at power up that could lead to inaccurate gas measurements afterwards. Setup Menu Provides a list (North American Configuration only) CAL Reminder Period from which the user may select the desired date Inactivity Timeout format used by the instrument: Post-purge Period MM/DD/YY (default for NA configurations) Date Format DD/MM/YY (standard for Siegert) Menu **NOTE:** The DD/MM/YY date format is the only format available in instruments configured with Siegert combustion equations. This parameter is only available in North American configurations. NOTE: In MM/DD/YY format, times are shown in 12-hour format with AM and PM (e.g., 01:23 PM). In DD/MM/YY format, times are shown in 24-hour format (e.g., 13:23). Use the UP (▲) and DOWN (▼) arrow buttons to highlight the desired date format. Press ENTER to save new date format. Press ESC to quit without saving. To set the current date and time, see page 36. Date Format MM/DD/YY DD/MM/YY

0024-9487 Rev 2 49

06/29/12 10:32:18 AM Menu



Function

Provides a list from which the user may select the desired method for zeroing the CO sensor.

- Auto-Zero occurs automatically at warmup.
- Manual zero is used to initiate the zeroing process whenever desired.

Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to highlight the desired zeroing method.

Press ENTER to save. Press ESC to guit without saving.



By default, the Fyrite[®] INSIGHT[®] Plus automatically zeroes all sensors on ambient air when the instrument is turned on.

The Fyrite® INSIGHT® Plus can be set to perform and store a manual zero for the CO sensor. The instrument uses the stored value to indicate background CO values after warmup instead of performing an auto-zero on the background gas.

Setup Menu Post-purge Period Date Format CO Zero Setting O2 Sensor Type Menu


Setup Menu

Function

Provides a list from which the user may select the type of O_2 sensor used in the instrument:

- Standard O₂ sensor (shown below)
- Long-Life O₂ sensor.

Use UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to highlight the installed O₂ sensor option. Press ENTER to select.





Use the LEFT (◀) and RIGHT (▶) arrow buttons to move the cursor horizontally to select between the 2-digit month code (00-12) and the one digit year code (0-9 corresponding to the last digit of the manufacture year). Use UP (▲) and DOWN (▼) arrow buttons to increment and decrement the selected field's value. When finished, press ENTER to save the changes.





Next, verify the current month and year. Use the arrow keys to edit the current month and year (if needed) and press ENTER to confirm.






Setup Menu Setup Menu Date Format CO Zero Setting O2 Sensor Type Combustion Equations Menu

Function

The COMBUSTION EQUATIONS menu allows the user to select either Siegert combustion equations or North American combustion equations.


Use UP (♠) and DOWN (▼) arrow buttons to highlight the desired option. Press ENTER to select.





IMPORTANT: Changing this setting resets several configuration parameters to their default values. Below is a list of affected parameters and those unaffected.

	I
Reset to Default Values	Unchanged
Temperature units	Manual/Auto zero
Pressure units	Calibration data
O ₂ (Oxygen) reference	User name
Print pressure	Test ID
Zoom	O ₂ sensor type
Button sound	Clock
RUN/HOLD format	
Fuel	
Memory erased	



The CO Protect feature protects the CO sensor from the negative effects of being overloaded with CO gas. Such negative effects include:

- a longer sensor recovery time
- a shortened sensor life.

The CO sensor is an electro-chemical sensor whose

Setup Menu Function

lifespan is a function of its exposure to the target gas (CO in this case). Though the CO sensor is designed to be used in combustion environments having a fairly wide range of CO gas present, limiting unnecessary overexposure to CO gas can greatly increase the life expectancy of the CO sensor. In addition, it can shorten sensor recovery time after exposure.





The Protect CO feature sets a protection threshold above which the analyzer's pump shuts off, limiting the CO sensor's exposure to the high levels of CO gas and its negative effects. Enter the Protect CO screen from the Setup Menu. Select the "ON" option and press the ENTER key. The CO threshold limit is displayed. Use the up and down arrows to modify the CO limit threshold value (in 100 ppm increments) before returning to the Main Menu.


During combustion analysis, if the Protect CO feature is enabled and the CO reading equals or exceeds the CO Limit setting, the analyzer shuts off the pump and prompts the operator for a course of action.

- Continue (and risk sensor damage)
- Purge

Continue Option:

- Pump starts.
- Future High CO warnings are suppressed until CO drops below 100 ppm.







 After CO drops below 100 ppm, the analyzer begins enforcing the current Protect CO threshold limit again.

Setup Menu	Function	
	Purge Option: Remove probe tip from flue and press ENTER.	
	Purge Remove Probe Press ENTER Cancel	
	 Pump starts. Purge begins. Measured CO is displayed. 	
	Purge Measured: 500 ppm	
	Purge ends when CO level drops below 50 ppm.	

3.12. Calibration Menu

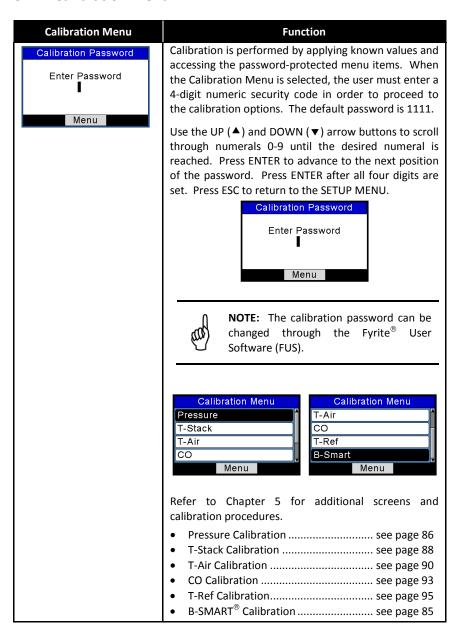

3.13. Diagnostics Menu

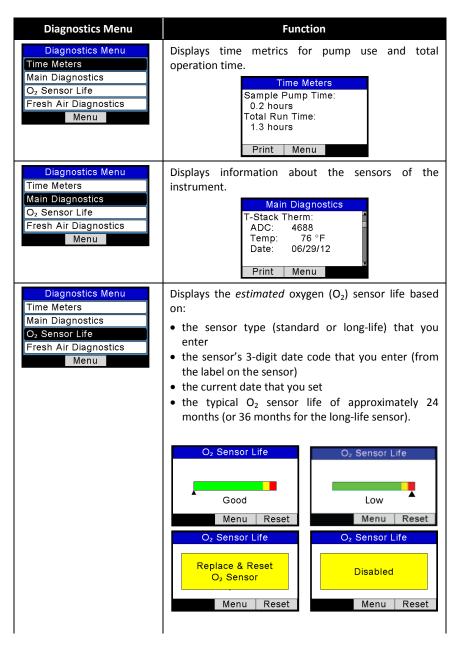

Diagnostics Menu Function When the O₂ life reaches the end of the graph segment, an error message is displayed (see below). O₂ Sensor Life Replace & Reset O₂ Sensor Menu Reset In this case: Note the 3-digit date code on the new sensor Replace the O₂ sensor Press F3 to change and verify sensor date code. **Resetting the Sensor Date Code** Use the LEFT (◀) and RIGHT (▶) arrow buttons to move the cursor horizontally to select between the 2-digit month code (00-12) and the one digit year code (0-9 corresponding to the last digit of the manufacture year) that make up the 3-digit date code. Use UP (▲) and DOWN (▼) arrow buttons to increment and decrement the selected field's value. When finished, press ENTER to save the changes. Enter Code **Enter Code** 060 062 Enter O2 date code Enter O₂ date code Menu Menu **NOTE:** Entering a value of 000 (three zeros) disables this feature. Next, verify the current month and year. arrow keys to edit the current month and year (if needed) and press ENTER to confirm. Set Clock Set Clock **07**/2012 07/2012

0024-9487 Rev 2 57

Verify the month/year


Menu

Verify the month/year

Menu

Diagnostics Menu	Function	
	NOTE: Use this feature as a reminder only. This status is based on: • the date code on the sensor (that you enter) • the current date (that you enter) • the typical O ₂ life span (2 years) • the output of the sensor If either of the entered values is	
	incorrect, the status of your O_2 sensor life will not be accurate. Actual sensor life may vary.	
Diagnostics Menu Time Meters Main Diagnostics O ₂ Sensor Life Fresh Air Diagnostics Menu	Displays fresh air diagnostics similar to the display at warm-up. After the warm-up countdown, any detected errors are displayed. Otherwise, a "Success" message is displayed. Refer to page 96 for a list of errors. No Errors No Errors	
	Diag Successful Warm Up: 48 CO-Auto-Zero Menu	

3.14. Status Menu

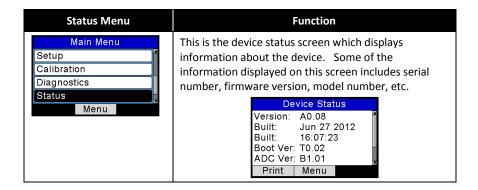

 ∇ ∇ ∇

Section 4. Operation

4.1. Prerequisites

Before beginning your combustion test, verify the following:

- menu items are properly configured
- the water trap is empty, filter is clean, and arrow is pointing UP
- the probe and thermocouple are attached to the instrument
- the power is ON and sufficient (one of the following):
 - AC wall adapter
 - USB cable to PC
 - four new batteries (AA alkaline or lithium)
 - o four fully-charged AA rechargeable batteries
- the warm-up process has completed in fresh air without interruption or errors.

4.2. Sampling Point Examples




WARNING: The illustrations of combustion devices and sampling points in this section are examples only. Be sure to consult with the manufacturer's documentation for the combustion devices you are servicing.

The following combustion devices and example sampling points are shown and explained below:

- Example forced air furnace
- Example hot water tank
- Example 90% efficiency condensing furnace
- Example 80% efficiency fan assist or power vented furnace
- Example atmospheric/gravity vented boiler


O2, CO, Stack Temp.

For atmospheric burner or gravity vented, forced air heating equipment with a clamshell or sectional heat exchanger design, test each of the exhaust ports at the top of the heat exchanger. The probe should be inserted back into each of the exhaust ports to obtain a flue gas sample, before any dilution air is mixed in.

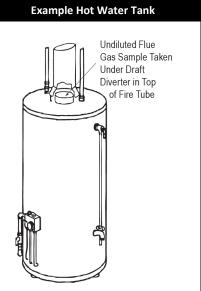


Domestic hot water tanks with the 'bell' shaped draft diverter can be accurately tested by inserting the probe tip directly into the top of the fire tube below the diverter.

Example 90% Efficiency Condensing Furnace

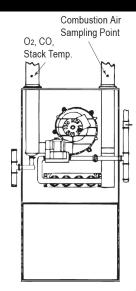


Condensing furnaces/boilers can be tested through a hole drilled in the plastic vent pipe (when allowed by the manufacturer or local authority of jurisdiction) or taken from the exhaust termination.

Example 80% Efficiency Fan Assist or Power Vented Furnace

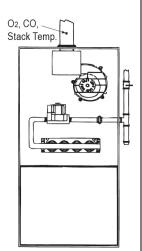

Combustion testing of fan assist or power vented, furnaces/boilers should be done through a hole drilled in the vent immediately above the inducer fan.

Example Atmospheric/Gravity Vented Boiler

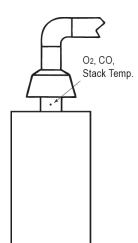

Boilers, which have a 'bell' shaped draft diverter on top, should be tested directly below the diverter through a hole drilled in the vent connector.



IMPORTANT: Review manufacturer recommendations for the combustion device being tested, and be aware of accepted practices of the local jurisdiction before introducing sampling holes into exhaust pipes or ducts.



CAUTION: To avoid the introduction of dangerous exhaust gases into the space, be sure to completely and securely seal any sampling holes made in the exhaust pipes or ducts.

4.3. Combustion Testing Process



WARNING: The Fyrite[®] INSIGHT[®] Plus calculates combustion parameters based on North American or Siegert combustion equations. NA or Siegert configuration is selected in the SETUP MENU. Be sure that your Fyrite[®] INSIGHT[®] Plus is properly configured for your region and desired combustion calculations.

Step	Example Combustion Testing Procedure
1	Confirm that testing prerequisites have been completed (see page 61).
2	Based on the sampling point examples (see page 61) and your combustion application, locate and prepare an appropriate sampling point.
3	Insert the probe into the combustion location.
4	Press the RUN/HOLD button to begin sampling gas. You should see the word RUN in the upper left corner of the display and hear the sample pump turn on. If you see the word HOLD, press the RUN/HOLD button again.
5	Monitor the display for combustion data.
6	If desired, turn on your optional IrDA printer, then press the F1 button on the Fyrite [®] INSIGHT [®] Plus to print the current combustion data. (See page 69 for additional printing information.)
7	Press the F3 button as desired to save combustion data for later retrieval, review, and/or printing.
8	Press the RUN/HOLD button to stop the test. You should see the word HOLD in the upper left corner of the display and hear the sample pump turn OFF. If you see the word RUN, press the RUN/HOLD button again. (You may optionally choose to print test data while in HOLD mode.)
9	Remove the probe from the sampling point and disconnect the probe.
	CAUTION: The probe may be very hot. Allow it to cool, then wipe it clean with a dry cloth.
10	Move the instrument to a clean air environment and press the POWER button to turn off the instrument. The shutdown procedure includes a purge component that clears the sensors of combustion gases.

Step	Example Combustion Testing Procedure
11	Turn on the instrument to optionally print and/or evaluate saved test results (based on your local codes and practices for combustion data and CO levels).
12	To turn off the Fyrite [®] INSIGHT [®] Plus, press and hold the POWER button until you see the Shutdown timer. Wait for the purge function to complete (you will hear the pump stop and the display will shut off).

Use the results of your combustion testing to assist in diagnosing any issues or potential issues that may exist with the combustion system.



NOTE: The recommended time required to achieve a stable measurement is a minimum of 3 minutes.



WARNING: CO gas is life-threatening and part of all combustion processes. Be sure to thoroughly evaluate systems and take ALL appropriate actions to maintain life safety.


4.4. The RUN Screen

The Fyrite® INSIGHT® Plus test data is located in the Run screen. By pressing the RUN/HOLD button, you should hear the pump running and see the word RUN at the upper-left hand corner of the display. The instrument is continuously measuring and calculating the data that is shown in the Run screen.

Press the RUN/HOLD button again. The pump should stop running and the word HOLD should be shown at the upper-left hand corner of the display. The instrument now shows the last measured and calculated data taken before the instrument was placed in HOLD.

Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to scroll through the complete list of measured and calculated values when the instrument is running or in the HOLD mode.

Combustion Test Parameters	NA	Siegert
Oxygen	02	O ₂
Carbon Monoxide	СО	СО
Excess Air	EA	Lambda
Efficiency Using Higher Heating Value	Eff	Eff
Carbon Dioxide	CO₂	CO₂
Setting for Maximum Carbon Dioxide in Flue Gas		CO₂ Max
Stack Temperature	T-STK	T-STK
Ambient Air Temperature	T-AIR	T-AIR
Stack Loss		qA
Efficiency Using Lower Heating Value		Eta
Carbon Monoxide/Carbon Dioxide Ratio		CO/CO₂
CO content referenced to an Oxygen percentage n	CO(n)	CO(n)
Average of 3 Manually Entered Smoke Numbers		AVG SMOKE
Presence of Oil Derivatives (Manually Entered)		OIL DERIVE
Boiler Temperature (Manually Entered)		BOILER TEMP

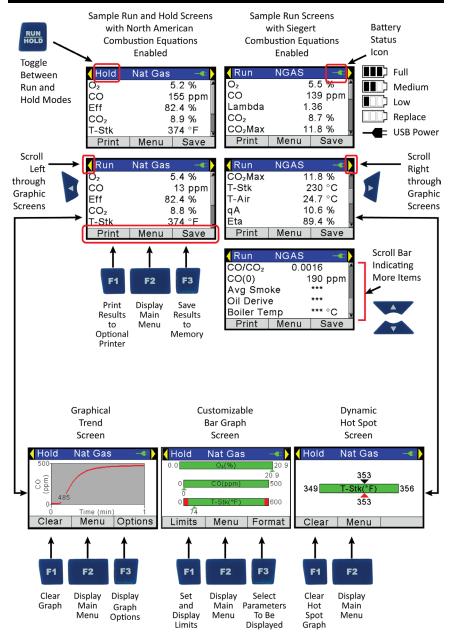

4.5. Making a Draft or Pressure Measurement

The difference in pressure (ΔP) between two areas can be measured by using the analyzer's two pressure ports and the PRESSURE screen. By using the - ΔP port as the reference, the pressure applied to the + ΔP port will be displayed on the PRESSURE screen as the differential pressure between the two ports. Perform a draft/pressure measurement as follows.

Step	Example Draft or Pressure Measurement Procedure	
1	Confirm that testing prerequisites have been completed (see page 61).	
2	Display the MAIN MENU by pressing the MENU (F2) button. If necessary, press ESC until MENU appears above F2.	
3	Use the UP (♠) and DOWN (▼) arrow buttons to select PRESSURE. Press ENTER to display the Pressure screen.	
4	 Before taking a measurement, the pressure sensor may need to be rezeroed if it is not already displaying zero with both pressure ports open to the atmosphere. If necessary, zero the pressure sensor as follows: Press the ZERO (F2) button. Disconnect any hoses connected to the +ΔP and -ΔP ports, and then press ENTER to zero the pressure sensor. Reconnect any hoses. When measuring draft, leave the -ΔP port open to the atmosphere and connect the probe's draft hose to the +ΔP port. 	
5	 Do one of the following to measure draft or differential pressure: To measure draft, insert the probe into the stack and observe the draft reading on the PRESSURE screen. To measure differential pressure, connect sampling hoses to the +ΔP and -ΔP ports, and place the ends of the hoses into the two areas being compared. The differential pressure between the two areas is now displayed on the PRESSURE screen. If the pressure at the +ΔP port is higher than the -ΔP port, the pressure reading will be positive. If it is lower, the reading will be negative. 	

4.6. Printing Using the Optional IrDA Printer


The instrument has the ability to store, recall (to the display), and print sets of time- and date-coded test records. The time and date are set through software menu selections (see page 36).

- Displaying stored records is done through the MEMORY DIRECTORY MENU (see page 30).
- Press F1 to print displayed test records.

Step	Example Printing Procedure Using Optional IrDA Printer	
1	Fyrite [®] INSIGHT [®] Plus should be turned on and displaying a screen with an F1 Print option.	
2	Check for a sufficient supply of paper and batteries in the IrDA printer.	
3	Turn on the printer (slide switch on side of printer to the ON position)	
4	Position the printer within 8 to 16 inches (20 to 41 cm) from the instrument and at no greater than a 60-degree angle (see page 71).	
5	Press F1 to print and turn off printer when complete.	

Sample Run Screen Printouts for North American (left) and Siegert (right) Combustion Equations are shown below.

Fyrite[®] INSIGHT[®] Plus provides three lines of 20 characters for user information. This information will appear with test records when they are printed or downloaded. User name and optional information are entered via software menu selections in the SETUP MENU (see page 43) or via the Fyrite[®] User Software (FUS).

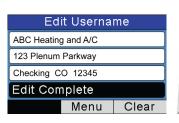



ABC Heating and A/C 123 Plenum Parkway Checking CO 12345

BACHARACH

BACHARACH, Inc. Insight Plus SN: AB1234

Time: 06:47:23 PM Date: 07/20/12

> Fuel Nat. Gas

7.0 % 0_2 CO 107 ppm Eff 80.9 % CO_2 7.9 % 374 °F T-STK 68.Ø °F T-AIR EΑ 44.8 % CO (O) 161 ppm

Comments:

Bridge Street HVAC Outer Kensington West London, ENG SW1J 3

BACHARACH

BACHARACH, Inc. Insight Plus SN: AB1234

Time: 18:47:23 Date: 20/07/12

> Fuel NGAS

 0_{2} 7.0 % CO 107 ppm Lambda 1.5 CO_2 7.8 % CO₂ Max 11.8 % 190 °C T-STK 20.0°C T-ATR αA 9.5 % Eta 90.5 % Eff 80.9 % CO/CO2 0.0014 CO (O) 161 ppm *** AVG SMOKE *** OIL DERIV *** °C BOILER TEMP

Comments:



NOTE: The printout order of parameters matches any RUN/HOLD format changes that have been made (see page 43).



IR Communications Settings:

Baud Rate: 9600
Data Bits: 8
Stop Bits: 1
Parity: None
Protocol: IRDA-SIR

Distance: 8-16 in (20-41 cm) Angle: 60° maximum


Fyrite[®] INSIGHT[®] Plus can be setup to include a custom logo on printouts. Logos are loaded into the instrument using the Fyrite[®] User Software (FUS). Logo size is limited to 192 x 384 pixels (height x width) and must be in .BMP, .JPG, .PNG, or .TIFF format. For best results, the logo should be saved in black and white.



4.7. Graphics Screens

4.7.1. Overview

Dynamic graphics screens provide an alternative way of viewing key combustion data and parameters in real time. The Fyrite[®] INSIGHT[®] Plus displays three graphics screens which provide continuous updates and are described in the table that follows. The screens are accessed from the RUN/HOLD screen by using the LEFT (\blacktriangleleft) and RIGHT (\blacktriangleright) arrow buttons. See the figure below.

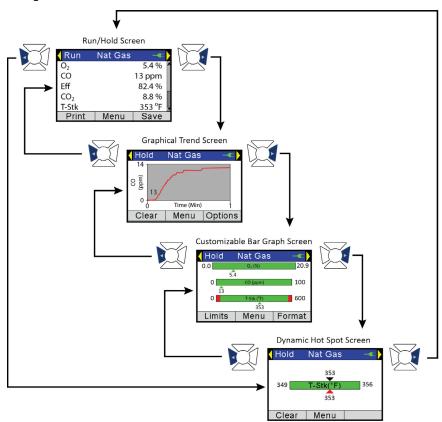


Use function keys F1 and F3 to configure and define options (if available) such as alarm points, parameters to be monitored, timing parameters, etc. Components of the graphics screens are identified in the sections that follow.


Screen	Description
Graphical "Line Graph" Trend Screen	 User-selectable combustion parameter User-selectable time period
Bar Graph Screen	 1, 2, or 3 bar graphs User-selectable combustion parameter for each bar User-selectable limits for each parameter
Stack Temperature Hot Spot Screen	 Used to dynamically locate "hot spot" in flue Based on stack temperature readings Use probe stop to maintain optimal probe position

4.7.2. Graphical Line Graph Trend Screen

Trend Screen	Description	
Graph	 Graphical representation of a user-selected combustion parameter (from list) over a user-defined time period (from list) Current value is shown numerically on the graph Dynamic graph window provides continuous updates 	
Left Arrow	Press the LEFT (◀) arrow to go to the main RUN/HOLD Screen.	
Right Arrow	Press the RIGHT (▶) to go to the Bar Graph Screen.	
Y Axis	 Label shows user-selected combustion parameter, units, and range values. The display range values at the top and bottom of the Y axis are assigned in real time and are based on the selected combustion parameter and its range of values over the selected time period. 	
X Axis	 Label shows "Time", the selected time units (sec or min), and the associated range values (30 sec, 1 min, 3 min, 5 min, and 15 min). The time value in the window scrolls. 	
Clear (F1)	Press the F1 button to clear the graph and restart if in Run mode.	
Menu (F2)	Press the F2 button to return to the main menu.	

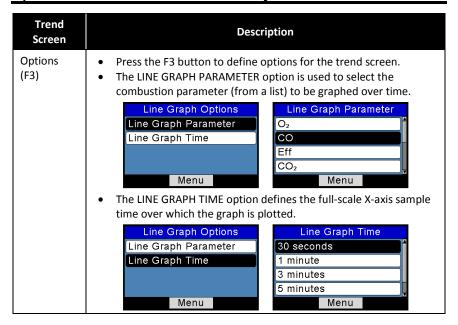

4.7.3. Bar Graph Screen

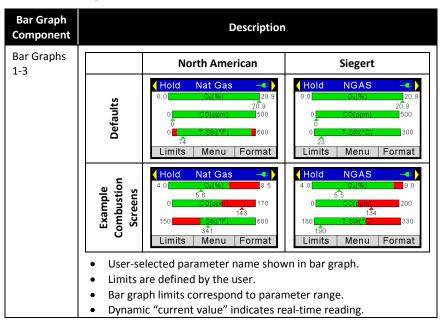

Bar Graph Component	Description	
	Color of "current value" pointer is based on limit status:	
	Green: Between upper and lower limit	
	Red: Outside upper or lower limit	
	 User-defined limits shown on bar graph in red and green. Display range adjusts to real-time values. 	
Left Arrow	 Press the LEFT (◄) arrow to go to the Line Graph Trend screen. 	
Right Arrow	 Press the RIGHT (►) arrow to go to the Stack Temperature Hot Spot Screen. 	
Limits (F1)	Used to enter user-defined upper and lower limits for selected combustion parameters. Use the UP (♠) and DOWN (▼) arrow buttons to highlight desired parameter. Press ENTER button to select the desired parameter. Select Parameter CO Eff CO2 Menu Use the LEFT (◄) and RIGHT (▶) arrow buttons to select the desired position within the upper and lower limits. Use the UP (♠) and DOWN (▼) arrow buttons to change the value. Press ENTER when finished. Press ESC to exit with no changes. Graph Limits O2 Upper: Q0.9 % Lower: O0.0 % Press ENTER Menu Reset Menu Reset Use the RESET function (F3) to return to default values.	
Menu (F2)	Press the F2 button to return to the Main menu.	

Bar Graph Description Component Format (F3) Press F3 to display the Bar Graph format screen. It contains three bar graph options--each of which defines the combustion parameter associated with that graph. A fourth option is selected when editing is complete. Use the UP (▲) and DOWN (▼) arrow buttons to highlight one of the rows corresponding to the three bar graphs (top, middle, or bottom) (see left, below). Note that the entire line of each position is highlighted. Bar Graph Format Hold Nat Gas O_2 20.9 500 CO T-Stk 600 Edit Complete Limits Menu Format Menu When the desired row is highlighted, press ENTER to enter EDIT mode for bar graph associated with that row. Note that this action causes only the text portion of the row to be highlighted (not the entire row). See right, below. Then use the UP (▲) and DOWN (▼) arrow buttons to scroll through available combustion parameters to monitor for the bar graph associated with that row. Press ENTER to select. Bar Graph Format Bar Graph Format O_2 O_2 CO CO T-Stk T-Stk Edit Complete Edit Complete Menu Menu Repeat this process for up to three bar graphs. When finished, use the down arrow key to select the EDIT COMPLETE option and press ENTER to return to the live bar graph screen.

4.7.4. Stack Temperature Hot Spot Screen

Hot Spot Component	Description
Hot Spot Graph	 Press RUN/HOLD to start/stop the hot spot function. T-STACK parameter name shown in graph. Limits are determined automatically. Dynamic "current value" pointer indicates real-time value. Color of "current value" pointer is based on limit status: Black (Top): Hottest reading since last "Clear" Red (Bottom): Current reading Ideally, position probe so current reading (bottom) and
	highest reading (top) match.
Left Arrow	 Press the LEFT (◀) arrow to go to the Bar Graph Screen.
Right Arrow	 Press the RIGHT (►) arrow to go to the main RUN/HOLD Screen.
Clear (F1)	 Press the F1 button to clear the display and restart if in RUN mode.
Menu (F2)	Press the F2 button to return to the Main menu.

4.8. Taking Ambient CO Measurements (Siegert Only)

This procedure takes approximately 15 minutes to complete and provides a minute-by-minute snapshot of CO readings, as well as a "Max CO" value that represents the highest CO reading measured during the entire 15-minute test. Results can be saved to memory, downloaded, and/or printed. Use the following procedure to perform an ambient CO measurement.

Step	Example Procedure for Taking Ambient CO Measurements	
1	Turn on the instrument in a fresh air environment and wait for initialization to complete.	
2	Verify successful initialization (no errors).	

Step	Example Procedure for Taking Ambient CO Measurements	
3	If using battery power, check battery status. If battery life is questionable, replace the batteries, as the Ambient CO test takes approximately 15 minutes to complete.	
4	Move instrument to target location to be tested.	
5	Press F2 to display the Main Menu.	
6	Use the down arrow to highlight Ambient CO Test and press the ENTER button.	
7	Follow the on-screen instructions to initiate the test.	
8	Refer to page 29 for details on navigating the ambient CO test screens, viewing results, saving results to memory, and printing results.	

4.9. PC Interface and Fyrite® User Software

A PC with $Fyrite^{\otimes}$ User Software (FUS) installed can set, edit, and transfer the following:

- instrument time and date
- custom fuels
- test ID
- user name
- customer logo
- instrument setup
- calibration password
- B-SMART[®] code
- test records from the instrument's memory
- firmware updates.



Section 5. Calibration and Maintenance

5.1. Serviceability

The instrument operator is able to easily replace the following components without the use of tools:

- probe assembly
- probe filters
- batteries
- · printer paper.

Additionally, a technician, with the use of readily available hand tools and factory-provided instructions, can:

- perform basic diagnostics
- replace sensors
- confirm proper operation

before putting the unit back into service. Field calibration is also possible with the proper equipment. Refer to the calibration section starting on page 86 for more information.

5.2. Cleaning the Probe

The probe tube and gas sample hose will become dirty under normal use.



NOTE: The water trap's filter element should prevent soot from reaching the analyzer's internal components. If the probe is not kept clean, it could become clogged and restrict the flow of gas into the analyzer, resulting in incorrect combustion test readings and calculations.



NOTE: An analyzer that tests natural gas furnaces normally requires less frequent cleaning than an analyzer used for testing coal- or oil-fired furnaces.

5.2.1. Equipment Required

- Alcohol
- Aerosol Can of Automotive Carburetor Cleaner
- Clean Rag
- Source of Compressed Air (optional)




CAUTION: Do not use flammable or combustible substances (like carburetor fluid used for cleaning the probe) near an open flame.

5.2.2. Procedure

Step	Cleaning the Probe	
1	Remove gas sample hose from the top of the water trap.	
	CAUTION: Carburetor cleaner damages plastic components. Take precautions not to spray cleaner onto the probe handle or analyzer.	
2	Insert the plastic spray tube of the carburetor cleaner into the gas sample hose, and then liberally spray carburetor cleaner through the hose and out the probe tube.	
3	After spraying, remove all the residual cleaner by repeatedly flushing the gas hose and probe tube with alcohol.	
4	Wipe off the surfaces of the probe and tubing with a clean cloth.	
5	Allow the parts to dry completely. If available, blow compressed air through the probe to expedite the drying process.	
6	Reconnect gas sample hose to top of the water trap.	

5.3. Water Trap and Filter Replacement

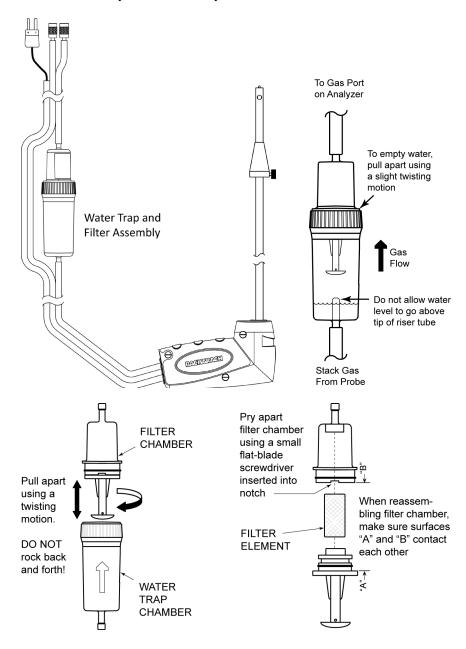

CO


5.4. O₂ and/or CO Sensor Replacement



NOTE: The O_2 sensor life is approximately 2 years. The LL O_2 (long life) sensor life is approximately 3 years. The CO sensor life is greater than 3 years with regular calibration.

02

5.4.1. Accessing the Sensors

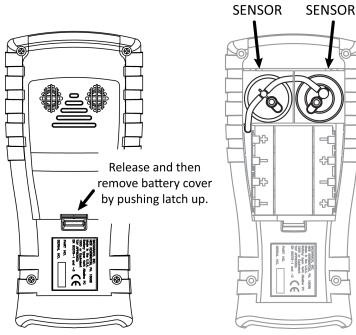

5.4.2. Material Required (As Needed)

- O₂ Sensor (2 year) (P/N 0024-0788) or LL O₂ Sensor (3 year) (0024-1591)
- CO Sensor (P/N 0024-1593) or B-SMART® pre-calibrated sensor (P/N 0024-1616).

5.4.3. O₂ Sensor Replacement Procedure

Follow the procedure below for O_2 and long-life (LL) O_2 sensors. Refer to the illustration on page 84.


Step	O ₂ Sensor Replacement	LL O₂ Sensor Replacement
1	Remove battery door and connector tubing from both sensors.	Remove battery door and connector tubing from both sensors.
2	Pull O ₂ sensor from its socket.	Remove LL O ₂ cap by twisting counter clockwise.
3	Remove the O ₂ cap.	Gently pull LL O ₂ sensor out of its socket.
4	Properly dispose of the old sensor.	Properly dispose of the old LL O_2 sensor.
5	Record the 3-digit date code from the new sensor for later use.	Record the 3-digit date code from the new sensor for later use.
6	Engage the nub on the new sensor within the slot on the cap's side and twist to secure the cap and sensor together.	Plug new O ₂ sensor into its socket.
7	 Install the cap and sensor unit by: Aligning the ribs on the sides of the sensor with the corresponding shape in the base. Inserting the pins into the connectors in the base. 	Install the $\rm O_2$ sensor cap by aligning it toward the "open" position (12 o'clock) as shown in the diagram below, then twisting the cap clockwise approximately 40° to the "closed" position (2 o'clock).
8	Reattach tubing.	Reattach tubing.
9	Turn on the unit and enter the 3-digit sensor date code via the Setup Menu selection for " O_2 Sensor Type" (p 51). Then enter the current date.	Turn on the unit and enter the 3-digit sensor date code via the Setup Menu selection for " O_2 Sensor Type" (p 51). Then enter the current date.

5.4.4. CO Sensor Replacement Procedure

Follow the procedure below and refer to the illustration on page 84.

Step	CO Sensor Replacement Procedure
1	Remove battery door and the connector tubing from the CO sensor.
2	Remove CO cap by twisting counter clockwise.
3	Gently pull CO sensor out of its socket.
4	Properly dispose of the old CO sensor.

Step	CO Sensor Replacement Procedure
5	Plug new CO sensor into its socket.
6	Install the CO cap by aligning it toward the "open" position (12 o'clock) as shown in the diagram below, then twisting the cap clockwise approximately 40° to the "closed" position (2 o'clock).
7	Reattach tubing.
8	Calibrate the CO sensor (using the calibration procedure on page 93, or using the B-SMART $^{\!\otimes}$ procedure on page 85).

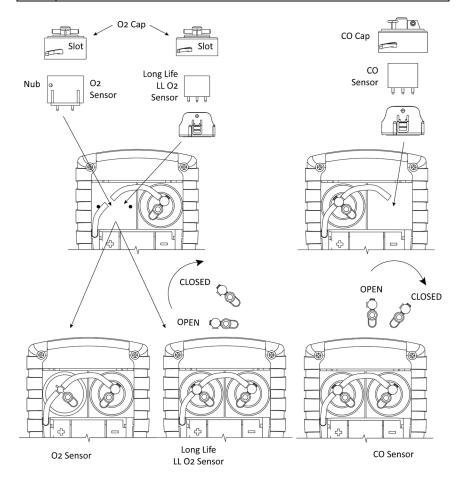

O2, LL O2, and CO Sensor Replacement

5.4.5. B-SMART® CO Sensor Replacement

Step	B-SMART [®] CO Sensor Replacement
1	Enter the CALIBRATION MENU. Note that this requires password validation (see page 55).
2	Use the UP (♠) and DOWN (▼) arrow buttons to select B-Smart. Press ENTER to display the B-Smart code screen.
3	Use the UP (\blacktriangle) and DOWN (\blacktriangledown) arrow buttons to enter the 10-digit alphanumeric code supplied with the pre-calibrated B-SMART® sensor. Use the LEFT (\blacktriangleleft) and RIGHT (\blacktriangleright) arrow buttons to move the cursor across the screen. Press ENTER.
	Calibration Menu T-Air CO T-Ref B-Smart Enter Code 00-00-00-00-00 Press ENTER Menu Menu
	NOTE: If the correct code was entered, the analyzer accepts it and returns to the CALIBRATION MENU. If an incorrect code was entered, the screen will display "Invalid Code." Check to make sure the correct code has been entered. If problem persists, contact your nearest Bacharach Service Provider.
	NOTE: B-SMART® codes can be entered through the Fyrite® User Software (FUS).



NOTE: Installing a B-SMART[®] sensor forces the instrument to perform a zero function (either manual or automatic).



NOTE: Bacharach offers a convenient Exchange Program (where available) that allows the customer to regularly receive pre-calibrated replacement sensors that include a code that can be entered into the analyzer for a quick convenient setup. Contact Bacharach customer service for more details about this program.



0024-9487 Rev 2 85

5.5. Pressure Sensor Calibration

This procedure calibrates the pressure sensor to a known pressure value.

5.5.1. Materials Required

- Bellows
- Manometer


Range: \pm 8 in. of water column (\pm 20 mB) Accuracy: \pm 0.01 in. of water column (\pm 0.025 mB)

5.5.2. Procedure

NOTE: The unit-of-measure for pressure is selected from the Pressure Units parameter in the Setup Menu. In the following procedure "inwc" (inches water column) is selected, but note that any unit-of-measure can be used for calibration purposes. Below are unit conversions for reference.



- 249 Pascals/inwc
- 2.49 mB/inwc
- 2.49 hPa/inwc
- 25.4 mm H₂O/inwc

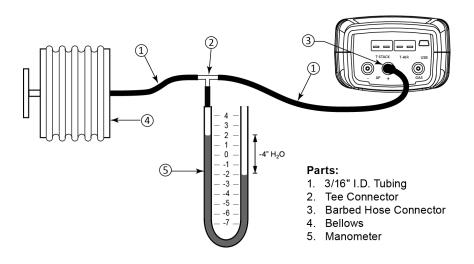

Step		Pressure Sensor Calibration	n Procedure
1		essure sensor calibration equipe analyzer to the calibration eq	oment as shown above, but DO uipment at this time.
2	If not already done, power ON the analyzer and display the CALIBRATION menu. Note that this requires password validation (see page 55).		
3	Use the UP (♠) and DOWN (▼) arrow buttons to select PRESSURE and then press ENTER to display the CALIBRATE PRESSURE screen.		
	T-S T-A CO	ssure Measu Applied in Menu Print	d: -4.00 inwc Press ENTER Menu Reset
		pplied" is a known value of pr	eing detected by the pressure ressure that will be applied for
4	With both the - ΔP and + ΔP ports open to the atmosphere, observe that the current measured pressure reading should be 0.00 \pm 0.01 inwc. If necessary, zero the pressure sensor (Menu \rightarrow Pressure \rightarrow Zero) then repeat steps 2 through 4).		
5	Connect the hose from the manometer to the $+\Delta P$ port and apply a negative pressure to this port by adjusting the bellows for a manometer reading of -4.00 (negative 4.00). Other units are shown below.		
	Units	Name	Nominal Calibration Point
	inwc	inches water column	-4.00 inwc
	mB	millibars	-10.00 mB
	hPa	hecto Pascals	-10.00 hPa
	Pa	Pascals	-1000 Pa
	mm H ₂ O	millimeters of water	-101.6 mm H ₂ O
6	Use the UP (♠), DOWN (▼), LEFT (◀), and RIGHT (▶) arrow buttons to enter an "Applied" value that exactly equals the manometer reading.		

0024-9487 Rev 2 87

of the screen.

NOTE: The calibration range is from -6 to -2 inwc (-15 to -5 mB). An attempt to calibrate outside this range will cause the message "Applied Value High" (or Low) to appear at the bottom

Step	Pressure Sensor Calibration Procedure
7	Wait until the Measured reading stabilizes, and then press ENTER to calibrate the pressure sensor's Measured value to that of the Applied value. The message, "Good Calibration" should briefly appear, followed by the CALIBRATION menu. Calibrate Pressure
	Good Calibration Entry Saved
8	Remove calibration equipment.

5.6. T-Stack Calibration

This procedure first zeroes and then spans stack temperature to known temperature values.

The use of an electronic thermocouple simulator is the preferred method of producing the desired calibration temperatures. Alternatively, ice and boiling water baths can be used.

5.6.1. Materials Required

Thermocouple simulator (K-type)

Range: 0 to 600° F (-18 to 316° F) Accuracy: $\pm 0.5^{\circ}$ F ($\pm 0.3^{\circ}$ C)

• (Alternatively) ice water, boiling water, thermometer

5.6.2. T-Stack Calibration Procedure

Step	T-STACK Calibration Procedure	
1	Plug the simulator into the T-STACK connector located at the bottom of the analyzer. Alternatively: Plug the probe's thermocouple into the T-STACK connector located at the bottom of the analyzer.	
	IMPORTANT: DO NOT attach the probe's gas hose to the analyzer's GAS port; otherwise water will be drawn into the analyzer!	

T-STACK Calibration Procedure Step 2 If not already done, turn ON the analyzer and display the CALIBRATION Menu. Note that this requires password validation (see page 55). Calibration Menu Pressure T-Stack T-Air CO Menu 3 Use the UP (▲) and DOWN (▼) arrow buttons to highlight T-Stack, and then press ENTER to display the CALIBRATE TS-ZERO screen. Calibration Menu Calibrate TS-Zero Pressure Measured: 31°F T-Stack Applied: **3**2.0 °F Press ENTER T-Air CO Menu Print Menu Reset "Measured" is the current temperature reading. "Applied" is a known temperature that will be applied for calibration purposes. 4 Set thermocouple simulator to 32° F (0° C), and then use the UP (▲), DOWN (▼), LEFT (◀), and RIGHT (▶) arrow buttons to enter an Applied value that exactly equals the setting of the simulator. Calibrate TS-Zero Measured: Applied: 32.0°F Press ENTER Print Menu Reset Alternatively: Submerge probe tip into an ice-water bath with a thermometer, wait several minutes, and then use the UP (▲) and DOWN (▼) arrow buttons to enter an Applied value that exactly equals the thermometer reading. **NOTE:** The calibration range is from 32 to 41° F (0 to 5° C). An attempt to calibrate outside this range will cause the message "Applied Value High" (or Low) to appear at the bottom of the screen. 5 Wait until the Measured reading stabilizes, and then press ENTER to calibrate the TS-Zero Measured value to that of the Applied value, after which the message "Good Calibration" should briefly appear followed by the CALIBRATE

0024-9487 Rev 2 89

TS-SPAN screen.

Step	T-STACK Calibration Procedure	
6	Set thermocouple simulator to 572° F (300° C), and then use the UP (\blacktriangle), DOWN (\blacktriangledown), LEFT (\blacktriangleleft), and RIGHT (\blacktriangleright) arrow buttons to enter an Applied value that exactly equals the setting of the simulator.	
	Alternatively: Submerge probe tip into a container of boiling water with a thermometer, wait several minutes, and then use the arrow buttons to enter an Applied value that exactly equals the thermometer reading.	
	Calibrate TS-Span Measured: 570 °F Applied: 572 °F Press ENTER Print Menu Reset	
	NOTE: The calibration range is from 175 to 625° F (79 to 329° C). An attempt to calibrate outside this range will cause the message "Applied Value High" (or Low) to appear at the bottom of the screen.	
7	Wait until the Measured reading stabilizes, and then press ENTER to calibrate the TS-Span Measured value to that of the "Applied" value, after which the message "Good Calibration" should briefly appear followed by the CALIBRATION screen being re-displayed.	

5.7. T-Air Calibration

This procedure first zeros and then spans T-AIR temperature to known temperature values.

The use of an electronic thermocouple simulator is the preferred method of producing the desired calibration temperatures. Alternatively, containers of ice water and boiling water can be used.

5.7.1. Materials Required

• Thermocouple Simulator (K-type)

Range: 0 to 600° F (-18 to 316° F) Accuracy: $\pm 0.5^{\circ}$ F ($\pm 0.3^{\circ}$ C)

• (Alternatively) Ice Water, Boiling Water, Thermometer

5.7.2. T-Air Calibration Procedure

Step	T-Air Calibration Procedure
1	Plug the simulator into the T-AIR connector located at the bottom of the analyzer. Alternatively: Plug the probe's thermocouple into the T-AIR connector located at the bottom of the instrument.
	IMPORTANT: DO NOT attach the probe's gas hose to the analyzer's GAS port, otherwise water will be drawn into the analyzer!
2	If not already done, turn ON the analyzer and display the CALIBRATION MENU. Note that this requires password validation (see page 55). Calibration Menu Pressure T-Stack T-Air CO Menu
3	Use the UP (▲) and DOWN (▼) buttons to highlight T-Air, and then press ENTER to display the CALIBRATE TA-ZERO screen. Calibration Menu Pressure T-Stack T-Air CO Menu Calibrate TA-Zero Measured: 30.4 °F Applied: \$2.0 °F Press ENTER Print Menu Reset
	NOTE: "Measured" is the current temperature reading, while "Applied" is a known temperature that will be applied for calibration purposes.
4	Set thermocouple simulator to 32° F (0° C), and then use the UP (▲), DOWN (▼), LEFT (◄), and RIGHT (▶) arrow buttons to enter an applied value that exactly equals the setting of the simulator. Calibrate TA-Zero Measured: 30.4°F Applied: ②2.0°F Press ENTER Print Menu Reset
	Alternatively: Submerge probe tip into an ice-water bath with a thermometer, wait several minutes, and then use the UP (▲), DOWN (▼), LEFT (◄), and RIGHT (►) arrow buttons to enter an applied value that exactly equals the thermometer reading.

0024-9487 Rev 2 91

Step	T-Air Calibration Procedure
	NOTE: The calibration range is from 32 to 41° F (0 to 5° C). An attempt to calibrate outside this range will cause the message "Applied Value High" (or Low) to appear at the bottom of the screen.
5	Wait until the measured reading stabilizes, and then press ENTER to calibrate the TA-Zero Measured value to that of the applied value, after which the message "Good Calibration" should briefly appear followed by the CALIBRATE TA-SPAN screen. Calibration Menu Pressure T-Stack T-Air CO Menu Calibrate TA-Zero Measured: 30.4°F Applied: \$2.0°F Press ENTER Print Menu Reset
6	Set thermocouple simulator to 212° F (100° C), and then use the UP (▲), DOWN (▼), LEFT (◄), and RIGHT (▶) arrow buttons to enter an applied value that exactly equals the setting of the simulator. Calibrate TA-Span Measured: 210.3°F Applied: 212°F Press ENTER Print Menu Reset Print Menu Reset Alternatively: Submerge probe tip into a container of boiling water with a thermometer, wait several minutes, and then use the UP (▲), DOWN (▼), LEFT (◄), and RIGHT (▶) arrow buttons to enter an applied value that exactly equals the thermometer reading.
	NOTE: The calibration range is from 194 to 230° F (90 to 110° C). An attempt to calibrate outside this range will cause the message "Bad Calibration Wrong CAL Entry" to appear in the following step.
7	Wait until the measured reading stabilizes, and then press ENTER to calibrate the TA-Span Measured value to that of the applied value, after which the message "Good Calibration" should briefly appear followed by the CALIBRATION MENU screen being re-displayed.


5.8. CO Sensor Calibration

5.8.1. Materials Required

- Calibration kit, P/N 0024-7059
- Gas cylinder: 500 ppm CO in air, P/N 0024-0492


5.8.2. CO Manual Zero Procedure

The CO zeroing process is done automatically during warmup or manually using the manual zero feature. To perform a manual zero, follow the steps below. If your instrument is configured for CO auto mode, skip this CO manual zero procedure and go to the CO Sensor Span procedure that follows.

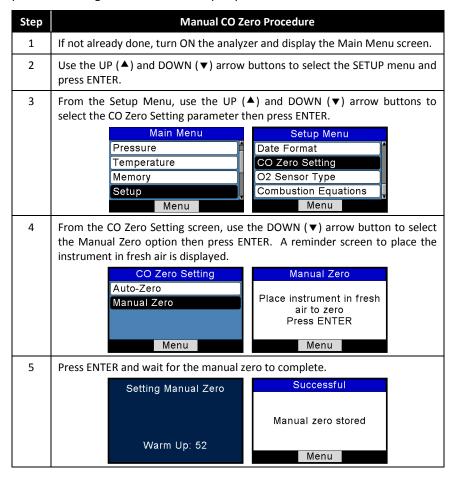

5.8.3. CO Sensor Span Procedure

Step	CO Span Procedure	
1	From the Calibration Menu, use the UP (♠) and DOWN (▼) arrow buttons to highlight CO, and then press ENTER to display the CALIBRATE CO screen. Note that this requires password validation (see page 55).	
	Calibration Menu Pressure T-Stack T-Air CO Measured: 469 ppm Applied: 0500 ppm Press ENTER Print Menu Reset "Measured" is the current CO reading, while "Applied" is a known CO level that will be applied for calibration purposes.	
2	Use the UP (\blacktriangle), DOWN (\blacktriangledown), LEFT (\blacktriangleleft), and RIGHT (\blacktriangleright) arrow buttons to enter an Applied value that exactly equals the concentration stamped on the CO cylinder.	
	NOTE: Bacharach recommends using a 500 ppm calibration gas, however the calibration range is from 20 to 1,000 ppm. An attempt to calibrate outside this range will cause the message "Applied Value High" (or Low) to appear at the bottom of the screen.	
3	Attach a 500 ppm CO cylinder to the regulator and connect calibration kit components as shown below. Apply 500 ppm carbon monoxide in an air balance calibration gas.	
4	Wait until the Measured reading stabilizes and then press ENTER. The message "Good Calibration" should briefly appear. If the sensor's output is low, but still usable, then the message "Good Calibration WARNING Low Sensor" will appear. The sensor will now be marked as being Low in the Warm up screen. If the sensor's output is too low to be usable, then the message "Bad Calibration Sensor End of Life, Entry Not Saved" will appear.	
5	Close the regulator and remove the CO cylinder.	

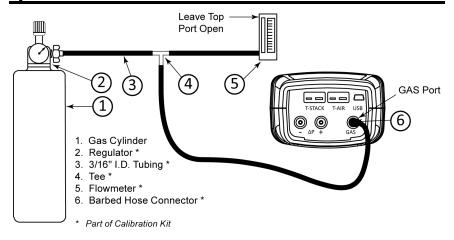

5.9. T-Ref Sensor Calibration

The T-Ref sensor is located inside the instrument. Calibration is done at the factory and should not need to be done in the field.



Section 6. Troubleshooting

6.1. Error and Warning Messages

Message	Description
T-STK Disconnected	The probe thermocouple is not connected to the analyzers T-Stack connector. Plug the probe thermocouple plug into the T-Stack connector at the bottom of the instrument.
Check Sensor O ₂	O ₂ sensor output is low, but still usable. Sensor may need to be replaced in the near future. The arrow on the O ₂ Sensor Life screen is in the "replace" segment. Refer to page 56. O ₂ Sensor Life Low Menu Reset
Replace Sensor O ₂	$\rm O_2$ sensor output is low and should be replaced. The arrow on the $\rm O_2$ Sensor Life screen is beyond the bar graph (typically 2 years for standard $\rm O_2$ sensors and 3 years for long-life $\rm O_2$ sensors). Refer to page 56.
Bad Sensor O ₂	O ₂ sensor output is too low and is not usable.
Low Sensor CO	CO sensor output was low but still usable. Sensor may need to be replaced in the near future.
Low Battery	Battery voltage is low. Replace the batteries.
Applied Value High/Low	An attempt was made to calibrate a sensor outside its range—either above (High) or below (Low) the acceptable range.
Warmup Sensor Error	 CO sensor was not zeroed at warmup because of high output. Run instrument on fresh air then restart instrument to re-zero sensor. If the message persists, the CO sensor may need to be replaced. Stack or Air temperature sensors are measuring temperature outside the range of -4° to 212° F at warmup. Make sure that the Stack and Air thermocouples are sampling ambient room air within the temperature range at warmup. The Fyrite[®] INSIGHT[®] Plus was turned on with the probe sampling flue gas. Move the probe to fresh air and restart the instrument. Messages will indicate which sensors are in error.

Message	Description	
Set Clock	Time and date values need to be set in the instrument.	
	NOTE: If a "set clock" message occurs, then the instrument ignores CO calibration reminder messages and all O ₂ -related messages <i>except</i> "Bad Sensor."	
Cal Reminder ## months	The calibration reminder occurs during warmup and is based on the CO calibration reminder setting (see page 47), the current date setting (see 36), and the date of the last calibration of the CO sensor.	
XXX	Occurs in the number fields of sensors that have achieved over-range condition.	
* * *	Occurs in the number fields of sensors. Replaces in-error sensor values and any calculated values that depend on those sensor values.	
	Occurs in the number fields of sensors and indicates that values were not calculated.	



NOTE: If a particular sensor is in error during warmup, the instrument automatically displays the error. The instrument continues to operate with the sensor in error, however information dependent on the sensor in error is not displayed.

6.2. Replacement Parts

Part Number	Description
0204-0004	Battery, AA alkaline
0024-1453	Battery door/sensor cover
0024-1461	Boot , rubber
0024-1616	B-SMART® CO sensor w/ NOx filter
0024-0865	Carry case (hard)
0024-1587	CO sensor cap (includes gasket)
0024-1593	CO sensor w/ NOx filter
0024-1585	End plate (includes O rings)
0007-1644	Filters, pkg. of 3
0024-9487	Instruction manual
0024-1591	LL O ₂ sensor
0024-1586	LL O ₂ sensor cap (includes gasket)
0024-1471	O ring kit
0024-0788	O ₂ sensor
0024-1421	O ₂ sensor cap (includes gasket)
0024-1310	Printer paper, box of 5 rolls
0024-3004	Probe and hose assembly (North America)
0024-3053	Probe and hose assembly (Siegert)
0019-3037	Probe stop
0024-3073	Pump assembly
0024-1583	Sensor adapter
0104-1798	Thermocouple (temperature, air), K type (1 inch long)
0104-1797	Thermocouple (temperature, stack), K-type (10 feet long)
0019-3265	Water trap


6.3. Accessories

Part Number	Standard Accessory
0024-8242	ΔP (pressure) and ΔT (temperature) Kit
0024-8259	Δ P (pressure) Kit
0024-8258	ΔT (temperature) Kit
0024-1611	AC adapter, USB assembly
0024-7059	Calibration kit (no gas)
0051-1994	CO calibration gas, 100 ppm CO
0024-0492	CO calibration gas, 500 ppm CO
0024-1470	FUS installer CD (Std for some part numbers)
0024-1400	IrDA printer
0024-8257	LL O ₂ Sensor Upgrade kit
0024-1310	Printer paper, box of 5 rolls
0024-1492	Reporting kit (USB cable, IrDA printer, and FUS)
0021-7006	Tru Spot [®] Smoke kit
0104-4032	USB cable (standard for some part numbers)
0024-8555	Optional Appliance Kit for Ambient CO Test

6.4. Instrument Identification

A label on the back of the instrument provides the following information that is useful for service and troubleshooting.

- manufacturer
- country of origin
- certification(s)
- part number
- serial number

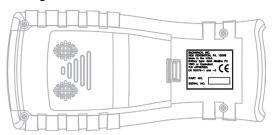



North American Label



Siegert Label

6.5. Service Centers

Replacement parts and service can be obtained by contacting one of the following Bacharach Service Centers.

United States
Bacharach, Inc.
621 Hunt Valley Circle
New Kensington, PA 15068
Phone: 724-334-5051

Phone: 724-334-5051 Fax: 724-334-5723

Email: help@MyBacharach.com

Canada

Bacharach of Canada, Inc. 20 Amber Street Unit #7 Markham, Ontario L3R 5P4

Canada

Phone: 905-470-8985 Fax: 905-470-8963

Email: support@BachCan.ca

 ∇ ∇ ∇



C € Declaration of Conformity

The manufacturer of the products covered by this declaration:	Bacharach, Inc. 621 Hunt Valley Circle New Kensington, PA 15068
Year conformity is declared:	2012
Product(s):	Combustion Analyzer
Model(s):	Fyrite [®] INSIGHT [®] Plus

The undersigned hereby declares that the above referenced product is in conformity with the provisions of the following standards and is in accordance with the following directive.

Directive:

2004/108/EC	EMC Directive
-------------	---------------

Standard(s):

EN 50270: 2006	Electromagnetic Compatibility (Immunity): Electrical Apparatus for the Detection and Measurement of Combustible Gases, Toxic Gases, or Oxygen
EN 50379-1 Part 1	General Requirements and Test Methods: Specifications for Portable Electrical Apparatus Designed to Measure Combustion Flue Gas Parameters of Heating Appliances
EN 50379-3 Part 3	Performance Requirements: Performance Requirements for Apparatus Used in Non-Statutory Servicing of Gas-Fired Heating Appliances

Signature:

Name: Doug Keeports

Title: VP of Product Development

Date: 25 July 2012

The technical documentation file required by this directive is maintained at the corporate headquarters of Bacharach, Inc.

INDEX

	Bad Calibration Sensor End of Life, Entry
SYMBOLS	Not Saved error95
dienlay 09	Bad Calibration Wrong CAL Entry92
display98 * * * display98	Bad Sensor97, 98
+ΔP port	bar graphs 73, 74, 76, 77
-ΔP port87	current value74
-дг port	limits74
NUMBERS	parameter names74
	parameter range74
99 ppm CO100	pointer colors74
12-hour time format5, 36	batteries4, 8, 19, 20, 61, 79
24-hour time format5, 36	alkaline4, 8, 13, 19, 61, 99
490 ppm CO100	alkaline for printer4
80% efficiency fan assist furnace61	cover19
80% efficiency power vented	door83, 99
furnace61	for printer69
90% efficiency condensing furnace61	lithium 8, 13, 19
	rechargeable
Α	replacement10
AC adapter100	replacement warning97
	status78
AC source	symbol19
accepted practices63	voltage is low97
accessing the sensors82	baud rate13, 71
accessories, part numbers100	bellows
accuracy13	biodiesel25
alcohol80	biofuel25
ambient CO8	boiler61
menu29	boiler temperature
summary screen29	entering manually35
testing23, 78	boiling water for calibration 88, 90, 92
applications4	boot 4, 11, 12, 99
oil-fueled2	B-SMART [®] 84
applied value error	code85
high 87, 89, 90, 92, 95, 97	build date24
low 89, 90, 92, 95, 97	butane fuel25
arrow buttons6, 17, 25, 27-29, 31-39, 41-48,	buttons
49-52, 55, 57, 66, 68, 72, 75, 76, 85, 87,	sound46
89-92, 94, 95	304114
atmospheric burner62	С
audible button beep46	
authorized personnel2	calculated values66
auto power-off8	errors in98
auto zero20, 22, 50	calculation ranges14
average smoke number34	calibration8, 24, 47, 52, 55, 78, 79, 84,
	86-91, 94-96, 98, 100
В	CO sensor94, 95
B5 fuel25	factory96
	frequency recommendation47

gas 95	with NO _x 11,13
menu24, 55, 85, 87, 91, 92, 95	zeroing50, 94
outside range errror97	CO₂5, 14, 25
password screen24	max5, 25
pressure sensor86	smoke test warning2
procedures55	coal fuel25
range87, 89, 90, 92	combustible substances warning2
reminder47, 98	combustion 4, 5, 8, 12, 17, 22, 25, 28, 34,
removing equipment88	38, 46, 49, 61, 64, 65, 73-76, 79
screen90	bar graph parameters76
secure8	data, saving31, 64
T-air90, 91	device under test63
T-stack (span and zero)88, 89	efficiency4
carbon dioxide66	equations 4, 5, 11, 52, 69
carbon monoxide66	fuel23, 25
carburetor cleaning fluid80	parameters10,43
safety warning2	prerequisites61
carrying case4, 9	process overview10
case (enclosure)57, 99	compliance12
construction12	components
CE Mark12	condensing furnaces63
certification101	confirmation screen31, 42, 45
changing the run/hold format44	connecting the probe16
check sensor O ₂ 97	connecting the thermocouple16
clean air environment20, 64	continuous use warning2
cleaning2, 79,80	conventions used in the manual1
clear memory31	copyright noticeiii
clear test ID42	corrections for fuel variations25
all records42	country of origin101
individual records42	CSV files39
clearing smoke test warning2	custom display formats8
clock error20	custom fuel codes25, 78
clock option36	custom logo on printouts8, 71
clogged filter, preventing with smoke test2	file types and size limits71
CO 5, 8, 13, 14, 22, 48, 50, 55, 65, 66, 82-85,	7, 11
94, 95, 97-100	D
air free37	110
ambient measurement of77	data bits13, 71
B-Smart®8, 85	date and time settings47
calibration94	date code56-58
calibration reminder98	date format
cylinder95	declaration of conformity102
importance of purging probe2	Device Status Menu24
O ₂ reference value37	diagnostics24, 58, 79
part number12	Diagnostics Menu24, 56
protect feature52	Diff Acrs HtEx23, 27
ratio with CO ₂ 5	Diff Pressure27
reading, maximum29	differential across heat exchanger 23, 27
sensor11, 97, 98	differential pressure23, 27, 68
span procedure95	connector7
value, maximum77	differential temperature23

custom formats 8 type 12 draft connector 16, 88, 91 gas pressure 23, 27, 80 16, 88, 91 gas pressure 23, 27, 80 16, 62, 79, 80 flow rate 12 hose 80 gas ket 99 God Calibration message 88, 92, 95 gasket 99 God Calibration message 88, 92, 95 graphic LCD 9 graphic screens 8, 17, 18, 67, 72 analysis 4 4 H	dilution air	Fyrite [®] User Software (FUS) 4, 9, 11, 25, 39, 41, 43, 44, 55, 69, 71, 78, 85, 100
Good Calibration message	type	gas pressure
Edit Test ID. 41 efficiency	E	· ·
efficiency	Edit Test ID	-
## ## ## ## ## ## ## ## ## ## ## ## ##		• .
E-mail address	•	graphic screens
EN49379	•	Н
EN49379		
end plate		
energy auditors		
enlarged characters	·	
ENTER button	·	=
Clearing smoke test warning		
## home inspectors ## hot water tank ## hotspot graphic function ## hots		
SC button 6, 17, 33, 36-38, 46, 47, 49, 50, 55, 68, 75	error messages57, 97	
ESC button6, 17, 33, 36-38, 46, 47, 49, 50, 55, 68, 75 ETA	error screen32	
So, 68, 75 SETA	ESC button 6, 17, 33, 36-38, 46, 47, 49, 50,	. 5
ETA	55, 68, 75	•
F	ETA5, 14	
F F1 button 6, 10, 17, 27, 64, 69, 72, 73, 75, 77 F2 button	excess air5, 14, 66	· - ·
F F1 button 6, 10, 17, 27, 64, 69, 72, 73, 75, 77 F2 button	exhaust ports62	•
F1 button 6, 10, 17, 27, 64, 69, 72, 73, 75, 77 F2 button	_	HVAC CONTractors4
F2 button	۴	I
F2 button		ice water 88-91
F3 button6, 10, 17, 27, 57, 64, 72, 74, 75, 76 factory default format		
factory default format		
fax 101, 117 features 8 filter 4, 7, 10, 11, 16, 61, 79, 99 replacement 16, 81 fire tube 62 flow rate 12 flue 34, 62, 73, 97 gas 12, 34, 62, 97 forced air furnace 61 K type thermocouple 88, 90, 99 fresh air 61, 94, 97 Kerosene 25 diagnostics 24, 58 keys 17 Fuel Menu 23, 25 K-type thermocouple 99	•	,
Features	•	
replacement 16, 81 fire tube 62 flow rate 12 flue 34, 62, 73, 97 gas 12, 34, 62, 97 forced air furnace 61 K type thermocouple 88, 90, 99 fresh air 61, 94, 97 Kerosene 25 diagnostics 24, 58 keys 17 front panel buttons 17 KOKS fuel 25 Fuel Menu 23, 25 K-type thermocouple 99		,
fire tube 62 IrDA printer 4, 13, 32,64, 69, 100 flow rate 12 IrDA-SIR protocol 13 flue 34, 62, 73, 97 K gas 12, 34, 62, 97 K forced air furnace 61 K type thermocouple 88, 90, 99 fresh air 61, 94, 97 Kerosene 25 diagnostics 24, 58 keys 17 front panel buttons 17 KOKS fuel 25 Fuel Menu 23, 25 K-type thermocouple 99		IR communications settings71
flow rate	·	IrDA printer 4, 13, 32,64, 69, 100
flue 34, 62, 73, 97 K gas 12, 34, 62, 97 forced air furnace 61 K type thermocouple 88, 90, 99 fresh air 61, 94, 97 Kerosene 25 diagnostics 24, 58 keys 17 front panel buttons 17 KOKS fuel 25 Fuel Menu 23, 25 K-type thermocouple 99		IrDA-SIR protocol13
gas 12, 34, 62, 97 forced air furnace 61 K type thermocouple 88, 90, 99 fresh air 61, 94, 97 Kerosene 25 diagnostics 24, 58 keys 17 front panel buttons 17 KOKS fuel 25 Fuel Menu 23, 25 K-type thermocouple 99		
forced air furnace 61 K type thermocouple 88, 90, 99 fresh air 61, 94, 97 Kerosene 25 diagnostics 24, 58 keys 17 front panel buttons 17 KOKS fuel 25 Fuel Menu 23, 25 K-type thermocouple 99		K
fresh air 61, 94, 97 Kerosene 25 diagnostics 24, 58 keys 17 front panel buttons 17 KOKS fuel 25 Fuel Menu 23, 25 K-type thermocouple 99	9	Kityne thermocounte 88 90 99
diagnostics .24,58 keys .17 front panel buttons .17 KOKS fuel .25 Fuel Menu .23,25 K-type thermocouple .99		The state of the s
front panel buttons 17 KOKS fuel 25 Fuel Menu 23, 25 K-type thermocouple 99		
Fuel Menu23, 25 K-type thermocouple99	·	•
, , , , , , , , , , , , , , , , , , , ,	•	
	·	-71

L

label56, 101 lambda5, 14, 66 languages......5, 8, 46 Leak Test menu......23, 28 LEG fuel......25 Let-By test......23, 28 liability damages and errors.....iii life safety65 line graph time......74 trend screen......75 LL O₂ sensor...... 11, 13, 82, 99, 100 part number12 warranty.....ii long-life O2 sensor.....ii, 51 low battery......97 low sensor CO97 lower heating value66 LPG fuel......25 magnetic boot......12 maintenance79 personnel4 manometer......86, 87 manufacturer 61, 63, 101, 102 maximum CO reading29 maximum CO value......77 mB per inwc......86 measurement sensors......56 memory 11, 27, 31, 52, 78 cleared31 deleting contents of31 directory......31, 32, 69 menu......24 number of locations13 options menu......31 reset......5 saving data to......27 millibars33 mm H₂O33, 86, 87 MM/DD/YY format......5, 36, 49 model number59 month code......51, 57

N

natural gas	25
negative pressure	68,87
no data error	31
no test ID	
North American (NA) vs. Siege	rt (S)5
NO _x filter	99
•	
0	
O rings	
O ₂ sensor 8, 11, 24,	51, 52, 56-58,
82, 83, 97, 99	
long life	
maximum levels for calcula	
reference value	
part number	
types	
Oil 2 fuel	
Oil 4 fuel	
Oil 6 fuel	
oil derivatives	
open flame warning	
operation	
humidity	
prerequisites	
pressure	
temperature	
order in which parameters are	. ,
over-range condition	
overriding the inactivity timeo	
oxygen	52, 66, 102
P	
parity	12 71
part numbers	
final assemblies	, ,
manual	
sales kit	
Pascals	
password	
validation	
PC Interfacee	
phone number	
positive pressure reading	,
post-purge period	
power button	
power options	
preferences	
prerequisites	-
hicicdnisires	

pressure	resolution13
data31, 32	response time13
measurement37, 68	ROHS compliance12
menu23, 27	rubber boot4
ports68, 86	Run button
screen68, 87	run meters24
sensor calibration86	run screen
unit9, 33	printouts69
print average5, 32	run/hold display format43-45, 52
print range8	run/hold key
printer 11, 32, 64, 69, 77, 100	run/hold screen22, 25, 38, 43, 47, 64, 66,
batteries4	72, 73, 77
paper4, 79, 99, 100	
positioning to print69	S
power switch69	f-b. 1.2
printing5, 23, 27, 32, 37, 64, 65, 69	safety
printouts34, 35, 43	sales combinations11
custom logo on8, 71	sample filter
probe4, 7, 9-11, 16, 61, 62, 64, 68, 73, 77,	clogged with soot2
79, 80, 88-92, 97, 99	replacing2
cleaning2, 79, 80	verifying before use2
connecting16	sample gas connector7
disconnecting10	sample time
disconnecting during purge2	sampling holes, sealing
handle	sampling points
hose 4, 9, 16, 68, 79, 80,	scrolling 17, 27, 32, 35, 38, 44, 46, 48, 55,
87, 88, 91, 99	66, 76
replacement16	sealing sampling holes63
sample filter2	security code55
stop7	selecting test ID39
tube7	sensors4
product overview4	accuracy13
propane25	adapter99
pump	date code, resetting57
purge10, 48, 64, 65	cap99
disconnecting probe during2	cover
during auto-off8	life24, 56, 58, 82
during CO protect52	range
PWR button20, 65	recovery time (CO)52
	replacement procedure82, 83
R	resolution
meditions combination data visusing 72	response time
real time combustion data, viewing72	shortened sensor life (CO)52
real-time values77	type52, 56
regulator95	serial number
replace O ₂ sensor97	service centers
replacement parts	service report23
replacing sensors79	serviceability
reporting kit	seting the clock
reset format to factory default45	Setup Menu 24, 28, 33, 43, 45, 46, 55, 64,
resetting the sensor date code57	69, 86, 94

shutdown 17, 20, 48, 64	thermocouple 8, 12, 16, 61, 88, 90, 91, 97
automatic48	99
screen48	connecting7, 16
Siegert configuration . 4, 5, 8, 11, 12, 14, 22,	simulator88-92
23, 25, 28, 32, 34-36, 43, 46, 49, 64, 66,	pressure sensor12
69, 74, 99, 101	thermometer88-92
smoke number5, 34	tightness test23, 28, 29
average34, 66	time and date 9, 36, 69, 78, 98
smoke scale34	setting36
smoke spot color change35	time meters56
smoke test2, 34, 35	total operation time56
oil derivative presence35	trademarksii
recommendation on high CO₂ level2	T-ref sensor96
warning when CO ₂ is high2	trending screens8, 75
soft keys17	troubleshooting97
solvents warning2	Tru Spot [®] Smoke kit100
soot2, 79	TS-span90
span procedure95	T-Stack sensor calibration88
specifications12	T-Stack connector 7, 16, 88, 97
stack loss14, 66	keyed tabs16
stack temperature	T-STK disconnected97
hot spot screen75	Tune-Rite menu23
maximum level for calculations14	turn on and off10
standard O ₂ sensor51	
status screen59	U
stop bits13, 71	UK market28
storage	
humidity12	unit-of-measure for pressure86
temperature12	conversions86
supported fuels11	units selection
system parameters24	USB cable
	USB connector
Τ	user identification
T-air calibration90	user information
T-air connector	user name
temperature data31	available characters43
temperature menu23, 27	V
temperature readings23, 27, 73	•
temperature unit selection	version 22, 24, 59
test data32, 38, 66	visual inspection prior to use1
Test ID	voiding warranty
available characters41	
clearing42	W
editing41	wall adapter 9 12 10 6
test parameters24	wall adapter
test records, maximum number of31	warmup20, 22, 47, 50, 58, 61, 97, 98 auto zero50
test results	
date stamping9	error97, 98 time
storage in memory13	
time stamping9	zeroing92
ume stamping	warning messages97

warranty	ii, 1, 2
water heater	61
water trap 16, 61, 79,	80, 99
drying	16
replacement	81
web site	
weight	12
wood fuel	
X	
X axis	73, 74
x x x display	98
Υ	
Y axis	73
year code	51, 57
Z	
2	
zero function	10
automatic	85
forced after B-Smart® CO sensor	
installation	85
importance of probe purge	2
manual	
zeroing27, 50, 68,	94, 97
pressure reading	27
temperature reading	
pressure sensor	
zoom	
levels	

 $\nabla \ \nabla \ \nabla$



World Headquarters

621 Hunt Valley Circle, New Kensington, Pennsylvania 15068
Phone: 724-334-5000 • Toll Free: 1-800-736-4666 • Fax: 724-334-5001
Website: www.MyBacharach.com • E-mail: help@MyBacharach.com

