

# Reporting App

## Introduction


November 12, 2015  
0024-9511 Rev 0



Bacharach is proud to introduce the new Bacharach Reporting App. It transfers combustion test data from all Fyrite® INSIGHT® Plus and Fyrite® InTech® combustion analyzers to your smartphone or tablet, allowing you to create a customized report, save it as a PDF file, then email it... all in a matter of seconds!



Combustion Record Is Converted to a QR Code®

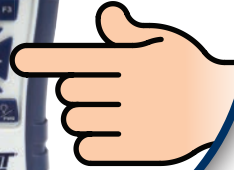

The Bacharach Reporting App is a user-friendly, feature-rich method for getting your combustion data into the "real world." Simply transfer the data from a combustion analyzer to your mobile device, then view, save and email the data – all at the touch of a button. Up to 100 records can be saved to your mobile device. Any of these records can be used to generate a custom as-found/as-left report, which can include technician/company information, company logo and customer information.



Use the App

Center the QR Code®




Generating a QR code® on your analyzer is simple. From a live reading (in the hold mode) or saved reading in the combustion analyzer's memory, just press the RIGHT arrow. After that, the app can do the rest!

From the custom-generated QR code® on the analyzer's display, the camera in your mobile device (smartphone or tablet) easily transfers the combustion data.

QR Code® is a registered trademark of Denso Wave, Inc.



email

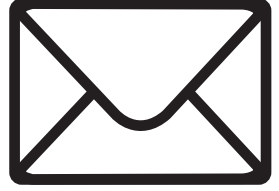

Combustion Data






Insight Plus 02:12:12 PM, 07/22/15 Fuel Type: Oil #2	
O2:	5.0 %
CO:	10 ppm
Eff:	85.9 %
CO2:	11.9 %
T-Stk:	400 F
T-Air:	75.6 F
EA:	29.1 %
CO(15):	*** ppm
Pre:	-0.07 inwc
Save Email Add To Report	

In order to take full advantage of the Bacharach Reporting App you first must install the latest firmware onto your Fyrite® INSIGHT® Plus or Fyrite® InTech® combustion analyzer. The firmware is available as a FREE download from the Bacharach website. After installing the latest firmware to your combustion analyzer, download the Bacharach Reporting App from the Apple or Google app store. That's it. You're ready to generate and email customized reports!



Description	Specifications	Technical Library	Ordering Info	Accessories & Parts
<ul style="list-style-type: none"><li>• Datasheet</li><li>• User manual (English)   (French)   (Spanish)   (Dutch)</li><li>• NEW! Reporting App Product Bulletin</li><li>• <b>NEW! Insight Plus Firmware Upgrade (v.1.30)</b></li><li>• Tune-Rite™ Software Operation Manual</li><li>• Tune-Rite™ Quick Start Guide (English)   (French)   (Spanish)</li></ul>				

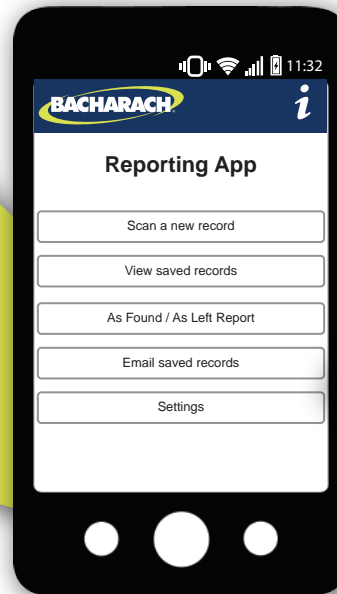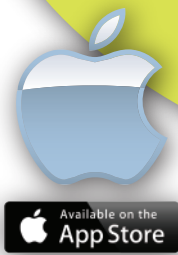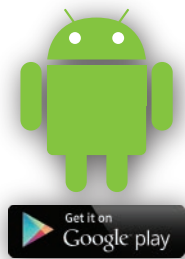

T-Stk	500 °F
T-Air	80.0 °F
EA	61.0 %
CO(O)	571 ppm
As Left Conditions:	
213 Lee Ave	
NG 80+ Eff	
Service Call	
Time:	07:09:28 PM
Date:	02/01/15
Fuel	
Nat. Gas	
O <sub>2</sub>	8.0 %
CO	14 ppm
HF	3 %
HC	3 %
NOx	30 °F
SOx	0 °F
PM	0 %
PM	0 ppm
<input checked="" type="checkbox"/> Gas Pressure	



SERVING THE INDUSTRY SINCE 1909

©2015, Bacharach, Inc., all rights reserved. All information is subject to verification.

USA CERTIFIED



Contact:  
Industrial Process Measurement, Inc.  
3910 Park Avenue, Unit 7  
Edison, NJ 08820  
732-632-6400  
support@instrumentation2000.com  
http://www.instrumentation2000.com