

# Type 75 & 75 HR

## Air Relays

### Features

- Balanced valve design
- High flow capacity
- Field serviceable
- Multiple output ratios
- Negative biasing option


### Description

The Type 75 relay uses signal pressure to accurately control output pressure over a wide range of flow and supply pressure variation.

Under varying flow conditions output pressure is maintained by use of an aspirator tube, which adjusts the air supply valve opening in accordance with the flow velocity. A balanced supply valve, utilizing a rolling diaphragm, makes the relay virtually immune to changes in supply pressure. Maintenance is simple due to the unit construction, and the relay can be serviced without removing it from the line. Signal to output pressure ratios of 1:1, 1:2, 1:4 and 1:6 are available. Maximum output is 150 PSIG (10.3 BAR).

### Applications

- Volume Boosting
- Dancer Roll Loading
- Calendar Roll Loading
- Cylinder Bucking Control
- Clutch and Brake Controls
- Gas Flow Control
- Tensioning Control
- Valve Motor Loading

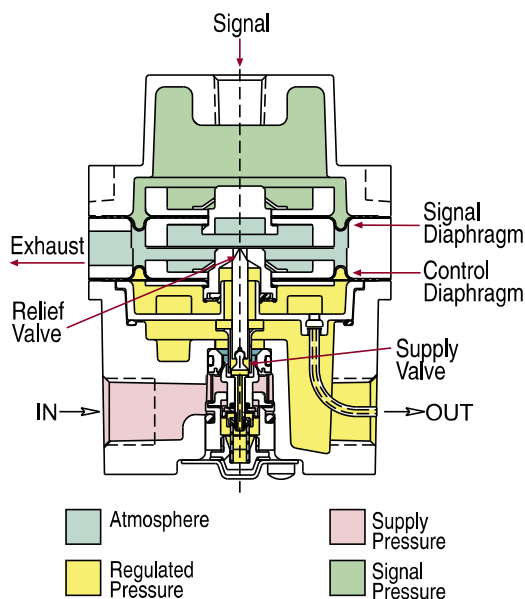

### Models

#### Type 75

The basic relay offers excellent precision along with high forward flow rates.

#### Type 75 High Relief Relays

These relays provide extra fast "blowdown" for very rapid release of output pressure. The extra relief feature makes this relay suitable for cylinder return stroke actuation, air hoists, and similar applications requiring fast exhaust.

#### Type 75 Negative Bias

The Type 75 Relay is also available with a  $4 \pm 1$  psig ( $0.3 \pm 0.07$  BAR) negative bias spring mounted internally. (See cross-sectional drawing on previous page.) This bias spring automatically subtracts  $4 \pm 1$  psig ( $0.3 \pm 0.07$  BAR) from any signal pressure introduced. The relay then multiplies the net signal pressure by its ratio value to obtain final output pressure.

This option is particularly useful in obtaining zero pressure from pneumatic devices such as I/P transducers that normally cannot be adjusted this low, as well as obtaining higher outputs from such devices.

Typical applications of the Type 75 Relay with fixed negative bias include the electronic control of the applications listed for the standard Type 75 Relay.


#### To calculate relay output:

Relay output = (signal pressure) - 4 PSI bias x (relay ratio factor) where the relay ratio factor is defined as follows:

Relay Ratio	Factor
1:1	1
1:2	2
1:4	4
1:6	6



### Type 75 Application Diagrams

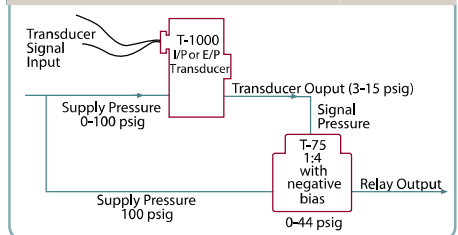

### Type 75 Dimensional Drawing

