

Type 92

Subminiature Regulator Series

Features

- Designed for applications with limited space and for low flow or dead end service
- Small package size and lightweight construction
- Corrosion resistant anodized aluminum exterior
- Excellent stability and repeatability
- Self relieving
- Low cost

With the new Type 92, Marsh Bellofram has created a subminiature regulator with a true rolling diaphragm design. Most subminiature regulators utilize a flat diaphragm, which in this small of a regulator causes excessive droop and

low stability. By utilizing a larger diameter rolling diaphragm, the Type 92 regulator offers a more sensitive regulator with excellent stability and significantly less droop.

The Type 92 Subminiature Regulator is a compact, low-cost unit which operates in pressure ranges up to 100 PSI, with a maximum supply pressure of 150 PSI. It provides dependable reliability and accuracy for low flow or dead end applications. The Type 92 subminiature regulator is available with a corrosion resistant anodized aluminum body and bonnet. Comes standard with a fluorocarbon diaphragm.



Type 92
Subminiature Regulator Series


	Type 92
Effect of Supply Pressure Variation (25 PSIG) on Outlet Pressure	< 0.5 PSIG (35.5 mBAR)
Exhaust Capacity (5 psig above 20 PSIG set point)	0.1-0.3 SCFM Typical (2.8-8.5 LPM)
Maximum Supply Pressure	150 PSIG (10.3 BAR)
Flow Capacity at 100 PSIG (6.9 BAR) Supply and 20 psig (1.4 BAR) Outlet	5 SCFM (141 LPM)
Standard Output Pressure Ranges	0-5 PSIG (0-0.35 BAR) 0-15 PSIG (0-1.0 BAR) 0-30 PSIG (0-2.1 BAR) 0-60 PSIG (0-4.1 BAR) 0-100 PSIG (0-6.9 BAR)
Total Air Consumption at Max Output Pressure	0.3 SCFH (0.14 SLPM)
Operating Temperature Range	0 - +160 °F (-18 ° - 71 ° C)
Port Size	1/16 NPT - Side and Bottom Ports
Materials of Construction	Body: Anodized Aluminum Bonnet: Anodized Aluminum Trim: Acetal, Brass, Stainless Steel Diaphragm: Fluorocarbon with Polyester Fabric Knob: Acetal Resin Spring: Stainless Steel, Music Wire
Size and Weight	1.19" X 1.19" X 3.55" (30.2 X 30.2 X 90.2 mm) 2.8 oz. (0.08 kg)
Mounting Options	Pipe or Panel

Type 92 Ordering Information

	Part Number	Port Size (NPT)	Set Point Range	
			BAR	PSIG
Type 92	960-540-000	1/16	0-0.3	0-5
	960-541-000		0-1.0	0-15
	960-542-000		0-2.1	0-30
	960-543-000		0-4.1	0-60
	960-544-000		0-6.9	0-100

Contact:
Industrial Process Measurement, Inc.
3910 Park Avenue, Unit 7
Edison, NJ 08820
732-632-6400
support@instrumentation2000.com
http://www.instrumentation2000.com

Type 92 Dimensional Drawing

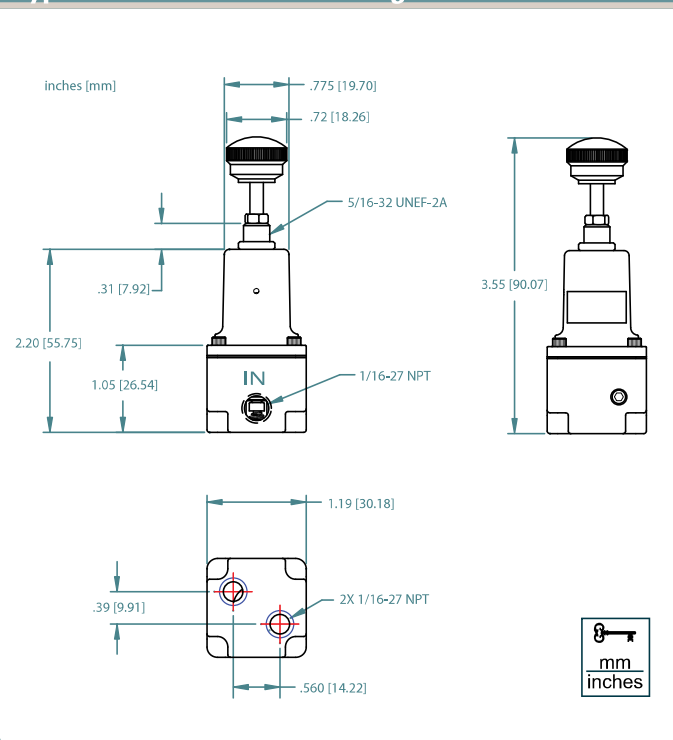

Type 92 Option Ordering Matrix

Replace last three digits of part number with digits from table below.

Option	Non-Relieving	Slotted Adj. Screw
Non-Relieving	002	032
Slotted Adj. Screw		003

Type 92 Barbed Fittings

Port	Size	Part Number
In/Out Port	1/16 NPT	622-000-007
Gauge Port	10 - 32 UNF	622-000-031