

# 5A/50A REVENUE GRADE SPLIT CORE CURRENT TRANSFORMERS



DENT's SRS Series hinged split-core current transformers are designed for Revenue Grade applications that require maximum accuracy and precision. The superior performance, robust design, and unique shrouded snap, lock & tilt top of the SRS Series CTs make them ideal for field installation in high accuracy current measurement applications such as energy and demand metering, tenant submetering and load surveys. Revenue Grade performance of these CTs meets or exceeds the accuracy specifications for IEC 61869-2 Class 0.2, IEC 60044-1 Class 0.3, and IEEE C57.13 Class 0.3.

The SRS Series CTs are UL2808 and CSA C22.2 No. 61010-1 listed as stand-alone products, CE marked, RoHS compliant, and are 600V CAT III rated devices. They are available for current inputs up to 50 Amps with 8 foot long, 18 AWG MTW UL1015 twisted pair leads.



KEY SPECIFICATIONS	
Window Size	0.4" (10.17mm)
Current Range	5A Model: 0.05—10A 50A Model: 0.5—100A
Output	333.3mV at rated current
Ratio Error	+/-0.2% at rated current (typical)
Phase Error	< 0.2°
Meets the Accuracy Requirements for <sup>1</sup>	IEC 61869-2 Class 0.2 IEC 60044-1 Class 0.2 IEEE C57.13 Class 0.3

ELECTRICAL	
Output	333.3mV at rated current
Wire Polarity	White = Hi, positive (+) Black = Low, negative (-)
Frequency Range	40 to 400 Hz

MECHANICAL	
Case Material	120°C UL Recognized Plastic
Leads	8ft (2.4M) black and white twisted pair 18 AWG MTW UL1015, 600V, 105°C double insulated
Operating Temperature	-40°C to 70°C (-40°F to 158°F)


SAFETY & CERTIFICATIONS	
Working Voltage	600 VAC, Category III
Dielectric Strength	7400 VAC
Certification	Conforms to: UL Listed to UL 2808 Certified to: CSA STD C22.2 No. 61010-1 TAA Compliant



## CONTACT US

**DENT Instruments, Inc.**  
Energy & Power Measurement Solutions  
An ISO 9001:2008 Certified Company

Contact:  
Industrial Process Measurement, Inc.  
3910 Park Ave, Unit #7  
Edison, NJ 08820 USA  
(732) 632-6400  
support@instrumentation2000.com  
<https://www.instrumentation2000.com/>

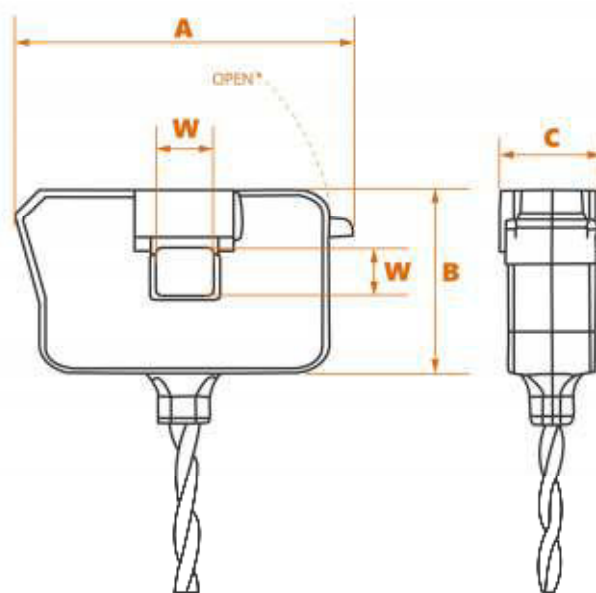

DIMENSIONS			
WINDOW	A	B	C
0.4" 10.17mm	2.4" 60.96mm	1.65" 41.91mm	0.85" - 1.1" 21.58—27.94mm

PART NUMBERS	
CT-SRS-005-U/B	5A Revenue Grade Split Core
CT-SRS-050-U/B	50A Revenue Grade Split Core

<sup>1</sup> When CT phase shift is set as follows: 5A = -0.10°, 50A = -0.23°