


CO15 Carbon Monoxide (CO) Meter

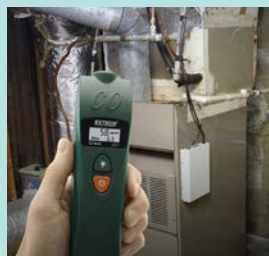

Check CO levels up to 999ppm with the push of a button using Model CO15. An audible alarm indicator will continuously beep starting at 25ppm (preset warning level - value can be adjusted) and the display will flash until the CO level goes down to normal range. A backlight on the display can be used for low light areas. The meter comes complete with batteries, wrist strap, and pouch.

Applications:

- Ambient air safety checks on residential appliances
- HVAC service on furnaces and hot water heaters
- Home inspections
- Industrial environments where the accumulation of CO is possible

Features

- Dual LCD simultaneously displays Carbon Monoxide (CO) level and maximum CO reading taken from when the meter was powered on
- Long life electrochemical sensor
- Adjustable CO warning level at 25, 30, 35, 45, 50, 70, 100 and 200ppm (alarm is preset to 25ppm)
- Audible alarm when CO level reaches the warning set point level
- Choose from 3 calibration points: 0 (preset), 100, and 500ppm
- Backlit display feature for easy viewing in dimly lit areas
- Auto power off after 15 minutes
- Low battery indicator
- Complete with 3 AAA batteries, wrist strap and pouch

Specifications	Range	Resolution	Basic Accuracy
Carbon Monoxide (CO)	0 to 999ppm	1ppm	±20% @ 0 to 100ppm; ±15% @ 100 to 500ppm
Dimensions	6.9x1.9x1.1" (175x47x28mm)		
Weight	5.6oz (158.8g)		

Ordering

CO15 Carbon Monoxide (CO) Meter



UPC Code: 793950500156