

# Continuity Tester Pro

 **One person operation**  
For wire and cable testing; both local and remote

## Features:


- A bright flashing LED and loud pulsating beeper indicate local continuity
- Remote continuity – with the use of the remote probe, it does not tie-up two people when identifying and labeling long distance wire/cable runs
- Flashing remote probe - Two lead, bi-color (red/green) LED probe allows a single user to identify up to three wires or cables at a time for correct labeling with only one trip to the other end location - cuts down on multiple trips back and forth
- Polarity verification - Drives a 20mA DC current pulse through the wires or cables under test to the bi-color remote probe; This enables the technician to identify each of the wires under test at the other end of the cable run and eliminates the possibility of false high impedance readings
- Lightweight/Pocketsize - clips on and hangs from the cable(s) under test without falling off
- Dims: 3.6x2.2x1.14" (90x57x29mm); Wt: 9.2oz (260g)
- Complete with remote probe, test leads with alligator clips, 9V battery and pouch



Continuity Tester includes Remote probe with bi-color LED for wire identification highlight



Use for local continuity or for remote wiring identification.

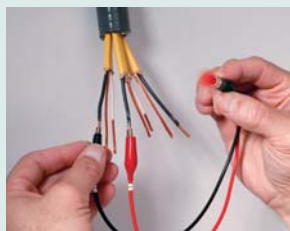

RED LED means wiring is reversed.



GREEN LED means wiring is properly identified.

## Ordering Information:

CT20 .....Continuity Tester Pro

Contact:  
Industrial Process Measurement, Inc.  
3910 Park Avenue, Unit 7  
Edison, NJ 08820  
732-632-6400  
support@instrumentation2000.com  
<http://www.instrumentation2000.com>

