


# Non-Contact AC Voltage and Current Detector

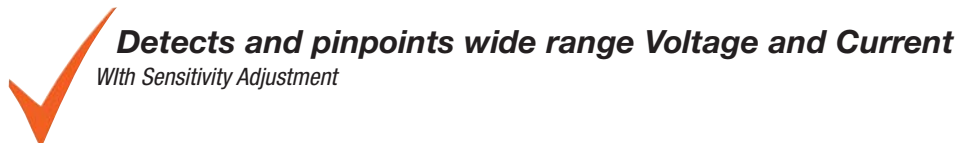

***Detects and pinpoints wide range Voltage and Current***


*With Sensitivity Adjustment*

## Features:

- The only two-in-one current/voltage detector designed for electrical testing
- Non-Contact AC current detection from 200mA to 1000A
- Non-Contact AC voltage detection from 12V to 600VAC
- Sensitivity adjustments to increase or reduce sensor trigger threshold
- Loud audible and bright visible sense detect indicators
- Current sensor detects current flow through shielded wires, conduit and metal circuit breaker/junction boxes
- Current function detects current flow of 400mA at 0.2" distance and at much greater distances for larger current flows
- Convenient pocket size with clip
- Dims/Wt: 7.6 x 1.2 x 0.9" (192 x 31 x 24mm) / 2.1oz (60g)
- Complete with four LR44 button batteries and pocket clip

## Applications:

- Trace concealed wires in walls and floors
- Identify "hot" wires
- Trace current flow behind walls, in conduit, where voltage detection does not work
- Sensitivity high enough to trip on low voltage HVAC or similar signal levels

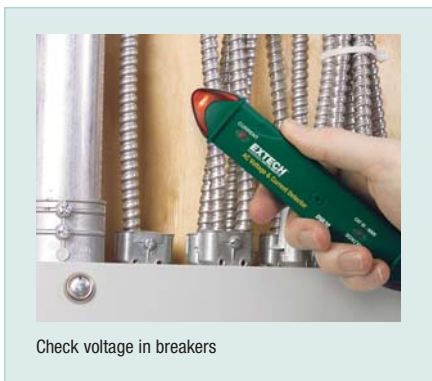

Check voltage in breakers

Contact:  
Industrial Process Measurement, Inc.  
3910 Park Avenue, Unit 7  
Edison, NJ 08820  
732-632-6400  
support@instrumentation2000.com  
<http://www.instrumentation2000.com>

## Ordering Information:

DVA30 .....Non-Contact AC Voltage and Current Detector



<http://www.instrumentation2000.com>

Specifications subject to change without notice.

Copyright © 2007-2008 Extech Instruments Corporation. All rights reserved including the right of reproduction in whole or in part in any form.

10/16/08 - R2