


## ExStik<sup>®</sup> 4-in-1 Water Quality Meter Kits

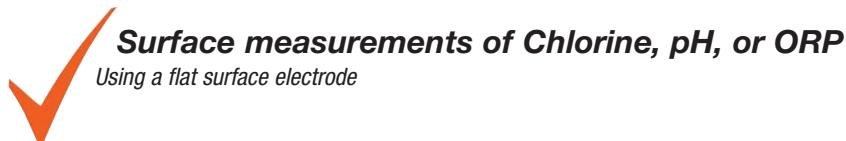

**Surface measurements of Chlorine, pH, or ORP**

Using a flat surface electrode

### Features:

- 4-in-1 Water Quality Meter measures Chlorine, pH, ORP plus Temperature with interchangeable flat surface electrodes (included)
- Flat surface electrodes work in liquids, semi-solids and solids
- Memory stores and recalls 15 readings and saves last calibrated value
- Large 3-1/2 digit (2000 count) Digital display with bargraph (pH bargraph originates at neutral point 7.00pH)
- Automatic electronic self calibration for Chlorine and ORP; 1, 2 or 3 point buffer calibration for pH
- Data Hold, Auto shut-off and low battery indication
- Waterproof design floats in wet environment (IP57)
- Direct reading of Total Chlorine from low detection limit; Unaffected by sample color or turbidity
- Simultaneous display of ppm or pH and °C/°F Temperature
- Smart chip predicts pH electrode performance with "RENEW" indicator when replacement is needed
- "CAL" indicator alerts user to recalibrate pH electrode
- Automatic Temperature Compensation
- EX900 Kit Complete with ExStik<sup>®</sup> Chlorine meter, gel filled pH electrode, ORP electrode, protective sensor cap, 5 packs of 10 reagent tablets (50 tests), 4 plastic sample cups, weighted stand, pH 4, 7 & 10 buffer packs, four 3V SR44W batteries, carrying case, and neckstrap
- EX900-R Kit is same as EX900 but includes a refillable pH electrode
- EX800 Kit is same as EX900 but excludes ORP electrode



ExStik<sup>®</sup> Kit includes all the necessary accessories to measure Chlorine, pH, ORP, and Temperature.



Patents Pending

### Ordering Information:

**EX900** .....ExStik<sup>®</sup> Kit 4-in-1 (pH – gel filled, ORP, Chlorine, Temperature)  
**EX900-R**.....ExStik<sup>®</sup> Kit 4-in-1 (pH – refillable, ORP, Chlorine, Temperature)  
**EX800** .....ExStik<sup>®</sup> Kit 3-in-1 (pH, Chlorine, Temperature)  
**PH103** .....Tripack buffers (6ea. of 4, 7, 10pH & 2 Rinsing solutions)  
**PH105** .....Spare pH electrode  
**PH115** .....Spare Refillable pH ExStik<sup>®</sup> Electrode Module  
**CL203**.....Reagent tablets (10pk - 100 tests)  
**CL204**.....Reagent tablets (100pk - 1000 tests)  
**CL205**.....Spare Chlorine electrode  
**RE305** .....Spare ORP electrode  
**EX007** .....Spare sample solution cups with caps (24pk)  
**EX010** .....Extension Cable, 3ft (1 Meter) with probe weight for ExStik  
**EX050** .....Extension Cable, 16ft (5 Meter) with probe weight for ExStik

Specifications	Chlorine	pH	ORP
pH	—	0.00 to 14.00pH	—
ppm	0.01 to 10.00ppm	—	—
mV	—	—	-999 to 999mV
Temperature	23° to 194°F (-5 to 90°C)	23° to 194°F (-5 to 90°C)	—
Resolution	0.01ppm	0.01pH	4mV
Accuracy	±10% of rdg. + 0.01ppm	±0.01pH	±1mV
Power	four 3V CR-2032 button batteries		
Dimensions	1.4 x 6.8 x 1.6" (35.6 x 172.7 x 40.6mm)		
Weight	3.85oz (110g)		

Contact:  
 Industrial Process Measurement, Inc.  
 3910 Park Avenue, Unit 7  
 Edison, NJ 08820  
 732-632-6400  
 support@instrumentation2000.com  
<http://www.instrumentation2000.com>

