



## FLIR E-Series

### The New E40, E50 and E60, Now with MSX® Advanced Thermal Imaging Camera Performance

Troubleshoot more efficiently, create detailed reports easier, and share images and findings faster with FLIR's latest E-Series thermal imagers. Featuring a fresh array of imaging, communication, and productivity tools to help you get more done in a day.

**FLIR Tools Mobile Communication** – Connect an E-Series camera to smartphones and tablets with our Wi-Fi app. Stream live video so others can watch along. Import radiometric JPEGs, adjust levels, add measurement tools, then send images off in simple reports via email to expedite repair decisions.

**Superior Thermal Imaging** – Up to 76,800 pixels (320 x 240) for better long-range accuracy and the highest level of point & shoot camera IR resolution.

**MSX Thermal Image Enhancement** – See numbers, labels and other key visual details not normally apparent in a regular thermal image with an all-in-one thermal picture that instantly orients you to right where heat issues are.

**Onboard Digital Camera** – 3.1MP resolution provides clear visible light reference pictures; includes built-in LED lamp that doubles as a flashlight plus a laser pointer to mark locations.

**Large Touchscreen with Auto-Orientation** – The E-Series touchscreen provides an intuitive interface that takes full advantage of the entire 3.5" display for easy access to diagnostics tools, and measurement and other data overlays stay upright no matter how you hold the camera.

**Picture-in-Picture** – Overlay thermal images onto digital scenes for extra location documentation.

**Multiple Measurements** – Add up to 3 box areas and 3 moveable spots using the touchscreen to gather more detailed temperature information.

**MeterLink®** – Measure more than temperature. Send diagnostics data by Bluetooth from compatible clamp and moisture meters directly to E-Series cameras to embed extra information into thermal images as you capture them that further supports findings.

**Interchangeable Lenses and Manual Focus** – Optional wide-angle and telephoto optics let you capture more of a scene in one shot or get in closer to measure smaller, distant targets. Full focus control help you dial in the sharpest clarity and accuracy.

**Higher Temperature Range & Sensitivity** – Measure hotter-running equipment with higher 650°C (1,202°F) detection, and see subtler temperature patterns and detail with E-Series' greater sensitivity.




FLIR Tools Mobile Wi-Fi Connectivity



Large 3.5" Touchscreen




Auto-Orientation Keeps Diagnostics Overlays Upright

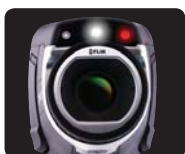

Visible Light Pictures  
Align with Thermal  
Images: 3.1MP Digital  
Camera, LED Lamp,  
and Laser Pointer



Large Buttons for  
Easy Glove-Handed  
Operation

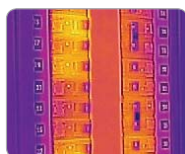


MSX Image  
Enhancement



Bluetooth® METERLiNK®  
Communication

## Applications

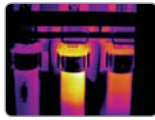


Electrical: Hot Fuses



Motor: Internal Winding Problem



Motor: Bearing Problem

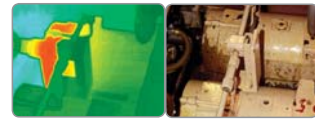

## Imaging Specifications

FEATURES	FLIR E40	FLIR E50	FLIR E60
Temperature range	-4 to 1202°F (-20 to 650°C)	-4 to 1202°F (-20 to 650°C)	-4 to 1202°F (-20 to 650°C)
Thermal sensitivity (N.E.T.D)	<0.07°C at 30°C	<0.05°C at 30°C	<0.05°C at 30°C
Detector Type - Focal plane array; (FPA) uncooled microbolometer	160 x 120 pixels	240 x 180 pixels	320 x 240 pixels
MSX® Thermal Image Enhancement	Yes	Yes	Yes
Picture-in-Picture (P-i-P)	Fixed P-i-P	Scalable P-i-P	Scalable P-i-P
MPEG 4 Video Recording	Yes	Yes	Yes
Video Camera w/Lamp & Laser	3.1MP/LED Lamp/Laser pointer	3.1MP/LED Lamp/Laser pointer	3.1MP/LED Lamp/Laser pointer
Digital Zoom	2X Continuous	4X Continuous	4X Continuous
Image annotation	Voice (60s)/Text Comments	Voice (60s)/Text Comments	Voice (60s)/Text Comments
Moveable Spot	3 Spotmeters	3 Spotmeters	3 Spotmeters
Area Box	3 Area Boxes (full image with min/max/avg)	3 Area Boxes (full image with min/max/avg)	3 Area Boxes (full image with min/max/avg)
Delta T	Yes	Yes	Yes
Data Communication Interface	USB-mini, USB-A, Composite Video, Bluetooth, Wi-Fi	USB-mini, USB-A, Composite Video, Bluetooth, Wi-Fi	USB-mini, USB-A, Composite Video, Bluetooth, Wi-Fi
<b>COMMON FEATURES</b>			
Frame Rate	60Hz		
Field of view / Focus	25° x 19° / Manual (Minimum focus distance 1.3ft/0.4m)		
Spectral range	7.5 to 13µm		
Display	Built-in 3.5" color LCD		
Image modes	Thermal, visual, MSX, and image gallery		
Image Storage	>1000 radiometric JPEG images (SD card memory)		
Laser Classification/Type	Class 2/Semiconductor AlGaInP Diode Laser: 1mW/635nm (red)		
Set-up controls	Mode selector, color palettes, configure image info, units, language, date and time formats, and image gallery		
Measurement modes	Auto hot/cold spot, Isotherm (above/below/interval)		
Measurement Correction	Reflected ambient temperature & emissivity correction		
Battery Type/Operating Time	Li-Ion/ >4 hours, Display shows battery status		
Charging system	In camera AC adapter/2 bay charging system		
Shock/Vibration/Drop / Encapsulation; Safety	25G, IEC 60068-2-29/ 2G, IEC 60068-2-6/ Drop-proof 2m (6.6ft) IP54; EN/UL/CSA/PSE 60950-1		
Dimensions/Weight	9.7x3.8x7.2" (246x97x184mm)/<1.82lbs (825g), including battery		

## Ordering Information

64501-0101 .....	FLIR E40 IR Camera w/MSX 160 x 120 Resolution/60Hz
64501-0101-KIT .....	FLIR E40 w/MSX 160 x 120 Resolution/60Hz with FLIR Tools +
64501-0201 .....	FLIR E50 IR Camera w/MSX 240 x 180 Resolution/60Hz
64501-0201-KIT .....	FLIR E50 w/MSX 240 x 180 Resolution/60Hz with FLIR Tools +
64501-0302 .....	FLIR E60 IR Camera w/MSX 320 x 240 Resolution/60Hz
64501-0302-KIT .....	FLIR E60 w/MSX 320 x 240 Resolution/60Hz with FLIR Tools +

### ACCESSORIES

T197752 .....	Li-Ion Rechargeable Battery
T910814 .....	AC Adapter Charger (110-240V, U.S. Plug)
1910490 .....	Cigarette Lighter Adapter Kit, 12VDC (1.2m cable)
T198125 .....	2-Bay Battery Charger including Power Supply (multi plugs)
T197771 .....	Bluetooth® Headset
T127648 .....	FLIR Tools+ (Scratchcard) 2 Users
1196961 .....	15° Telephoto Lens
1196960 .....	45° Wide Angle Lens
T197926 .....	Tripod adapter
T127100 .....	Sunshield
T911087 .....	Pouch



Contact:  
Industrial Process Measurement, Inc.  
3910 Park Avenue, Unit 7  
Edison, NJ 08820  
732-632-6400  
support@instrumentation2000.com  
http://www.instrumentation2000.com



10-Year Detector  
Protection  
5-Year Battery  
2-Year Parts & Labor