




3-9900-398-1.090 Rev. A 12/13

The optional 4 to 20 mA Output Module adds an additional 4 to 20 mA loop output to a Signet 9900 Transmitter. Requires the 9900 Generation III or later. **NOTE:** Verify 9900 Transmitter generation under the OPTIONS Menu.

3-9900-1P Panel Mount

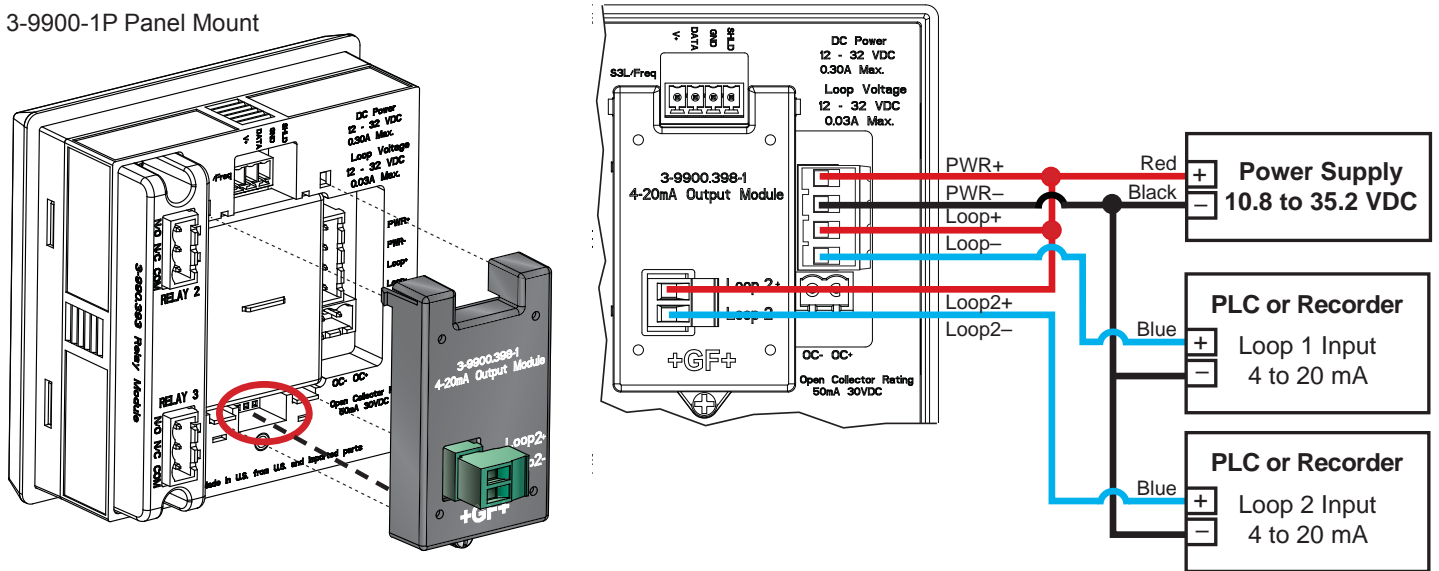

Mfr. Part No.	Code	Description
3-9900.398-1	159 001 784	4 to 20 mA Output Module
6682-1102	159 001 710	Open Collector Plug, 2 Pos, Right Angle

The 4 to 20 mA Output Module is only compatible with the 9900 Transmitter Generation III or later:

- Panel Mount version 9900-1P (159 001 695)
- Field Mount version 9900-1 (159 001 696)

NOTE: The 4 to 20 mA Output, Direct Conductivity, and Batch Modules share the same installation site on the 9900 base unit. Only one of these modules can be used per 9900 Transmitter.

Features:

- 4 to 20 mA Output Module can be powered using Loop Power or DC Power in the 9900 base unit.
- Independent settings for the loop currents of the Output Module and 9900 base unit (Error, Loop Adjustments, etc.).
- The Primary or Secondary (if applicable) measurement of a compatible sensor can be selected as the loop source.
- The same source (Primary or Secondary measurement) can be used for Loop 1 in the 9900 base unit and Loop 2 in the Output Module.



CAUTION: Exercise care when installing module.

Do not bend connecting pins. Align pins and connectors then push module firmly into place, then attach with screw.

Avoid Electrostatic Discharge (ESD):

- Minimize handling of module to reduce the possibility of damage due to ESD.
- Handle module by the edges.
- Never touch any exposed circuitry or contacts.
- Wear an anti-static wristband or stand on an anti-static mat, or keep one hand touching a properly grounded pipe or other properly grounded piece of metal when handling module.

For more information, please download the full 9900 Transmitter manual at www.gfsignet.com



Georg Fischer Signet LLC, 3401 Aero Jet Avenue, El Monte, CA 91731-2882 U.S.A. • Tel. (626) 571-2770 • Fax (626) 573-2057
 For Worldwide Sales and Service, visit our website: www.gfsignet.com • or call (in the U.S.): (800) 854-4090
 For the most up-to-date information, please refer to our website at www.gfsignet.com