

# DC Power Supply

GPD-3303 Series

---

## USER MANUAL

GW INSTEK PART NO.



ISO-9001 CERTIFIED MANUFACTURER

**GW INSTEK**

This manual contains proprietary information, which is protected by copyrights. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.  
No. 7-1, Jhongsing Rd., Tucheng City, Taipei County 236, Taiwan.

# Table of Contents

**SAFETY INSTRUCTIONS** ..... 5

**OVERVIEW**..... 9

- Introduction..... 9
- Series Lineup / Main Features ..... 11
- Principle of Operation..... 12
- Front Panel Overview ..... 14
- Rear Panel Overview ..... 17
- CV/CC Crossover Characteristics ..... 18

**SETUP** ..... 19

- Power Up ..... 19
- Load Cable Connection ..... 20
- Output On/Off..... 21
- Beep On/Off ..... 21
- Front Panel Lock ..... 22

**OPERATION** ..... 23

- CH1/CH2 Independent Mode ..... 23
- CH3 Independent Mode..... 25
- CH1/CH2 Tracking Series Mode..... 27
- CH1/CH2 Tracking Parallel Mode ..... 32

**SAVE/RECALL SETUP** ..... 34

- Save Setup ..... 34
- Recall Setup..... 35

**REMOTE CONTROL** ..... 36

- Remote Control Setup..... 36
- Remote Connection Step..... 37
- Command Syntax ..... 38

- Error Messages ..... 38
- Command List..... 39
- Command Details ..... 40

**FAQ**..... 45

**APPENDIX**..... 46

- Fuse Replacement ..... 46
- Specifications ..... 47
- Declaration of Conformity..... 49







**INDEX**..... 50

# S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow when operating the GPD-3303 series and when keeping it in storage. Read the following before any operation to insure your safety and to keep the best condition for the GPD-3303 series.

## Safety Symbols

These safety symbols may appear in this manual or on the GPD-3303 series.

	<b>WARNING</b>	Warning: Identifies conditions or practices that could result in injury or loss of life.
	<b>CAUTION</b>	Caution: Identifies conditions or practices that could result in damage to the GPD-3303 series or to other properties.
	<b>DANGER High Voltage</b>	
	<b>Attention Refer to the Manual</b>	
	<b>Protective Conductor Terminal</b>	
	<b>Earth (ground) Terminal</b>	

## Safety Guidelines

### General Guidelines



### CAUTION

- Do not place any heavy object on the GPD-3303 series.
- Avoid severe impacts or rough handling that leads to damaging the GPD-3303 series.
- Do not discharge static electricity to the GPD-3303 series.
- Do not block or obstruct the cooling fan vent opening.
- Do not perform measurement at circuits directly connected to Mains (see note below).
- Do not disassemble the GPD-3303 series unless you are qualified as service personnel.

(Measurement categories) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. The GPD-3303 series falls under category I.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- Measurement category I is for measurements performed on circuits not directly connected to Mains.

### Power Supply



### WARNING

- AC Input voltage: 100V/120V/220V/230V  $\pm 10\%$ , 50/60Hz
- Connect the protective grounding conductor of the AC power cord to an earth ground, to avoid electrical shock.

### Fuse



### WARNING

- Fuse type: 100V/120V: T6.3A/250V, 220V/230V: T3.15A/250V
- Make sure the correct type of fuse is installed before power up.

- To ensure fire protection, replace the fuse only with the specified type and rating.
- Disconnect the power cord before fuse replacement.
- Make sure the cause of fuse blowout is fixed before fuse replacement.

Cleaning the GPD-3303 series

- Disconnect the power cord before cleaning.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
- Do not use chemicals or cleaners containing harsh products such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (note below)
- Relative Humidity: < 80%
- Altitude: < 2000m
- Temperature: 0°C to 40°C

(Pollution Degree) EN 61010-1:2001 specifies the pollution degrees and their requirements as follows. The GPD-3303 series falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

- Storage environment
- Location: Indoor
  - Relative Humidity: < 70%
  - Temperature: -10°C to 70°C

Power cord for the United Kingdom

When using the GPD-3303 series in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons


 **WARNING: THIS APPLIANCE MUST BE EARTHED**

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

- Green/ Yellow: Earth
- Blue: Neutral
- Brown: Live (Phase)



As the colours of the wires in main leads may not correspond with the colours marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with the letter E or by the earth symbol  or coloured Green or Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, cable of 0.75mm<sup>2</sup> should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any moulded mains connector that requires removal /replacement must be destroyed by removal of any fuse & fuse carrier and disposed of immediately, as a plug with bared wires is hazardous if engaged in live socket. Any re-wiring must be carried out in accordance with the information detailed on this label.

# OVERVIEW

This chapter describes the GPD-3303 series in a nutshell, including its main features and front / rear panel introduction. After going through the overview, follow the Setup chapter (page19) to properly power up and set operation environment.

## Introduction

Overview	GPD-3303, the regulated DC power supply series, are light weight, adjustable, multifunctional work stations. They have three independent outputs: two with adjustable voltage level and one with fixed level selectable from 2.5V, 3.3V and 5V. The GPD-3303 series can be used for logic circuits where various output voltage or current are needed, and for tracking mode definition systems where plus and minus voltages with insignificant error are required.
Independent / Tracking Series / Tracking Parallel	The three output modes of GPD-3303 series, independent, tracking series, and tracking parallel, can be selected through pressing the TRACKING key on the front panel. In the independent mode, the output voltage and current of each channel are controlled separately. The isolation degree, from output terminal to chassis or from output terminal to output terminal, is 300V. In the tracking modes, both the CH1 and CH2 outputs are automatically connected in series or parallel; no need to connect output leads. In the series mode, the output voltage is doubled; in the parallel mode, the output current is doubled.

Constant Voltage/ Constant Current Except for CH3, each output channel is completely transistorized and well-regulated, and works in constant voltage (CV) or constant current (CC) mode. Even at the maximum output current, a fully rated, continuously adjustable output voltage is provided. For a big load, the power supply can be used as a CV source; while for a small load, a CC source. When in the CV mode (independent or tracking mode), output current (overload or short circuit) can be controlled via the front panel. When in the CC mode (independent mode only), the maximum (ceiling) output voltage can be controlled via the front panel. The power supply will automatically cross over from CV to CC operation when the output current reaches the target value. The power supply will automatically cross over from CC to CV when the output voltage reaches the target value. For more details about CV/CC mode operation, see page18.

Automatic tracking mode	The front panel display (CH1, CH2) shows the output voltage or current. When operating in the tracking mode, the power supply will automatically connect to the auto- tracking mode.
Dynamic load	When used in audio production lines, the power supply will provide a continuous or dynamic load connector. When the connectors are connected to the position "ON", a stable DC current power will be provided for audio power amplifiers.

## Series Lineup / Main Features

### Series Lineup

Model	V Meter	A Meter	USB	Tracking Error
GPD-3303D	3 digit	3 digit	Yes	≤ 0.5% + 50mV of Master
GPD-3303S	5 digit	4 digit	Yes	≤ 0.5% + 10mV of Master

### Main Features

Performance	<ul style="list-style-type: none"> <li>Low noise: Cooling fan controlled by Heatsink temperature</li> <li>Compact size, light weight</li> </ul>
Operation	<ul style="list-style-type: none"> <li>Constant Voltage / Constant Current operation</li> <li>Tracking Series / Tracking parallel operation</li> <li>Output On/Off control</li> <li>3 outputs: 30V/3A x 2, 2.5V/3.3V/5V/3A x 1</li> <li>Digital panel control</li> <li>4 sets of panel setup save/recall</li> <li>Coarse and fine Voltage/Current control</li> <li>Software calibration</li> <li>Buzzer output</li> <li>Key lock function</li> </ul>
Protection	<ul style="list-style-type: none"> <li>Overload protection</li> <li>Reverse polarity protection</li> </ul>
Interface	<ul style="list-style-type: none"> <li>USB for remote control</li> </ul>

## Principle of Operation


### Overview

The power supply consists of the following.

- AC input circuit
- Transformer
- Bias power supply including rectifier, filter, pre-regulator and reference voltage source
- Main regulator circuit including the main rectifier and filter, series regulator, current comparator, voltage comparator, reference voltage amplifier, remote device and relay control circuit

The block diagram below shows the circuit arrangement. The single phase input power is connected to the transformer through the input circuit. Details of each part are described in the next page.


### Block diagram

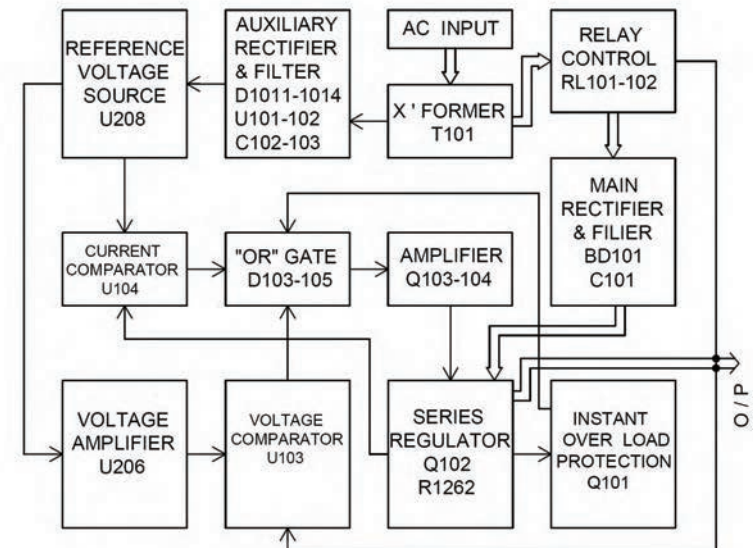

Rectifier	The auxiliary rectifiers D1011~ D1014 provide bias voltage filtered by the capacitors C102 and C103, for the pre-regulators U101 and U102. They provide a regulated voltage for other modules.
Main Rectifier	The main rectifier is a full wave bridge rectifier. It provides the power after the rectifier is filtered by the capacitor C101, and then regulated via a series-wound regulator, which is finally delivered to the output terminal.
Current Limiter	U104 acts as a current limiter. When the current is over predetermined rating, U104 is activated and decreases the current. U208 provides a reference voltage. U206 is the inverter amplifier. U103 is a comparator amplifier which compares reference voltage and feedback voltage, and then delivers to Q103, Q104, which then calibrates the output voltage.

**Overload** When the unit is overloaded, Q107 activates to control the current magnitude of Q104, to limit the output current. The relay control circuit controls the power dissipation in the series-wound regulated circuit.

### Front Panel Overview

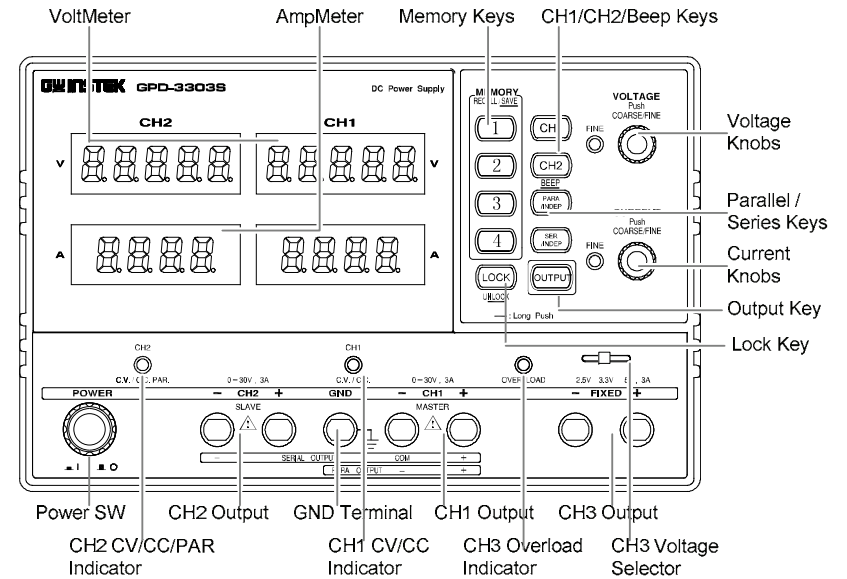

### Display


**VoltMeter** Displays CH1 or CH2 output voltage.  
 GPD-3303S (5 digits)      GPD-3303D (3 digits)





**AmpMeter** Displays CH1 or CH2 output current.  
 GPD-3303S (4 digits)      GPD-3303D (3 digits)




Control Panel


**Memory Keys**  Saves or recalls panel settings. Four settings, 1 ~ 4, are available. For save/recall details, see page34.


**CH1/CH2/Beep Keys**  Selects the output channel for level adjustment. For level setting details, see page23. Pressing and holding CH2 key enables beep sound. For details, see page21.




**Parallel/Series Keys**  Activates Tracking Parallel operation or Tracking Series operation, For details, see page27.

**Lock Key**  Locks or unlocks the front panel settings. For details, see page22.

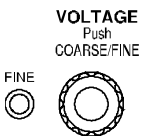**Output Key**  Turns the output on or off.

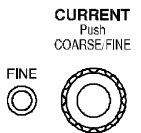
**Voltage Knobs**  Adjusts the output voltage level for CH1 or CH2. Pressing the knob switches coarse and fine level setting.

**Current Knobs**  Adjusts the output current level for CH1 or CH2. Pressing the knob switches coarse and fine level setting.


**Power Switch**  Turns On  or Off  the main power. For power up sequence, see page19.

Terminals


**Default Terminals**

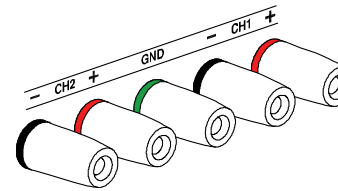

**European Terminals**

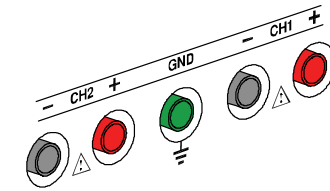


**GND Terminal**



Accepts a grounding wire.

**CH1 Output**




Outputs CH1 voltage and current.

**CH1 CV/CC Indicator**



Indicates CH1 Constant Voltage or Constant Current state.

**CH2 Output**




Outputs CH2 voltage and current.

**CH2 CV/CC/PAR Indicator**



Indicates CH2 Constant Voltage, Constant Current, or Tracking Parallel operation mode.

**CH3 Output**




Outputs CH3 voltage and current.

**CH3 Overload Indicator**



Indicates when CH3 output current is overloaded.


**CH3 Voltage Selector**



Selects CH3 output voltage: 2.5V, 3.3V, or 5V.



## Rear Panel Overview

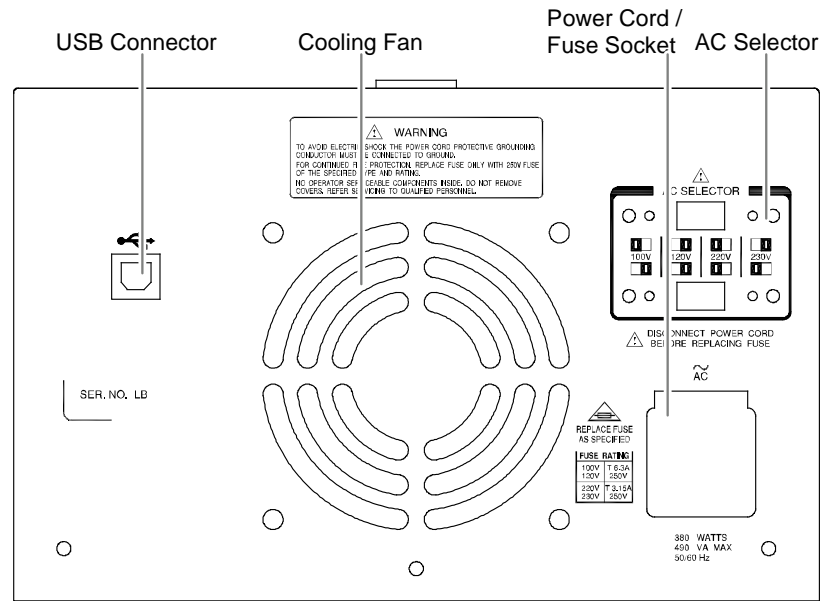

USB Connector




Accepts a USB slave connector for command-based remote control (page36).

Power Cord / Fuse Socket



The power cord socket accepts the AC mains: 115V/230V, 50/60Hz. For power up details, see page19.  
The fuse holder contains the AC main fuse. For fuse replacement details, see page46.

AC Selector

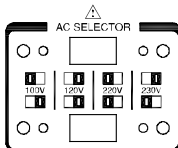

Selects AC voltage: 100V/ 120V/ 220V/ 230V.

## CV/CC Crossover Characteristics

Background

The GPD-3303 series automatically switches between constant voltage mode (CV) and constant current mode (CC), according to load condition.


CV mode

When the current level is smaller than the output setting, the GPD-3303 series operates in **Constant Voltage mode**. The indicator on the front panel turns green (C.V.) The Voltage level is kept at the setting and the Current level fluctuates according to the load condition until it reaches the output current setting.

CC mode

When the current level reaches the output setting, the GPD-3303 series starts operating in **Constant Current mode**. The indicator on the front panel turns red (C.C.) The Current level is kept at the setting but the Voltage level becomes lower than the setting, in order to suppress the output power level from overload. When the current level becomes lower than the setting, the GPD-3303 series goes back to the Constant Voltage mode.

Diagram

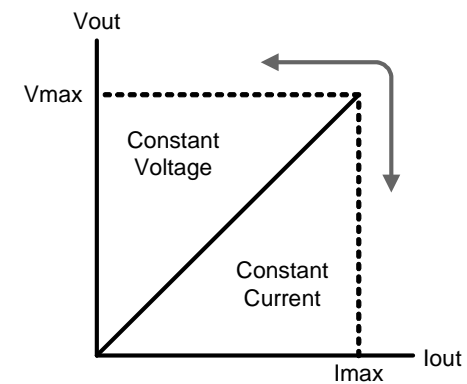


# SETUP


This chapter describes how to properly power up and configure the GPD-3303 series before operation.

## Power Up


**Select AC voltage** Before powering up the power supply, select the AC input voltage from the rear panel.

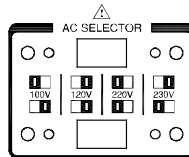

**Connect AC power cord** Connect the AC power cord to the rear panel socket.

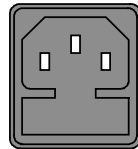

**Power On** Press the Power switch to turn on the power. The display shows the initialization screen with the model name, followed by the last recalled settings.

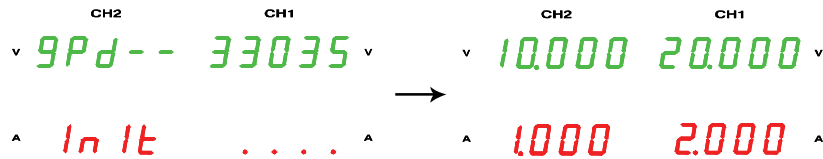


**Power Off** Press the Power switch again to turn off the power.




## Load Cable Connection


- GTL-104**
1. Turn the terminal counterclockwise and loosen the screw.
  2. Insert the cable terminal.
  3. Turn the terminal clockwise and tighten the screw.

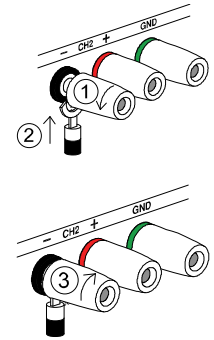

- GTL-105** Insert the plug into the socket.

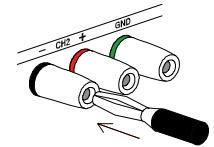


- GTL-203, 204** Insert the plug into the terminal.

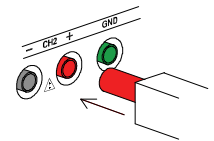

**Wire type** When using load cables other than the attached, make sure they have enough current capacity for minimizing cable loss and load line impedance. Voltage drop across a wire should not exceed 0.5V. The following list is the wire current rating at 450A/cm<sup>2</sup>.

Wire size (AWG)	Maximum current (A)
20	2.5
18	4
16	6
14	10
12	16

## Output On/Off


**Panel operation** Pressing the Output key turns on all CH 1/2/3 outputs. 

The key LED also turns on. Pressing the Output key again turns the output and the key LED off.

**Automatic output off** Any of the following actions during output on automatically turns it off. They might involve sudden and harmful change in the output level.

- Change the operation mode between independent / tracking series / tracking parallel
- Recalling other setups from the memory
- Storing the setup into the memory

## Beep On/Off


**Panel operation** By default, the beep sound is enabled. To turn off the beep, press the CH2 key for 2 seconds. 


A beep comes out and the beep setting will be turned off. To enable the beep, press the CH2 key again for 2 seconds.

**List of beep** The following operations beep when the beep setting is on.

- Power on
- INDEP - SER - PARA mode switching
- Setup save/recall
- Voltage/current knob fine/coarse switching
- Output on/off
- Panel lock/unlock
- CH1/CH2 output level knob switching
- Voltage/current level reaching minimum (zero) level

## Front Panel Lock

**Panel operation** Press the LOCK key to lock the front panel key operation. The key LED turns on. To unlock, press the LOCK key for 2 seconds. The key LED also turns off. 


**Note** The OUTPUT key is not affected by the lock operation. 

# OPERATION

## CH1/CH2 Independent Mode

Background / Connection

CH1 and CH2 outputs work independent of each other.

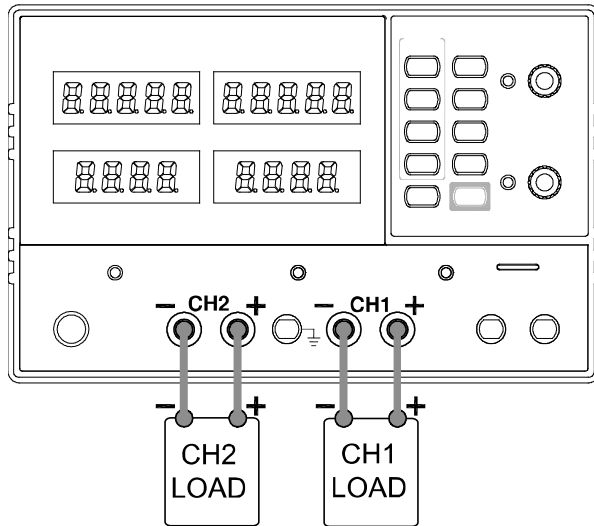


Output rating 0 ~ 30V/0~3A for each channel

Panel operation

1. Make sure the PARA/INDEP and SER/INDEP keys are turned off (the key LEDs are off).




2. Connect the load to the front panel terminals, CH1 +/-, CH2 +/-.

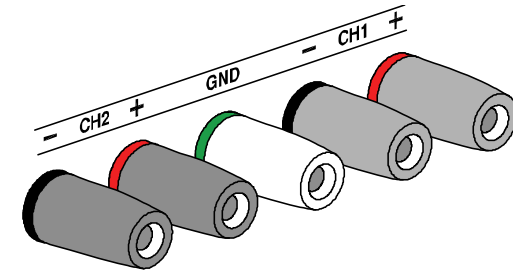


Note: this diagram shows non-European terminals.

3. Set the CH1 output voltage and current. Press the CH1 key (LED turns on) and then use the Voltage and Current knob.

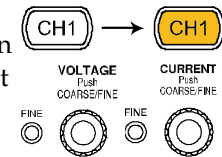


By default, the Voltage and Current knob work in the coarse mode. To activate the fine mode, press the knob to turn the FINE LED on.

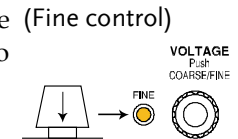

- Coarse: 0.1V or 0.1A @ rotation click
- Fine: the smallest digit @ rotation click

4. Repeat the above settings for the CH2.


5. To turn on the output, press the output key. The key LED turns on and the CH1 / CH2 indicator shows the output mode, CV or CC.

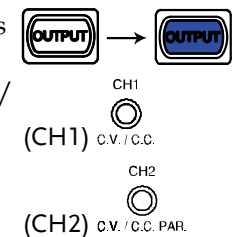

## CH3 Independent Mode

Background / Connection


The CH3 rating is 2.5V/3.3V/5V, 3A fixed. It works independently from CH1 and CH2, regardless of their modes.

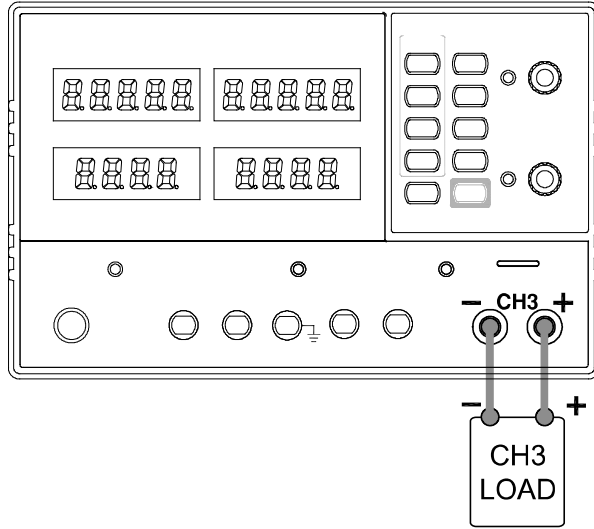


Output rating 2.5V/3.3V/5V, 3A fixed

No Tracking Series/Parallel CH3 does not have tracking series/parallel mode. Also, CH3 output is not affected by CH1 and CH2 modes.


Panel operation 1. Connect the load to the front panel CH3 +/- terminal. (the diagram shows non-European terminals)

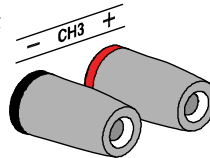

2. Select the output voltage, 2.5V/3.3V/5V using the CH3 voltage selector key.




3. To turn on the output, press the output key. The key LED turns on.



CV → CC

When the output Current level exceeds 3A, the overload indicator turns red and CH3 operation mode switches from Constant Voltage to Constant Current.



Note: "overload" in this case does not mean an abnormal operation.


## CH1/CH2 Tracking Series Mode

**Background** Tracking series operation doubles the Voltage capacity of the GPD-3303 series by internally connecting CH1 (Master) and CH2 (Slave) in serial and combining the output to a single channel. CH1 (Master) controls the combined Voltage output level.


The following describes two type of configurations depending on the common ground usage.

### Tracking series without common terminal


**Connection**

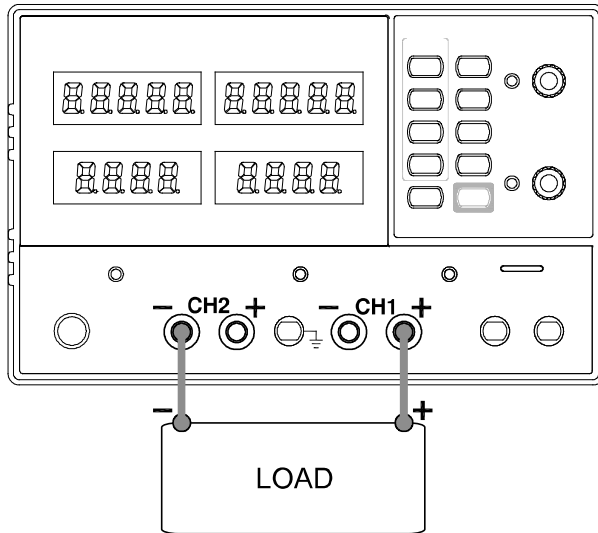







**Output rating** 0 ~ 60V/0 ~ 3A


1. Press the SER/INDEP key (LED turns on). 

2. Connect the load to the front panel terminals, CH1+ & CH2- (Single supply).

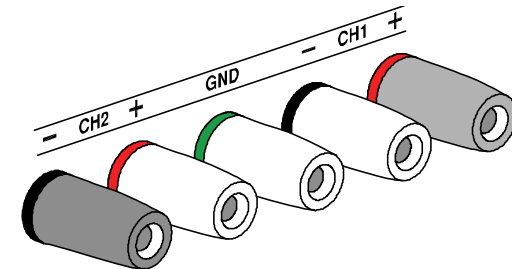

Note: this diagram shows non-European terminals.

3. Press the CH2 key (LED turns on) and then use the Current knob to set the CH2 output current to the maximum level (3.0A). By default, the Voltage and Current knob work in the coarse mode. To activate the fine mode, press the knob to turn the FINE LED on.
  - 
  - 
  - (Fine control)
  - 
  - Coarse: 0.1V or 0.1A @ rotation click
  - Fine: the smallest digit @ rotation click
4. Press the CH1 key (LED turns on) and then use the Voltage and Current knob to set the output voltage and current level.
  - 
  - 
5. To turn on the output, press the output key. The key LED turns on. 
6. Refer to the CH1 (Master) meter and indicator for the output setting level and CV/CC status.

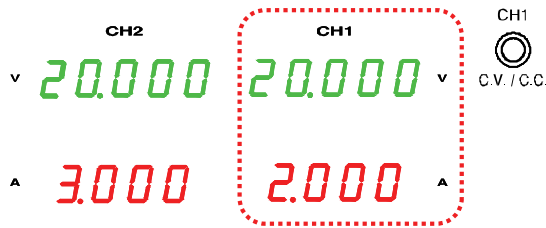


**Voltage level** Double the reading on the CH1 Voltage meter. In the above case, the actual output is  $20.0 \times 2 = 40.0V$ .

**Current level** CH1 meter reading shows the output Current. In the above case, 2.000A. (CH2 Current control must be in the Maximum position=3.0A).


### Tracking series with common terminal

Connection

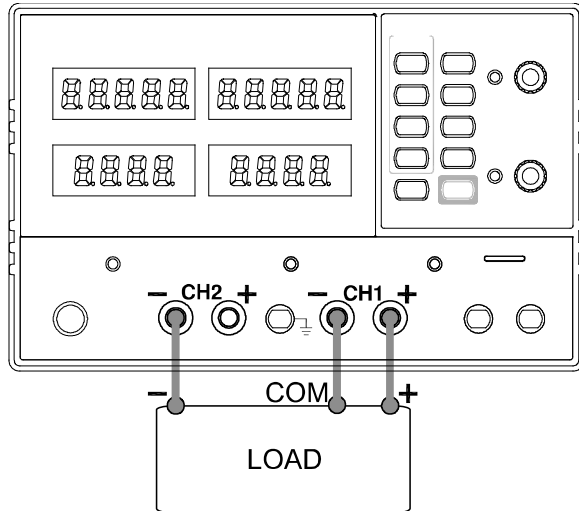

Output rating 0~30V/0~3A for CH1 ~ COM  
0~-30V/0~3A for CH2 ~ COM


1. Press the SER/INDEP key to activate the tracking series mode. The key LED turns on.
2. Connect the load to the front panel terminals, CH1+ & CH2-. Use the CH1 (-) terminal as the common line connection.

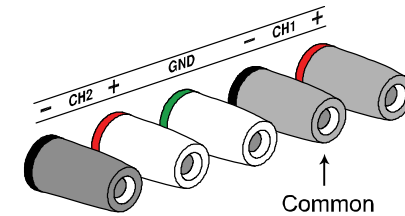

Note: this diagram shows non-European terminals.

3. Press the CH1 key (LED turns on) and use the Voltage knob to set the master & slave output voltage (the same level for both channels). By default, the Voltage and Current knob work in the coarse mode. To activate the fine mode, press the knob to turn the FINE LED on.   
(master & slave)  
  
(Fine control)
  4. Use the Current knob to set the master output current.
  5. To turn on the output (and LED), press the output key.
- Coarse: 0.1V or 0.1A @ rotation click
  - Fine: the smallest digit @ rotation click


6. For the master (CH1) output level and CV/CC status, refer to the CH1 meter and indicator.

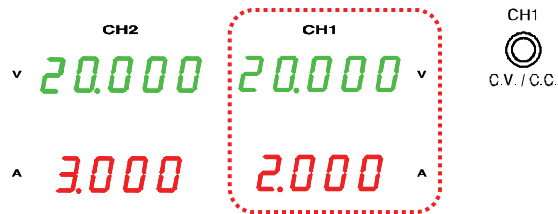


Master (CH1) voltage level  
CH1 meter reading shows the output voltage. In the above case, 20.0V.

Master (CH1) current level  
CH1 meter reading shows the output current. In the above case, 2.000A.

7. Press the CH2 key (LED turns on) and use the Current knob to set the slave output current.

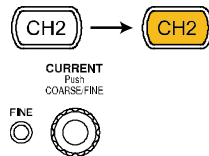

8. For the slave (CH2) output level and CV/CC status, refer to the CH1/CH2 meter and CH2 indicator.

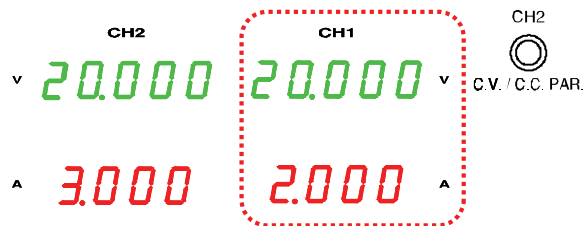


Slave (CH2) voltage level  
The CH2 meter reading shows the output voltage. In the above case, 20.0V.

Slave (CH2) current level  
The CH2 meter reading shows the output current. In the above case, 3.000A.

## CH1/CH2 Tracking Parallel Mode


Background / Connection

Tracking parallel operation doubles the current capacity of the GPD-3303 series by internally connecting CH1 and CH2 in parallel and combining the output to a single channel. CH1 controls the combined output.

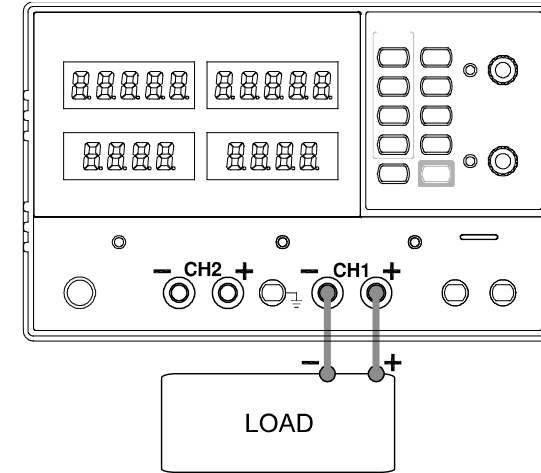


Output rating 0 ~ 30V/0 ~ 6A

1. Press the PARA/INDEP key to activate the tracking parallel mode. The key LED turns on.




2. Connect the load to the CH1 +/- terminals.

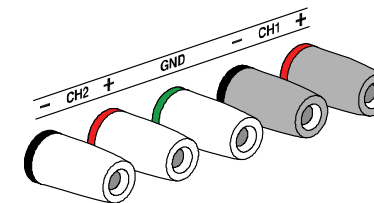


Note: this diagram shows non-European terminals.




- To turn on the output, press the output key. The key LED turns on.




- The CH2 indicator turns red, indicating tracking parallel (PARA) mode.



- Press the CH1 key (LED turns on) and then use the Voltage and Current knob to set the output voltage and current. The CH2 output control is disabled. By default, the Voltage and Current knob work in the coarse mode. To activate the fine mode, press the knob to turn the FINE LED on.

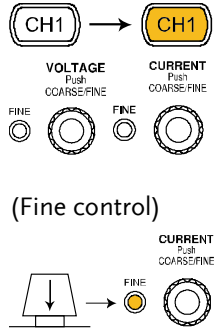

- For the output level and CV/CC status, refer to the CH1 meter and indicator.

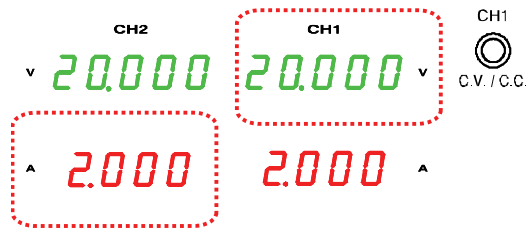

**Voltage level** The CH1 meter reading shows the output voltage. In the above case, 20.0V.

**Current level** Double the amount of CH1 current meter reading. In the above case,  $2.0A \times 2 = 4.0A$ .

# SAVE/RECALL SETUP

## Save Setup

**Background** The front panel settings can be stored into one of the four internal memories.


**Contents** The following list shows the setup contents.

- Independent / tracking series / tracking parallel mode
- CH1/CH2 knob selection
- Fine/coarse editing mode
- Output voltage/current level

The following settings are always saved as "off".

- Output on/off
- Front panel lock/unlock

**Panel operation** Press one of the 1~4 Memory keys for 2 seconds, for example memory 1. The panel settings are saved in memory 1 and the key LED turns on. When the panel settings are modified, the LED turns off.

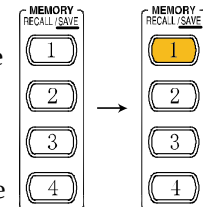

**Note** When a setting is stored, the output automatically turns off.

## Recall Setup


**Background** The front panel settings can be recalled from one of the four internal memories.

- Contents** The following list shows the setup contents.
- Independent / tracking series / tracking parallel mode
  - CH1/CH2 knob selection
  - Fine/coarse editing mode
  - Output voltage/current level

The following settings are always recalled as “off”.

- Output on/off
- Front panel lock/unlock

**Panel operation** Press one of the 1~4 Memory keys, for example memory 1. The panel settings saved in memory 1 are recalled. The key LED turns on. When the panel settings are modified, the LED turns off.

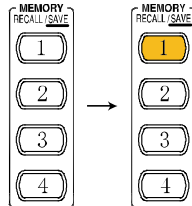

**Note** When a setting is recalled, the output automatically turns off.

# REMOTE CONTROL

## Remote Control Setup

**Background** The GPD-3303D and GPD-3303S are capable of being remotely controlled via the USB connection.

**Interface**  USB slave port, rear panel



**COM setting** Set up the COM port inside the PC according to the following list.

- Baud rate: 9600
- Parity bit: None
- Data bit: 8
- Stop bit: 1
- Data flow control: None

**Functionality check** Run this query command via the terminal application such as MTTY (Multi-threaded TTY).

\*IDN?


This should return the identification information: Manufacturer, model name, serial number, firmware version.

GW INSTEK, GPD-3303x, SN: xxxxxxxx, Vx.xx


## Remote Connection Step

Entering the remote control mode

1. Connect the USB cable to the slave port.
2. The connection will be automatically established, and the front panel shows "USB...YES" message.

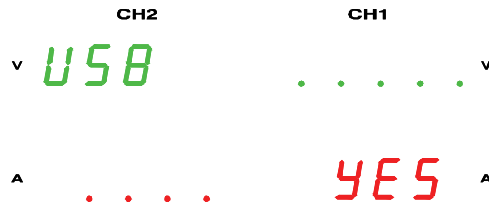


3. The power supply also automatically enters the lock state (the Lock key will become activated).



Leaving the remote control mode

1. Disconnect the USB cable from the rear.
2. The display shows "USB...NO" message.

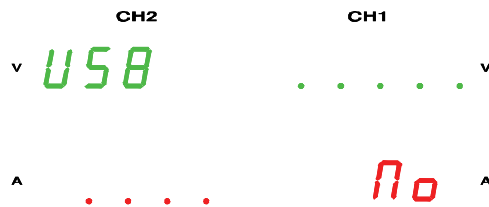

3. Unlock the power supply by keep pressing the Lock key until it turns off.



4. The power supply goes back to the local operation mode.

## Command Syntax

Command format  $ISET<X>:<NR2>$

1: command header  
2: output channel  
3: separator  
4: parameter

Output channel 1 (CH1) or 2 (CH2)

Parameter	Type	Description	Example
	<Boolean>	boolean logic	0 (off), 1 (on)
	<NR1>	integers	0, 1, 2, 3
	<NR2>	decimal numbers	0.1, 3.14, 8.5

Note Commands are not case-sensitive.

## Error Messages

The following error messages might appear when the GPS-3303D or 3303S cannot accept the command.

Message contents	Descriptions
Program mnemonic too long	The command length must be 15 characters or less.
Invalid character	Invalid characters, such as symbols, are entered. Example: VOUT#
Missing parameter	The parameter is missing from the command. Example: VSET: (should have a number)
Data out of range	The entered value exceeds the specification. Example: VSET:33 (should be $\leq 32V$ )
Command not allowed	The entered command is not allowed in the circumstance. Example: trying to set CH2 output while in the tracking mode.
Undefined header	The entered command does not exist, or the syntax is wrong.

## Command List

- Detailed descriptions of each command start from the next page.
- The “HELP” command shows all the below commands and their meanings, except for the HELP command itself.

ISET<X>:<NR2>	Sets the output current.
ISET<X>?	Returns the output current setting.
VSET<X>:<NR2>	Sets the output voltage.
VSET<X>?	Returns the output voltage setting.
IOUT<X>?	Returns the actual output current.
VOUT<X>?	Returns the actual output voltage.
TRACK<NR1>	Selects the operation mode.
BEEP<BOOLEAN>	Turn on or off the beep.
OUT<BOOLEAN>	Turn on or off the output.
STATUS?	Returns the GPS-3303D or GPS-3303S status.
*IDN?	Returns the GPS-3303D or GPD-3303S identification.
RCL<NR1>	Recalls a panel setting.
SAV<NR1>	Saves the panel setting.
HELP?	Shows the command list.
ERR?	Returns the instrument error messages.

## Command Details

### ISET<X>:<NR2>

Description	Sets the output current.	
Panel operation	See page23	
Response time	Minimum 70ms	
Example	ISET1:2.234	Sets the CH1 output current to 2.234A (for GPD-3303S)
	ISET1:2.23	Sets the CH1 output current to 2.23A (for GPD-3303D)

### ISET<X>?

Description	Returns the output current setting.	
Panel operation	See page23	
Response time	Minimum 80ms	
Example	ISET1?	Returns the CH1 output current setting

### VSET<X>:<NR2>

Description	Sets the output voltage.	
Panel operation	See page23	
Response time	Minimum 70ms	
Example	VSET1:20.345	Sets the CH1 voltage to 20.345V (for GPD-3303S)
	VSET1:20.3	Sets the CH1 voltage to 20.3V (for GPD-3303D)

**VSET<X>?**

Description	Returns the output voltage setting.	
Response time	Minimum 80ms	
Example	VSET1?	Returns the CH1 voltage setting

**IOUT<X>?**

Description	Returns the actual output current.	
Response time	Minimum 80ms	
Example	IOUT1?	Returns the CH1 output current

**VOUT<X>?**

Description	Returns the actual output voltage.	
Panel operation	See page23	
Response time	Minimum 80ms	
Example	VOUT1?	Returns the CH1 output voltage

**TRACK<NR1>**

Description	Selects the operation mode: independent, tracking series, or tracking parallel.	
Panel operation	See page27	
NR1	0: Independent 1: Tracking series 2: Tracking parallel	
Response time	Minimum 70ms	
Example	TRACK0	Selects the independent mode

**BEEP<Boolean>**

Description	Turns the beep on or off.	
Panel operation	See page21	
Response time	Minimum 70ms	
Example	BEEP1	Turns on the beep

**OUT<Boolean>**

Description	Turns on or off the output.	
Panel operation	See page21	
Response time	Minimum 70ms	
Example	OUT1	Turns on the output

**STATUS?**

Description	Returns the GPD-3303D or GPD-3303S status.	
Response time	Minimum 400ms	

Contents 8 bits in the following format

Bit	Item	Description
0	CH1	0=CC mode, 1=CV mode
1	CH2	0=CC mode, 1=CV mode
2, 3	Tracking	01=Independent, 11=Tracking series, 10=Tracking parallel
4	Beep	0=Off, 1=On
5	N/A	N/A
6	Output	0=Off, 1=On
7	N/A	N/A

**\*IDN?**

Description	Returns the GPD-3303D or GPD-3303S identification.
Response time	Minimum 300ms
Contents	GW INSTEK,GPD-3303x,SN: xxxxxxxx, Vx.xx (Manufacturer, model name, serial number, firmware version)

**RCL<NR1>**

Description	Recalls a panel setting.
Panel operation	See page35
NR1	1 - 4: Memory 1 to 4
Response time	Minimum 70ms
Example	RCL1                      Recalls the panel setting stored in memory 1

**SAV<NR1>**

Description	Stores the panel setting.
Panel operation	See page34
NR1	1 - 4: Memory 1 to 4
Response time	Minimum 70ms
Example	SAV1                      Stores the panel setting in memory 1

**HELP?**

Description	Shows the command list.
Response time	Minimum 1000ms

## Contents

ISET<x>:<NR2> Sets the value of current.

VSET<x>:<NR2> Sets the value of voltage. x:1=CH1,2=CH2.

ISET<x>? Return the value of current.

VSET<x>? Return the value of voltage.

IOUT<x>? Returns actual output current ,

VOUT<x>? Returns actual output voltage.

TRACK<NR1> Sets the output of the power supply working on independent or tracking mode. NR1:0=INDEP,1=SER,2=PARA;

BEEP<Boolean> Sets the BEEP state on or off.

OUT<Boolean> Sets the output state on or off.

STATUS? Returns the power supply state.

bit0:(CH1)0=CC,1=CV;bit1:(CH2)0=CC,1=CV;bit23=(TRACK)01=INDEP,11=SER,10=PARA;bit4:(BEEP)0=OFF,1=ON;bit6:(OUT)0=OFF,1=ON;

\*IDN? Returns instrument identification.

RCL<NR0> Recall the setting data from the memory which previous saved.

SAV<NR0> Saves the setting data to memory.

NR0:1=Memory1,2=Memory2,3=Memory3,4=Memory4;

ERR? Returns instrument error messages.

**ERR?**

Description	Checks the error status of the instrument and returns the last error message.
Response time	Minimum 70ms
Contents	See page38 for the list of error messages.

# FAQ

Q1. I pressed the panel lock key but the output still turns on/off.

A1. The output key is not affected by the panel lock key operation, for ensuring safety.

Q2. The CH3 overload indicator turned on – is this an error?

A2. No, it simply means that the CH3 output current reached the maximum 3.0A and the operation mode turned from CV (constant voltage) to CC (constant current). You can continue using the power supply, although reducing the output load is recommended.

Q3. The specifications does not match the real accuracies.

A3. Make sure that the power supply is powered on for at least 30 minutes, within +20°C - +30°C.

Q4. The internal memory is not recording the panel setting correctly – the output should be on.

A4. The output is always stored or recalled as “off” to ensure safety.


For more information, contact your local dealer or GWInstek at [www.gwinstek.com.tw](http://www.gwinstek.com.tw) / [marketing@goodwill.com.tw](mailto:marketing@goodwill.com.tw).

# APPENDIX


## Fuse Replacement

Steps

1. Take off the power cord and remove the fuse socket using a minus driver.

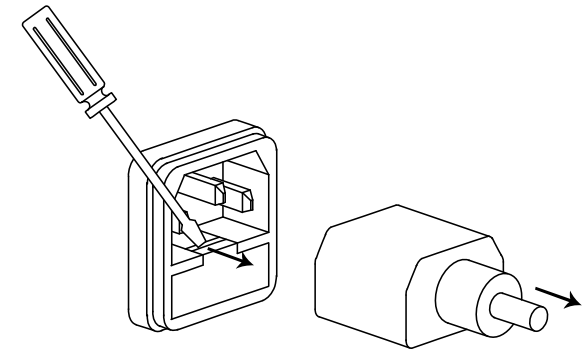

2. Replace the fuse in the holder.

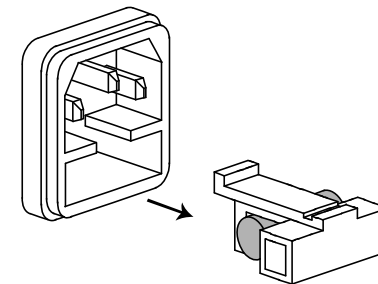

Rating

- 100V/120V:T6.3A/250V
- 220V/230V:T3.15A/250V

## Specifications

The specifications apply when the GPD-3303 series are powered on for at least 30 minutes under +20°C - +30°C.

Output Ratings	CH1/CH2 Independent	0 ~ 30V / 0 ~ 3A
	CH1/CH2 Series	0 ~ 60V / 0 ~ 3A
	CH1/CH2 Parallel	0 ~ 30V / 0 ~ 6A
	CH3	2.5V/3.3V/5.0V, 3A
Voltage Regulation	Line	≤ 0.01% + 3mV
	Load	≤ 0.01% + 3mV (rating current ≤ 3A)
		≤ 0.02% + 5mV (rating current > 3A)
	Ripple & Noise	≤ 1mVrms (5Hz ~ 1MHz)
	Recovery Time	≤ 100μs (50% load change, minimum load 0.5A)
Temperature Coefficient	≤ 300ppm/°C	
Current Regulation	Line	≤ 0.2% + 3mA
	Load	≤ 0.2% + 3mA
	Ripple & Noise	≤ 3mArms
CH3 Specification	Regulation	Line ≤ 5mV Load ≤ 15mV
	Ripple & Noise	≤ 2mVrms
Tracking Operation	Tracking Error	≤ 0.5%+10mV of Master (GPD-3303S)
		≤ 0.5%+50mV of Master (GPD-3303D)
	Parallel Regulation	Line: ≤ 0.01% + 3mV
		Load: ≤ 0.01% + 3mV (rating current ≤ 3A)
		Load: ≤ 0.02% + 5mV (rating current > 3A)
Series Regulation	Line: ≤ 0.01% + 5mV Load: ≤ 300mV	
Meter Resolution	GPD-3303D	Voltage: 100mV Current: 10mA

	GPD-3303S	Voltage: 1mV Current: 1mA
A Meter	GPD-3303D	3.2A full scale, 3 digits 0.5" LED display
	GPD-3303S	3.2A full scale, 4 digits 0.4" LED display
V Meter	GPD-3303D	32V full scale, 3 digits 0.5" LED display
	GPD-3303S	32V full scale, 5 digits 0.4" LED display
Program Accuracy	GPD-3303D	± (0.5% of reading + 2digits)
	GPD-3303S	± (0.5% of reading + 2digits) ± (0.03% of reading + 10mV) ± (0.3% of reading + 10mA)
Readback Accuracy	GPD-3303D	± (0.5% of reading + 2digits)
	GPD-3303S	± (0.5% of reading + 2digits) ± (0.03% of reading + 10mV) ± (0.3% of reading + 10mA)
Insulation	Chassis and Terminal	20MΩ or above (DC 500V)
	Chassis and AC cord	30MΩ or above (DC 500V)
Operation Environment	Indoor use, Altitude: ≤ 2000m Ambient temperature 0 ~ 40°C Relative humidity ≤ 80% Installation category: II, Pollution degree: 2	
Storage Environment	Ambient temperature -10 ~ 70°C Relative humidity ≤ 70%	
Power Source	AC 100V/120V/220V/230V±10%, 50/60Hz	
Accessories	User manual x1 Test lead GTL-104 x 2, GTL-105 x 1 (Europe) Test lead GTL-203 x 1, GTL-204 x 2	
Dimensions	210 (W) x 130 (H) x 265 (D) mm	
Weight	Approx. 7kg	

### Options

USB cable	GTL-246	USB 2.0, A-B type
-----------	---------	-------------------



## Declaration of Conformity

We

**GOOD WILL INSTRUMENT CO., LTD.**

(1) No.7-1, Jhongsing Rd., Tucheng City, Taipei County, Taiwan

(2) No. 69, Lu San Road, Suzhou City (Xin Qu), Jiangsu Sheng, China

declare, that the below mentioned product

**Type of Product: Power Supply**

**Model Number: GPD-3303D/GPD-3303S**

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2004/108/EC, 89/336/EEC, 92/31/EEC, 93/68/EEC) and Low Voltage Directive (73/23/EEC, 93/68/EEC).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

© **EMC**

EN 61326-1: 2006 Electrical equipment for measurement, control and laboratory use -- EMC requirements		
Conducted Emission		Electrostatic Discharge
Radiated Emission	Class A	EN 61000-4-2: 1995 + A1:1998 + A2:2001
EN 55011: 1998 + A1:1999 + A2:2002		Radiated Immunity
		EN 61000-4-3: 2002 + A1:2002
Current Harmonics		Electrical Fast Transients
EN 61000-3-2: 2000 + A2:2005		EN 61000-4-4: 2004
Voltage Fluctuations		Surge Immunity
EN 61000-3-3: 1995 + A1:2001		EN 61000-4-5: 1995 + A1:2001
-----		Conducted Susceptibility
		EN 61000-4-6: 1996 + A1:2001
-----		Power Frequency Magnetic Field
		EN 61000-4-8: 1993 + A1:2001
-----		Voltage Dip/ Interruption
		EN 61000-4-11: 2004

© **Safety**

Low Voltage Equipment Directive 73/23/EEC, 93/68/EEC
Safety Requirements
IEC/EN 61010-1: 2001

# INDEX

automatic out off .....	21	lock (manual).....	22
banana plug.....	20	overview .....	14
beep setting		fuse	
contents.....	21	rating .....	46
manual .....	21	replacing .....	46
remote control.....	42	safety instruction .....	6
caution symbol .....	5	GPD series	
cleaning the instrument.....	7	block diagram.....	12
COM setting, remote control		dynamic load.....	10
.....	36	lineup.....	11
command list .....	39	list of features .....	11
recalling the list.....	43	operation theory.....	12
common terminal, tracking		technology overview .....	9
series.....	27	ground symbol.....	5
cooling fan .....	17	identification information...	43
safety instruction .....	6	load connection.....	20
CV/CC		operation mode	
CH1/CH2 indicator .....	24	independent.....	23
CH3 indicator.....	26	remote control .....	41
operation theory .....	10, 18	specifications .....	47
EN61010		tracking parallel .....	32
declaration of conformity	49	tracking series.....	27
measurement category .....	6	output current setting	
pollution degree .....	7	manual.....	24
EN61326-1 .....	49	remote control .....	40
environment		output on/off	
operation.....	7	FAQ .....	45
specification .....	48	manual.....	21
storage.....	8	remote.....	42
error messages, remote		output voltage setting	
control .....	38, 44	manual.....	24
front panel		remote control .....	40

overload indicator .....	26	interface.....	36
power supply		save settings	
safety instruction .....	6	manual.....	34
setup .....	19	remote.....	43
socket overview .....	17	service operation	
specification.....	48	about disassembly .....	6
protective ground symbol.....	5	contact .....	45
rear panel overview .....	17	status, instrument .....	42
recall settings		tracking mode	
manual .....	35	operation theory.....	9
remote .....	43	UK power cord.....	8
remote control		USB interface .....	36
command syntax .....	38	warning symbol .....	5
connection test .....	36	wire, load .....	20
error messages .....	38		