

MicroTemp100

Miniature Submersible Temperature Data Logger



The MicroTemp100 is a miniature data logger built to withstand temperatures up to 100 °C (212 °F). Only 2.6 inch (66 mm) tall and 0.7 inch (18 mm) in diameter, this data logger can easily fit into the smallest spaces and is submersible up to 230 ft (70 m).

Don't let its tiny size fool you, the MicroTemp100 measures and records temperatures ranging from -40 °C to +100 °C (-40 °F to +212 °F). The MicroTemp100 has a storage capacity of 32,767 readings and is equipped with an LED alarm to warn when user-specified high/low temperature limits are breached.

The MicroTemp100 is compatible with the latest MadgeTech 4 Software making starting, stopping, and downloading simple and easy. Graphical, tabular, and summary data is provided for analysis and can be viewed as customizable engineering units.

Features

- Only 2.6 inch x 0.7 inch in Size
- Reusable
- Submersible to 230 ft (70 m)
- Programmable Start Time
- Real-time Operation
- User-friendly
- Low Cost


Benefits

- Simple Setup and Installation
- Minimal Long-Term Maintenance
- Long-Term Field Deployment

Applications


- Implement HACCP Programs
- Medical/Pharmaceutical
- Food Preparation and Processing
- Biomedical Research
- Dishwasher Testing
- Hostile Environment Monitoring
- Environmental Studies
- Well Monitoring
- Pasteurization

MadgeTech 4 Software Features

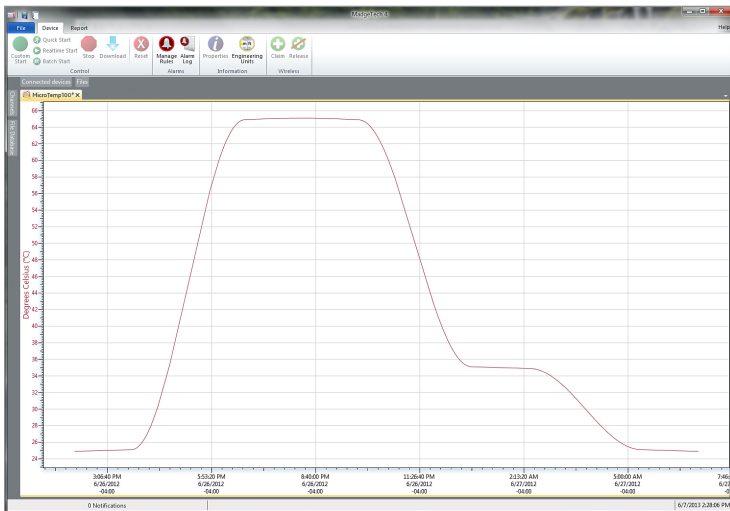


Graph View

- Multiple graph overlay
- Statistics
- Digital calibration
- Zoom in/ zoom out
- Lethality equations (F0, PU)
- Mean Kinetic Temperature
- Full time zone support
- Data annotation
- Min./Max./Average lines
- Summary view

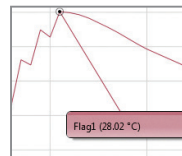


Cooling Flags

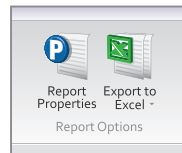

Export to Excel

Serial	Channel	Point Count	Maximum	Minimum
A0004	Temperature	1000	65.10 °C	24.90 °C

Tabular Data View

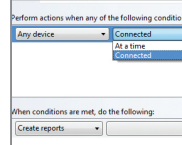

Automation

SPECIFICATIONS

Specifications are subject to change without notice. Specific warranty remedy limitations apply.

TEMPERATURE		GENERAL	
Temperature Sensor	Internal Semiconductor	Start Modes	Software programmable immediate start Delay start up to 6 months in advance
Temperature Range	-40 °C to +100 °C (-40 °F to +212 °F)	Real Time Recording	May be used with PC to monitor and record data in real time
Temperature Resolution	0.1 °C	Memory	32,767 readings
Calibrated Accuracy	±0.5 °C (0 °C to 50 °C)	Wrap Around	Yes
	±1.0 °C (50.1 °C to 100 °C)	Reading Rate	1 reading every 2 seconds up to 1 reading every 12 hours
	±2.0 °C (-40.0 °C to -0.1 °C)	LEDs	1 status LED
		Calibration	Digital calibration through software
		Calibration Date	Automatically recorded within device
		Battery Type	3.6 V lithium battery included; user replaceable
		Battery Life	1 year typical at +25 °C, 1 minute reading intervals
		Data Format	Date and time stamped °C, K, °F or °R
		Time Accuracy	±1 minute/month at +20 °C
		Computer Interface	USB interface cable required; 38,400 baud
		Operating System Compatibility	Windows XP SP3 or later
		Software Compatibility	Standard Software version 4.2.21.0.0 or later
		Operating Environment	-40 °C to +100 °C (-40 °F to +212 °F), 0 %RH to 100 %RH
		IP Rating	IP68
		Dimensions	2.6 in x 0.7 in dia. (66 mm x 18 mm dia.)
		Weight	1.8 oz (50 g)
		Material	316 Stainless Steel (food grade)
		Approvals	CE

BATTERY WARNING: FIRE, EXPLOSION, AND SEVERE BURN HAZARD. DO NOT SHORT CIRCUIT, CHARGE, FORCE OVER DISCHARGE, CRUSH, PENETRATE, OR INCINERATE. BATTERY MAY LEAK OR EXPLODE IF HEATED ABOVE 150 °C (302 °F).

Ordering Information

MicroTemp100	PN 902239-00	Miniature Submersible Temperature Data Logger
IFC202	PN 900309-00	USB interface cable
ER14250MR-145	PN 900097-00	Replacement battery for the MicroTemp100