

MIT300 Series Insulation and Continuity Testers



- Extremely easy to use
- Tough rubber armoured case
- Self contained protective cover
- Live circuit warning
- Weatherproof to IP54
- Intelligent Safety System for protection.
- Result storage and downloading
- Download software included
- USB interface
- Compatible with CertSuite.app

DESCRIPTION

The Megger MIT300 series features:

Digital or Analogue: The Megger MIT300, MIT310 and MIT320 all feature the popular Megger digital/analogue display. Large 20mm high characters provide very clear readout, combined with an analogue arc for the feel of an analogue instrument, with a true analogue response.

Tough:-

- Designed to take the bashing that testers receive on site, the Megger MIT insulation testers are rubber armoured.
- The rigid display cover folds right out of the way during testing and locks down to protect the display when it is finished.

Simple to use:-

- No buried functions mean it is obvious how to use the Megger MIT.
- Colour coded ranges help test selection, reducing testing time and help with fault location.
- A user guide in the lid provides all the basic information.

Hands free use:-

- It hangs comfortably around the neck for hands-free use because the instrument is carefully balanced.
- Continuity and buzzer testing starts automatically on connection to the circuit.
- Insulation tests being activated from the instrument or the switch probe, supplied with MIT320 and MIT330 (not suitable for the use with the MIT300 or MIT310).

Backlighting:-

- Both the display and the range selected can be read in the dark because the MIT 320/330 has a backlit display and range selection.

Safety features:- To protect the user and the tester from incorrect use the MIT series all have an extensive range of features known as the Megger Intelligent Safety System including:

- Safety Interlock – prevents unsafe connection of test leads
- Safe contact detectors – Even if the MIT is connected to a live circuit whilst on continuity setting the tester will remain safe and not be damaged.
- Live voltage warning – alerts the operator when a circuit voltage over 25 V exists.
- Safety lockout – Prevents the test from operating when the circuit voltage is >50 V.
- Continuity check – prevents a continuity test or buzzer test on a live circuit.

The MIT300, 310, 320 and 330 meet or exceed the UK and International Wiring Regulations, including requirements of BS7671 and VDE 0413 parts 1 and 4, HD 384, IEC 364, NFC15-100, NEN3140, ES59009 and EN 61557.

MIT300 Series Insulation and Continuity Testers

In addition the range meets the requirements of IEC 61010-1 for safe connection to a 440 V Installation Category III supply (600 V Phase to Earth).

The MIT330 additionally offers the facility to save test results to internal memory. Over 1000 result can be saved on site, and downloaded to a computer when convenient. Data is stored in non-volatile memory, being retained when the instrument is switched off or batteries are exhausted.

A Job reference number can be selected for a range of results, allowing separate locations to be tested with the same tester and easily separated when downloaded.

A memory bar graph acts as a 'Fuel Gauge' showing how much memory has been used

Test results are downloaded to CSV (Comma Separated Variable) spreadsheets, and can be imported into Microsoft Excel. If certificates or reports are required, the results can be downloaded via Megger Download Manager (supplied) for simple form filling of test results using optional certification software such as CertSuite from Megger.

CertSuite electrical certification software works online and offline, with PC, Mac, tablets and phones. It allows you to send your certificate straight from the job to Cloud based secure storage, seamlessly auto-syncing to allow multiple engineers to work on the same certificate simultaneously. An office-based supervisor can manage on-site data entry and add company logos, photographs, etc.

APPLICATIONS

The MIT300 series has applications in all aspects of domestic, commercial and industrial electrical contracting, building maintenance, testing, inspection and servicing.

Combining both Insulation testing and continuity testing, each instrument caters for all aspects of fixed wiring installations.

Further applications can be found in panel building, testing of motors, generators, switchgear and power tools, street lighting and low volume manufacturing environments etc.

All the MIT300 range is supplied with a full 3 years warranty.


SPECIFICATIONS

Insulation ranges

Nominal Test Voltage

MIT310, 320, 330	1000 V, 500 V, 250 V (DC)
MIT300	500 V, 250 V (DC)

Terminal Characteristics

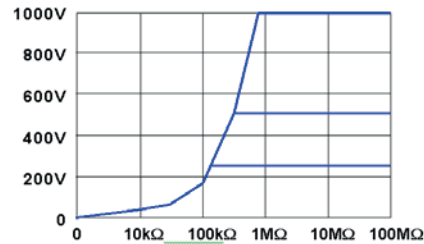

Measuring Range

All instruments 10 kΩ - 999 MΩ on all ranges

Short Circuit Current 1.5 mA nominal

Test Current on Load 1 mA at min. pass values of insulation (as specified in BS7671, HD 384 and IEC 364)

Accuracy (at 20 °C)

MIT300, 310, 320, 330 ±3%, ±2 digits up to 10 MΩ, ±5% up to 100 MΩ, ±30% up to full scale

Continuity ranges

Measuring Range: 0,01 Ω - 99,9 Ω (0 -50 Ω on analogue scale)

Open Circuit Voltage: 5 V ±1 V

Short Circuit Current

MIT300, 310, 320, 330 205 mA +10 mA -5 mA

Accuracy (at 20 °C)

MIT300, 310, 320, 330 ±3% ±2 digits

Measuring range 0 - 2/20/200/2 kΩ

Open circuit voltage 1.5 V +/-0.5 V

Zero Offset Adjust:

MIT300, 310, 320, 330 0 - 9 Ω

Continuity Buzzer

MIT300, 310 Operates at <5 Ω
MIT320, 330 Adjustable 1 Ω to 20 Ω
MIT300, 310, 320, 330 Response time <20 ms

MIT300 Series Insulation and Continuity Testers

MIT300 SERIES BENEFITS:	MIT300	MIT310	MIT320	MIT330
Insulation testing				
250 V	■	■	■	■
500 V	■	■	■	■
1000 V		■	■	■
Test range	999 MΩ	999 MΩ	999 MΩ	999 MΩ
Insulation limit alarm (0.01 MΩ to 999 MΩ)			■	■
Continuity testing				
Continuity to 100 Ω	■	■	■	■
Continuity buzzer	■	■	■	■
Lead null to 9ohms	■	■	■	■
Adjustable buzzer 1 to 20 Ω			■	■
Audible buzzer disable			■	■
Voltage measurement				
Volts AC/DC		600 V	600 V	600 V
Resistance measurement				
10 Ω to 1 MΩ range			■	■
Features				
Voltage warning	■			
Default voltmeter		■	■	■
Backlit display			■	■
Backlight selector ranges			■	■
Locking test button	■	■	■	■
Auto powerdown	■	■	■	■
Switched test probe			■	■
IP54 weatherproof	■	■	■	■
Accepts rechargeable batteries	■	■	■	■
1000 Test result storage				■
Downloading				■
Calibration certificate	■	■	■	■
3 years warranty	■	■	■	■

MIT300 Series

Insulation and Continuity Testers

Resistance range MIT320/330

(can be used for diode testing)

Measuring Range:	10 Ω - 1 M Ω
Open Circuit Voltage:	5 V
Short Circuit Current:	1.5 mA
Accuracy (at 20° C):	$\pm 5\%$ ± 2 digits up to 100 k Ω
Voltage range	
Measuring Range:	0 - 600 V AC (50/60 Hz) or DC
Accuracy (at 20 °C)	
MIT310, 320, 330	DC or AC (50/60 Hz): $\pm 1\%$, ± 2 digits
Temperature coefficient:	<0,1% per °C on all ranges.
Default voltmeter	all modes except off
MIT310, 320, 330	>25 V AC or DC is applied display will operate as a voltmeter.
MIT300	Beeps and flash 'V' on the display
Test inhibit:	If more than 50 volts is detected, testing will be inhibited.

AutoPower Down (MIT310, 320, 330)

Auto power down operates after 10 minutes if left in standby mode.

Temperature and humidity

Operating Range:	-10 °C to +60 °C
Operating Humidity:	93% R.H. at +40 °C max.
Storage Range:	-25 °C to +70 °C
Test Result Storage (1000 results)	
Job Number	255 locations
Distribution Board no.	99 locations
Circuits	99 locations
Phases	P1, P2, P3

Last recorded result may be recalled to the display.

All data can be downloaded to a PC using Download Manager and uploaded into Megger Certsuite

Communications

USB interface

Environmental Protection:

IP54

Fuses

Terminals	500 mA (F) 600 V, 32 x 6 mm Ceramic HBC 10 kA minimum.
-----------	--

Display shows if fuse is ruptured.

Safety

Meets the requirements of IEC61010-1 Cat III 600 V phase to earth.

Automatic discharge

After an insulation test the item under test will be discharged automatically. Any voltage present will be indicated on the display so that the discharge can be monitored.

Power supply

Battery:

8 x 1,5 V cells IEC LR6 type(AA alkaline).

Rechargeable NiCd or NiMH cells may be used.

Battery condition is constantly shown on the display as a four-section bargraph.

Battery Life

5000 consecutive tests (5 seconds per test) on any test using 2Ah batteries.

Weight

All units:	980 gms
-------------------	---------

Dimensions

All units:	203 x 148 x 78 mm (8 x 5.7 x 3.2 inches)
-------------------	--

E.M.C.	In accordance with IEC61326-1
---------------	-------------------------------

ORDERING INFORMATION

Description	Order Code	Description	Order Code
MIT300 250 V, 500 V insulation tester	MIT300-EN	Included Accessories	
MIT310 250 V, 500 V, 1000 V insulation tester	MIT310-EN	Test lead set and crocodile clips	1002-001
MIT320 250 V, 500 V, 1000 V insulation tester	MIT320-EN	SP4F Switch probe (MIT320 and MIT330 only)	6220-809
MIT330 250 V, 500 V, 1000 V insulation tester	MIT330-EN	USB download lead (MIT330 only)	1007-308
		Optional Accessories	
		Fused test lead set	1002-015

Contact:
Industrial Process Measurement, Inc.
3910 Park Ave, Unit #7
Edison, NJ 08820 USA
(732) 632-6400
support@instrumentation2000.com
<https://www.instrumentation2000.com/>

MIT300_DS_en_V18

ISO 9001

The word 'Megger' is a registered trademark

Megger ^R