

Magnet Mount Thermocouples

MP Series
Starts at
\$59



See Section W

Dual magnet style MP2.




Single magnet style MP1.



Shown actual size.



SS overbraided glass lead wire standard.

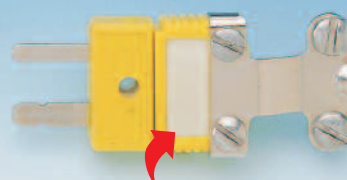

Shown with optional PFA insulated lead wires.

Featuring the SMPW subminiature connector with handy write-on window.

- ✓ Measures Surface Temperature of Ferrous Materials
- ✓ Spring-Mounted Thermocouple

Smaller magnetic mount thermocouples are also available. See models 88401 and 88402 on page A-111.

- ✓ Single or Dual 53 Newton (12 lb) Pull Magnets
- ✓ J, K, E, T Calibrations
- ✓ Magnet Will Retain 90% of Its Pull at 370°C (700°F)

Specifications

Magnet Dimensions, MP1:

25 H x 38 W x 25 mm D
(1.0 x 1.5 x 1.0")

Magnet Dimensions, MP2:

108 H (with handle) x 64 W x 25 mm D
(4.3 x 2.5 x 1.5")

- ✓ Subminiature Male Connector with Write-On Window and Cable Clamp Included
- ✓ 1 m (40") SS Overbraid Glass, or PFA Wire

Lead Wires: 1 m (40"), SS overbraided glass standard, extra lead wire \$2.25/ft, PFA insulated optional

 **MOST POPULAR MODEL HIGHLIGHTED!**

To Order (Specify Model Number)

Model No.	Description
MP1-(*)-36-SMPW-M	Single-magnet probe
MP2-(*)-36-SMPW-M	Dual-magnet probe

* Specify calibration Type: J, K, E or T.

SS overbraid glass insulated wire standard. To order with optional PFA insulated wire, add suffix "-TT" to model number. Price per additional foot, \$2.25. To order ungrounded, add "-UNGROUND" to model number and \$2 to price.

Ordering Example: MP1-K-36-SMPW-M-TT, Type K, single magnet thermocouple probe with optional PFA insulated leads, \$59.

A-112

