

HUMIDITY AND TEMPERATURE DATA LOGGERS



COMPACT, DEPENDABLE AND INEXPENSIVE.

- Measurement accuracy of $\pm 3.0\%RH$ and $\pm 0.3\text{ }^{\circ}C$
- Compact design with a high IP protection
- Large storage capacity: 32,000 data point memory
- MIN/MAX/AVG statistical function
- Includes HW4-lite programming and analysis software
- Clear LCD with visual alerts
- Appropriately long battery life (3 years at logging interval of 5 min.)
- Conforms to FDA 21 CFR Part 11 / GAMP 5



TECHNICAL INFORMATION

Dimensions / Ports

Type HL-1D





Type TL-1D



USB-Mini port
(settings and data
download)

Battery compartment

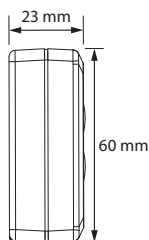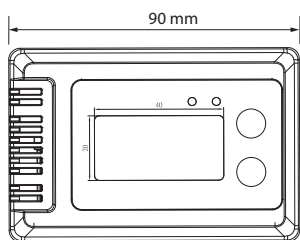

Data Logging



The values stored in the HL-1D or the TL-1D are available for download with the HW4 software. After downloading the saved data, a graphical display of the values is possible. Via the HW4

software, the logging interval, logging mode, alarms and other such functions can be setup or enabled.

| General Specifications | |
|--------------------------|---|
| Parameters | HL-1D: Humidity and temperature TL-1D: Temperature |
| Temperature sensor | NTC |
| Humidity sensor | HL-1D: ROTRONIC HygroMer IN-1 TL-1D: -- |
| Accuracy at 23 °C ±5 °C | HL-1D: ±3.0 %RH / ±0.3 °C TL-1D: ±0.3 °C |
| Range of application | -20...70 °C / 0...100 %RH |
| IP rating | IP67 |
| Weight | 85 g |
| Dimensions | 90 x 60 x 23 mm |
| Logging interval | 30 s...24 h |
| Battery | 1 x CR2 |
| Battery life | 3 years at a logging interval of 5 minutes |
| Battery charge indicator | Yes (HW4 software, display and LED indicator) |
| Storage capacity | HL-1D: 16,000 data point memory (RH & T) TL-1D: 32,000 data point memory (T) |
| Function | MIN/MAX/AVG statistical data |
| Display | LCD, 2 lines, 1 decimal resolution |
| Display refresh rate | 5 sec. (Standard) Same as Logging interval |
| LED indicator | 2 LEDs Right LED flashes green during data logging Left LED flashes red when alarm limits breached or low battery |
| Communication | USB-Mini port |
| Adjustment | Humidity 1-point |
| FDA/GMP compatibility | Conforms to 21 CFR Part 11 and GAMP5 |
| Software | HW4 V3.4.1 or later |
| Accessory | |
| USB-Mini cable | AC0003 |

| | |
|-----------------|---|
| Included | <ul style="list-style-type: none"> - CR2 Battery - Short instruction manual - Function and calibration certificate - HW4-lite software key code (software to be downloaded from www.rotronic.com) |
|-----------------|---|

Subject to technical change without notice. Printing and other errors reserved.

Contact:
Industrial Process Measurement, Inc.
3910 Park Avenue, Unit 7
Edison, NJ 08820
732-632-6400
support@instrumentation2000.com
<http://www.instrumentation2000.com>

rotronic
MEASUREMENT SOLUTIONS