E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 1 of 27

HygroFlex HF3 Transmitters

User Guide



E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 2 of 27

Table of contents

1	Overview	.3
2	Mechanical configurations and dimensions	.4
2.1	Display option	.5
3	General description	.6
3.1	Power supply	.6
3.2	Measured parameters	.6
3.3	Calculated parameters	
3.4	Analog output signals (HF32 and HF33)	.7
3.5	Service connector	
3.6	Sensor protection (dust filter)	
4	User configurable settings and functions	.9
4.1	Function overview	
4.2	Factory default settings	11
5	Mechanical installation	12
5.1	General guidelines	
5.2	Type D – through wall mount	
5.3	Type W – surface mount	
5.4	Type R and S – surface mount	
6	Electrical installation	14
6.1	General guidelines	14
6.2	Cable grip and cable specifications	
6.3	Wiring	15
7	Operation	
7.1	Minimum load requirements for the HF33 with voltage outputs	
8	Maintenance	
8.1	Service cable	
8.2	Location of the service connector (mini-USB type)	
8.3	Periodic calibration check	
8.4	Cleaning or replacing the dust filter (type D and W)	
9	Firmware updates	
10	Technical data	
10.1	Specifications	
10.2	Dew point accuracy	
11	Accessories	
12	Supporting documents	
13	Document releases	27

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 3 of 27

Applicability:

This manual applies to all instruments of the HF3 series with firmware version 3.0 or higher. Changes to the last digit of the version number reflect minor firmware changes that do not affect the manner in which the instrument should be operated.

1 Overview

The HF3 transmitters measure temperature, relative humidity and the dew or frost point. The HF3 series is designed for fixed installation in cost sensitive HVAC applications where conditions are within the range of 0 to 100 RH and -40 to 60 C (-40 to 140 F) and for units with display: -10 to 60 C (14 to 140 F).

The HF3 features well proven sensors and a robust housing. Digital signal processing ensures consistent product performance and also facilitates the task of field maintenance with features such as potentiometer free - digital calibration.

Based on the ROTRONIC AirChip 3000 digital technology, the HF3 series offers the following user functions:


- User configurable settings
- Calculation of the dew or frost point
- Humidity temperature calibration and adjustment
- Simulator mode
- Automatic humidity sensor test and drift compensation
- Sensor failure mode
- Data recording

The ability for the user to easily update the AirChip 3000 firmware means that instruments of the HF3 series can be kept up-to-date regarding any future functionality improvement.


HF3 transmitters: two types of electronic circuit are available: HF32: 2-wire, loop powered (4...20 mA current signal) and HF33: 3-wire (voltage or current signal). Both circuit types provide linear analog outputs signals for transmission over a length of cable to a remote display, recorder, controller or data processing unit. The HF3 transmitters can be used to measure humidity only, temperature only or both parameters.

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 4 of 27


2 Mechanical configurations and dimensions

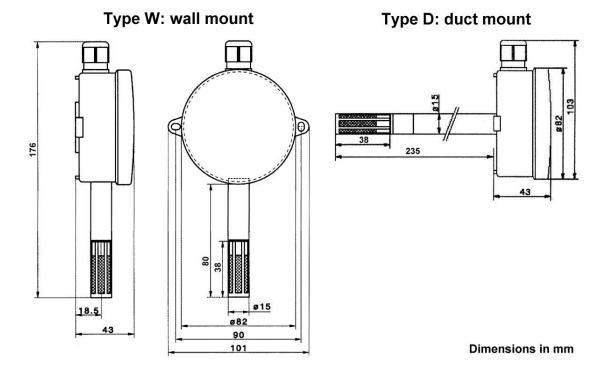

Type S: space mount

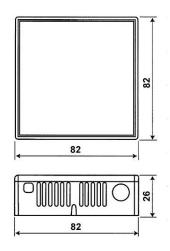



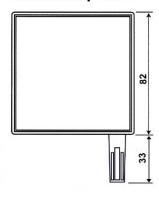

Dimensions in mm

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 5 of 27

2.1 Display option



The LC display option is available only with type R and type S mechanical configurations. The upper line of the display corresponds to relative humidity or dew / frost point and the bottom line corresponds to temperature.

The display can be configured to show a trend indicator on each line:

- ▲: increasing value
- ▼: decreasing value

In the event of an alarm the display shows the symbol **[!]** to the right of the value.

For instructions see the following HW4 manual: **E-M-HW4v3-F2-002**.

The display option for the HF33 has a backlight. The display option for the HF32 does not have a backlight.

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 6 of 27

3 General description

3.1 Power supply

Depending on the circuit type, the HF3 requires the following power supply:

a) **HF32** (2-wire, loop powered): 10...28 VDC - depending on the load connected to the output(s). The minimum supply voltage can be determined as follows:

V min = 10 V + (0.02 x Load*) *Load resistance in ohms.

For the maximum load of 500 Ω , the minimum supply voltage is 10 + (0.02 x 500) = 20 VDC. With both output circuits closed, the maximum current consumption is 40 mA.

b) HF33 (3-wire with analog outputs): 18 to 40 VDC (see note below) or 13 to 28 VAC. With both output circuits closed, the maximum current consumption is 60 mA for DC powered devices and 150 mA for AC powered devices. HF3 with display and backlight have a current consumption up to 100 mA (DC powered) / 250 mA (AC powered)

Note: depending on the type of output signal, the HF33 will operate with the following minimum voltage

01 V outputs:	6 VDC or 5 VAC
05 V outputs:	10 VDC or 8 VAC
010 V outputs:	18 VDC or 13 VAC
020 mA or 420 mA outputs:	6 VDC or 5 VAC with 0 Ω load
	18 VDC or 13 VAC with 500 Ω load

3.2 Measured parameters

The HF3 measures relative humidity with a ROTRONIC Hygromer[®] IN1 capacitive sensor and temperature with a Pt100 RTD.

3.3 Calculated parameters

Using the ROTRONIC HW4 software, the HF3 can be configured by the user to calculate either the dew point or the frost point.

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 7 of 27

3.4 Analog output signals (HF32 and HF33)

HF32 and HF33: with the ROTRONIC HW4 software any of the two analog output signals can be made to correspond to one of the following:

- Relative humidity
- Temperature
- Dew or frost point

Any output can also be disabled.

The scale of each analog output can be set within the numerical limits of -999.99 and 9999.99.

The D/A converters used to generate the analog output signals feature a 16-bit resolution and exhibit a small positive offset at the bottom of the signal range as indicated below:

Signal type	Maximum offset at range bottom
01 V	10 mV
05 V	50 mV
010 V	100 mV
020 mA	0.2 mA
420 mA	No offset

HF33: the ROTRONIC HW4 software allows changing the type of output signal to one of the following: 0...20 mA, 4...20 mA, 0...1V, 0...5V or 0...10V. Both output signals are automatically configured with the same signal type. No calibration or adjustment is required after changing the type of output signal.

In the case of voltage output signals, load requirements apply to the external device or circuit connected to the HF3 transmitter. These requirements are defined in the "Operation" chapter

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 8 of 27

3.5 Service connector

The service connector is a UART digital interface (Universal Asynchronous Receiver Transmitter) with a mini-USB type connector. This allows connecting the HF3 either to a PC running the ROTRONIC HW4 software or to a probe input of another instrument that is compatible with the HygroClip 2 (HC2) probes. In both cases a service cable is required. See "Maintenance" for the location of the service connector and for the type of service cable to be used.

- Connecting the HF3 to a PC is used to configure the HF3, gain access to the HF3 functions such as humidity and temperature adjustment, read data from the HF3 on the PC and update the AirChip 3000 firmware.
- Connecting the HF3 to another instrument is useful only when the other instrument has its own display and keypad (example HP23 hand-held calibrator). The connection allows showing the data measured by the HF3 on the other instrument display and also allows using the other instrument internal menu to do for example a humidity and temperature adjustment of the HF3.

3.6 Sensor protection (dust filter)

With the exception of models with the S configuration, the HF3 is supplied with a Polyethylene filter to protect the sensors against dust particles and high air velocity.

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 9 of 27

4 User configurable settings and functions

The HF3 ships configured as specified on the customer order. The HF3 can be installed and used just as any conventional humidity and temperature transmitter and most users will never need to use the HF3 configurable settings and functions.

Making use of the HF3 configurable settings and functions is entirely up to the user and the appropriate settings depend on the user application. We have provided below a short description of the HF3 functions and also indicated the factory default settings.

4.1 Function overview

MEASUREMENT ACCURACY AND RELIABILITY		
AirChip 3000 Functions	Description	
 Humidity / temperature adjustment 	 1-point or multi-point humidity calibration or adjustment 1-point or 2-point temperature calibration or adjustment Generate a time stamp for calibrations and adjustments Retain and view last adjustment date and adjustment values Generate calibration and adjustment protocols 	
 Automatic humidity sensor test and optional drift compensation 	Tests the humidity sensor for drift caused by contaminants and can be used to automatically apply a correction. The test is automatically carried out at regular intervals of time. Can be configured, enabled, or disabled	
	The humidity sensor status can be verified either with the HW4 software and is shown as Good, SQ-tuned (corrected for drift) or Bad (defective)	
Data recording	The data recording function differs from a true data logging function in the sense that the AirChip 3000 does not time stamp the data. The data recording function can be used to investigate events such as a sensor malfunction as well as to retrieve data that would otherwise be lost	
	 Start or stop data recording – up to 2000 value pairs (%RH and temperature). Starting a recording session erases all previously recorded data The recording mode and log interval can be specified When the device is powered off, the recording session is paused but not ended As long as the recording session has not been ended, the device automatically resumes recording data when powered up again The recorded data can be downloaded to a PC with the HW4 software, time stamped and viewed 	

MEASUREMENT LOOP VALIDATION	
AirChip 3000 Functions	Description
 Simulator mode 	Used to generate fixed values for the humidity, temperature and calculated parameter. Can be configured, enabled or disabled

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 10 of 27

DEVICE SAFEGUARDS	
AirChip 3000 Functions	Description
 Device write protection 	Used to protect the device with a password to prevent unauthorized digital access by a digital user. Can be configured, enabled or disabled

PROCESS PROTECTION / PROTECTION OF OTHER DEVICES	
AirChip 3000 Functions	Description
Limit humidity output to 100 %RH	Used to prevent the humidity signal from exceeding 100 %RH when condensation forms on the sensor. Can be enabled or disabled
 Out-of-limit value alarm 	Used to specify the normal range for humidity, temperature and the calculated parameter depending on the user application. Can be configured, enabled or disabled
	Out-of-limit values trigger a digital alarm which can be also be seen on the optional display
Bad sensor alarm	Built-in function. Cannot be disabled
	A bad humidity or temperature sensor triggers a digital alarm which can be also be seen on the optional display
► Fail safe mode	Used to specify a "safe" fixed value for humidity and for temperature in the event of a sensor failure. Can be configured, enabled or disabled

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 11 of 27

4.2 Factory default settings

Note: Configuration of the HF3 by the user and access to its functions requires a PC with the ROTRONIC HW4 software (version 2.1.1 or higher) installed. Service cable AC3006 or AC3009 is used to connect the HF3 service connector to a USB port of the PC (see Maintenance > Service Cable).

Configurable Settings	Applicability	Factory default
Unit system (Metric or English)	HF32, HF33	As per ordering code
Analog signal type (420 mA or other)	HF33	As per ordering code
Psychrometric calculation	HF32, HF33	As per ordering code
Output 1 parameter, scale and unit	HF32, HF33	As per ordering code (%RH or DP)
Output 2 parameter, scale and unit	HF32, HF33	Temperature, unit as per ordering code
Display resolution (optional)	HF32-S, HF33-S	1 decimal
Display backlight (optional)	HF33-S	Always on
Displayed parameters	HF32, HF33	As per ordering code
Trend indicator (display)	HF32-S, HF33-S	Enabled
Device name	HF32, HF33	Instrument model

Functions	Applicability	Factory default
Humidity / temperature adjustment	HF32, HF33	
Device write protection	HF32, HF33	Disabled
Limit humidity output to 100 %RH	HF32, HF33	Enabled
Out-of-limit value digital / display alarm	HF32-S, HF33-S	Disabled
Data recording	HF32, HF33	Enabled (loop mode – 10 min. interval)
Automatic humidity sensor test	HF32, HF33	Disabled
Humidity sensor drift compensation	HF32, HF33	Disabled
Fail safe mode	HF32, HF33	Disabled
Simulator mode	HF32, HF33	Disabled

o For a detailed description of all AirChip 3000 / HF3 main functions see document E-T-AC3000-DF-V1

 Instructions regarding the configuration of the HF3 and access to its functions are provided in the following manuals:

E-M-HW4v3-Main E-M-HW4v3-F2-002 E-M-HW4v3-DR-001 E-M-HW4v3-A2-001 E-M-AC3000-CP

o The factory default setting for dew / frost point calculation is frost point below freezing

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 12 of 27

5 Mechanical installation

5.1 General guidelines

Relative humidity is extremely dependent on temperature. Proper measurement of relative humidity requires that the probe and its sensors be at exactly the temperature of the environment to be measured. Because of this, the location where you choose to install the probe can have a significant effect on the performance of the instrument. The following guidelines should guarantee good instrument performance:

- a) **Select a representative location**: install the probe where humidity, temperature and pressure conditions are representative of the environment to be measured.
- b) **Provide good air movement at the probe**: air velocity of at least 200 ft/ minute (1 meter/second) facilitates adaptation of the probe to changing temperature.
- c) Avoid the following: (1) Close proximity of the probe to a heating element, a cooling coil, a cold or hot wall, direct exposure to sun rays, etc. (2) Close proximity of the probe to a steam injector, humidifier, direct exposure to precipitation, etc. (3) Unstable pressure conditions resulting from excessive air turbulence.
- d) Immerse as much of the probe as possible in the environment to be measured.
- e) **Prevent the accumulation of condensation water at the level of the sensor leads**. Install the probe so that the probe tip is looking downward. If this is not possible, install the probe horizontally.

5.2 Type D – through wall mount




Part **AC5005** is a flange with compression fitting that is designed to hold the probe of the HF3 type D when mounted through a wall (see Accessories). The HF3 does not require any additional support. The AC5005 allows easy installation and removal of the HF3.

5.3 Type W – surface mount

The transmitter housing can be attached to the mounting wall using screws with an approximate diameter of 3 mm (1/8).

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 13 of 27

5.4 Type R and S – surface mount

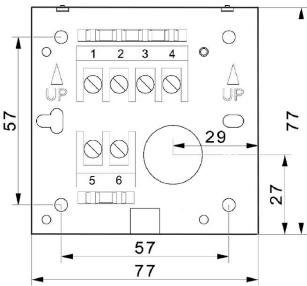

Type R and type S consist of a base plate and an electronics module that plugs into the base plate. The base plate is installed and wired first.

The base plate should be installed with terminals 1 to 4 placed on top. Preferably, use a cable with 18 AWG wires.

Once the base plate has been installed and wired, the electronics module can be inserted and secured with the screw provided.

Note: dimensions in mm

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 14 of 27

6 Electrical installation

6.1 General guidelines

Power supply wiring

Heavy machinery and instrumentation should not share the same power supply wiring. If this cannot be avoided, noise filters and surge protectors should be used. Most UPS devices have those features already integrated.

General guidelines for signal cables

The following guidelines are derived from European Standard EN 50170 for the transmission of signals by copper wires. When planning an installation, the rules provided by EN 50170 should be followed under consideration of local circumstances to determine the position of machines and equipment.

All ROTRONIC products are tested for Electromagnetic Compatibility according to EMC Directive 2004/106/EG and following European standards:

- EN 61000-6-1: 2001, EN 61000-6-2: 2005
- EN 61000-6-3: 2005, EN 61000-6-4: 2001 + A11

Whenever the level of electromagnetic interference is expected to be high, both the instruments and signal cables should be placed as far away as possible from the source of interference.

In general, signal cables should be installed in bundles or channels / conduits, separate from other cables as indicated in the table below:

 Bus signals such as RS485 Data signals for PCs, printers etc. shielded analog inputs unshielded direct current (<= 60V) shielded process signals (<= 25 V) unshielded alternate current (<= 25V) coaxial cables for CRT monitors 	in common bundles or channels / conduits
 direct current from 60 V to 400 V (unshielded) alternate current from 25V to 400 V (unshielded) 	in separated bundles or channels / conduits, without minimum distance
 direct and alternate current > 400 V (unshielded) Telephone lines lines leading into EX-rated areas 	in separated bundles or channels / conduits, without minimum distance

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland	
Document code	Unit	
HygroFlex HF3 Transmitters: User Guide	Instruction Manual	
	Document Type	
Document title	Page 15 of 27	

Lightning protection

Cabling in areas with a risk of lightning requires a lightning protection. For cabling underground in between buildings, we recommend the use of special fiber optic cables. If this is not possible, use copper cables that are suitable for underground installation.


6.2 Cable grip and cable specifications

Both type D and type W have one M16 sealing cable grip. This cable grip provides effective sealing only with cables having the proper outside diameter. Preferably, use a cable with an outside diameter of 6 to 7 mm (0.236 to 0.275 inch) with 18 AWG wires.

6.3 Wiring

6.3.1 HF32: 2-wire, loop powered transmitter


Electrical diagram

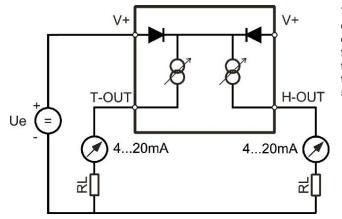

The maximum permissible cable length connecting the HF32 to other devices is determined by the total resistance resulting from the addition of the cable resistance and that of the devices connected in series with the unit. This resistance should not exceed 500 ohms.

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland	
Document code	Unit	
HygroFlex HF3 Transmitters: User Guide	Instruction Manual	
	Document Type	
Document title	Page 16 of 27	


Terminal block diagram for type D and W

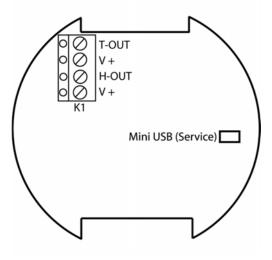

Terminals	Description
T-OUT	Temperature output (+) OUT-2
V+	Power supply: 1028 VDC (+)
H-OUT	Relative humidity or dew point (+) OUT-1
V+	Power supply: 1028 VDC (+)

Note: connect the + of the power supply to only one of the V+ terminals. The two terminals marked V+ are internally connected.

Terminal block diagram for type R and S

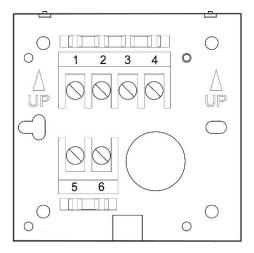

Terminals	Description		
1	Power supply: 1028 VDC (+)		
2	Temperature output (+) OUT-2		
3	Power supply: 1028 VDC (+)		
4	Relative humidity or dew point (+) OUT-1		
5	Not used		
6	Not used		

Note: connect the + of the power supply to only one of the terminals 1 or 3. Terminals 1 and 3 are internally connected.


Measuring humidity or temperature only

Unless configured to measure either humidity only or temperature only, proper operation of the HF32 requires both current loops to be closed. The HF32 can be directly ordered from the factory to measure either humidity or temperature only. When necessary, any unused output of the HF32 can be disabled with the ROTRONIC HW4 software. When the HF32 is configured with one of the two outputs disabled, close only the loop that is being used.

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland	
Document code	Unit	
HygroFlex HF3 Transmitters: User Guide	Instruction Manual	
	Document Type	
Document title	Page 17 of 27	

6.3.2 HF33: 3-wire transmitter


Electrical diagram for voltage outputs

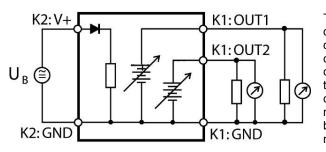

The maximum permissible cable length can be determined under consideration of the voltage drop caused by the current flowing to the devices connected to the unit. The voltage drop in the cable depends both on cable resistance and on the equivalent resistance of the devices connected in parallel to the unit. The total resistance connected to each unit output should be at least 1000 ohms. Cable resistance should not be more than 1/1000 of the load resistance.


Minimum load requirements apply to the external device or circuit connected to the HF3 transmitter. These requirements are defined in the "Operation" chapter

Electrical diagram for current outputs

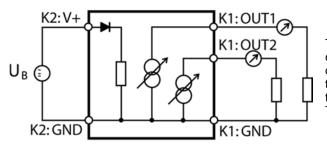

The maximum permissible cable length, connecting the unit to other devices, is determined by the total resistance resulting from the addition of the cable resistance and that of the devices connected in series with the unit. This resistance should not exceed 500 ohms.


Terminal block diagram for type D and W

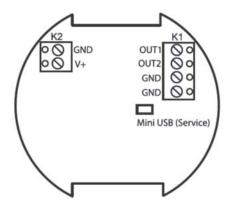

Terminals	Description		
V+	Power supply: 1840 VDC (+) or 1328 VAC (Phase)		
GND	Power supply (-) or neutral		
OUT1	Relative humidity or dew point (+) OUT-1		
OUT2	Temperature output (+) OUT-2		
GND	Ground (tied with other GND)		

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 18 of 27

Terminal block diagram for type R and S

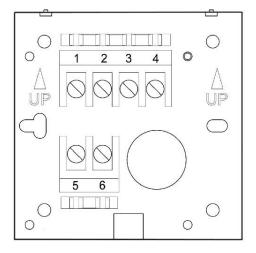

Terminals	Description
1	Power supply: 1840 VDC (+) or 1328 VAC (Phase)
2	Power supply (-) or neutral / ground
3	Relative humidity or dew point (+) OUT-1
4	Temperature output (+) OUT-2
5	Not used
6	Not used

Measuring humidity or temperature only

Operation of the HF33 does not require both current loops to be closed. When using the HF33 to measure either humidity only or temperature only, close only the loop that is being used.

If necessary, any unused output of the HF32 can be disabled with the ROTRONIC HW4 software.

6.3.3 Grounding (HF32, HF33)


We generally recommend grounding the (-) side of the power supply, especially if the electronics will be subjected to a low humidity environment ($35 \ \%$ RH or less).

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland	
Document code	Unit	
HygroFlex HF3 Transmitters: User Guide	Instruction Manual	
	Document Type	
Document title	Page 19 of 27	

7 Operation

7.1 Minimum load requirements for the HF33 with voltage outputs

The following requirements apply to any external device or circuit connected to the HF33 transmitter with voltage outputs:

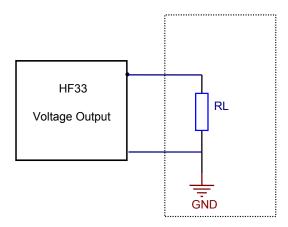

HF33 output signal	Input resistance RL
01V	>=1kOhm
05V	>=5kOhm
010V	>=10kOhm

In the situation where the external device uses an internal pull-up resistor the value of this resistor should meet the requirements shown below. It is also necessary to add a pull-down resistor RL connected to ground in order to be able to read 100% of the range of the HF33 voltage output.

.....

VCC				
T	HF33 signal	VCC	R pull-up	RL
	01V	3.3V	≥ 250 kOhm	1 kOhm
R Pull-up				
	HF33 signal	VCC	R pull-up	RL
T	01V	5.0V	≥ 400 kOhm	1 kOhm
	05V	5.0V	≥ 400 kOhm	5 kOhm
RL				
	HF33 signal	VCC	R pull-up	RL
	01V	10.0V	≥ 1 Mohm	1 kOhm
	05V	10.0V	≥ 1 Mohm	5 kOhm
GND	010V	10.0V	≥ 1 Mohm	10 kOhm
		HF33 signal 01V R Pull-up HF33 signal 01V 01V 01V 01V 01V 01V 01V 01V 01V 05V	HF33 signal VCC 01V 3.3V R Pull-up HF33 signal VCC 01V 5.0V 05V 5.0V RL HF33 signal VCC 01V 10.0V 01V 10.0V	HF33 signal VCC R pull-up R Pull-up 01V 3.3V ≥ 250 kOhm HF33 signal VCC R pull-up 01V 5.0V ≥ 400 kOhm 05V 5.0V ≥ 400 kOhm RL HF33 signal VCC R pull-up 01V 10.0V ≥ 400 kOhm 05V 10.0V ≥ 1 Mohm

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland	
Document code	Unit	
HygroFlex HF3 Transmitters: User Guide	Instruction Manual	
	Document Type	
Document title	Page 20 of 27	

8 Maintenance

8.1 Service cable

IMPORTANT:


- Use service cable AC3009 with all 2-wire, loop powered transmitters. This cable powers up the transmitter via the service connector. Do not use any other method for powering the transmitter when using this cable AC3009 as this will create a ground loop and damage the transmitter. For the same reasons do not use cable AC3006 with a 2-wire, loop powered transmitter.
- Use service cable AC3006 with all 3-wire transmitters. This cable does not provide power to the transmitter and the transmitter should powered separately when using this cable
- Both cables AC3006 and AC3009 convert UART (service connector) to USB and are used to connect the HF3 to a USB port of a PC running the ROTRONIC HW4 software. Prior to using any of these cables, the ROTRONIC USB driver must be installed on the PC. Both the driver and the installation instructions (document **E-M-HW4v3-Main**) are located on the HW4 CD.
- As an alternative, cable AC2001 is used to connect the HF3 to a probe input of the HP23 hand-held calibrator. For service purposes, the HP23 offers essentially the same functionality as the HW4 software.

8.2 Location of the service connector (mini-USB type)

WARNING: the service connector is a UART interface with a mini-USB connector type. Do not connect the service connector directly to the USB port of a PC or hub.


8.2.1 Type R and S

The service connector (UART interface) is located at the bottom of the transmitter, on the left side.



8.2.2 Type D and W

The service connector (UART interface) is located inside of the enclosure and can be accessed after removing the cover.

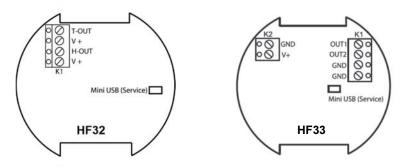

© 2009-2013; Rotronic AG

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 21 of 27

8.3 **Periodic calibration check**

Both the Pt 100 RTD temperature sensor and associated electronics are very stable and should not require any calibration after the initial factory adjustment.

Long term stability of the ROTRONIC Hygromer humidity sensor is typically better than 1 %RH per year. For maximum accuracy, calibration of the HF3 should be verified every 6 to 12 months. Applications where the HF3 is exposed to significant pollution may require more frequent verifications. Calibration and adjustment of the HF3 can be done with either a PC with the HW4 software installed or with another instrument such as the HP23 hand-held calibrator.

Procedure for calibrating or adjusting the HF3 with the ROTRONIC HW4 software:

- Use the appropriate model of service cable (see Maintenance > Service Cable) to connect the service connector of the HF3 to a USB port of a PC with the HW4 software installed. Note that the ROTRONIC USB driver must be installed on the PC as explained in the HW4 manual E-M-HW4v3-Main
- Start HW4 on the PC and search for the HF3 (HW4 Main Menu Bar > Devices and Groups > Search for USB Masters).
- After finding the HF3 with HW4, expand the device tree to see the HF3 functions.
 Select Probe Adjustment. Instructions for using the ROTRONIC calibration devices and humidity standards are provided in document E-M-CalBasics
- For further instructions see HW4 manual E-M-HW4v3-A2-001

8.4 Cleaning or replacing the dust filter (type D and W)

Depending on the application, the dust filter may require cleaning from time to time, Cleaning should be done without removing the filter from the probe. Clean the filter with a fine brush. If this is not sufficient, the filter should be replaced. To do this, unscrew the filter from the probe. Before putting on a new dust filter, check the alignment of both sensors with the probe. The wires that connect the sensors to the probe are very thin and bend easily. If this happens, correct the alignment by holding the sensor very gently with a pair of small <u>flat</u> nosed pliers.

8.4.1 Validation of the output signals transmission

If so desired, transmission of the HF3 output signals can be validated by using the simulator function. The HW4 software is required to enable and configure this function. When this function is enabled the HF3 generates fixed digital and analog signals as specified by the user. For instructions see HW4 manual **E-M-HW4v3-F2-002**

9 Firmware updates

Firmware updates will be available on the ROTRONIC website for downloading. Firmware files are given a name that shows both to which device the file applies and the version number of the firmware. All firmware files have the extension HEX. Procedure for updating the firmware:

- Use the appropriate model of service cable (see Maintenance > Service Cable) to connect the service connector of the HF3 to a USB port of a PC with the ROTRONIC HW4 software installed. Note that the ROTRONIC USB driver must be installed on the PC as explained in the HW4 manual E-M-HW4v3-Main
- Copy the firmware update file from the ROTRONIC website to the PC.
- Start HW4 software on the PC and search for the HF3 (HW4 Main Menu Bar > Devices and Groups > Search for USB Masters).
- After finding the HF3, expand the device tree to see the HF3 functions. Select Device Manager. In the Device Manager menu bar select Tools > Firmware Update. For instructions see HW4 manual E-M-HW4v3-F2-002

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 22 of 27

10 Technical data

10.1 Specifications

General	HF32	HF33
Device type	Humidity temperature transmitter	
Circuit type	2-wire, loop powered 3-wire	
Mechanical configuration types	D, R, S and W	

Power supply and connections	HF32	HF33
Supply voltage (VDD)	10…28VDC V min = 10 V + (0.02 x Load*) *Load resistance in ohms.	1840 VDC or 1328 VAC
Nominal current consumption	2 x 20 mA	< 50 mA
Electrical connections	Type D and W: terminal block and M16 cable grip Type R and S: terminal block	
Polarity protection	Protective diode on V+	

Humidity measurement	HF32	HF33	
Sensor	ROTRONIC Hygromer [®] II	V1	
Measuring range	0100 %RH		
Measurement accuracy at 23 °C	±2.0 %RH (Type D, S and W) / ± 1.0 %RH (Type R)		
Repeatability	0.3 %RH	0.3 %RH	
Long term stability	< 1 %RH / year	< 1 %RH / year	
Sensor time constant	Typical 10 sec, 63% of a 3	5 to 80 %RH step change (1m/sec air flow at sensor)	

Temperature measurement	HF32	HF33
Sensor	Pt100 RTD, IEC 751 1/3 cl	ass B
Measuring range	-4060 °C / -40140 °F -1060 °C / 14140 °F (ι	units with display)
Measurement accuracy at 23 °C	±0.3 °C (Type D, S and W) / ±0.2 °C (Type R)	
Repeatability	0.05°C	
Long term stability	< 0.1°C / year	
Sensor time constant	Typical 4 sec, 63% of a ste	p change (1m/sec air flow at sensor)

Calculated parameters	HF32	HF33
Psychrometric calculations	Dew or frost point (user configurable option)	

Start-up time and data refresh rate	HF32	HF33
Start-up time	3.4s (typical)	1.9s (typical)
Data refresh rate	3.4s (typical)	1.7s (typical)

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 23 of 27

Со	nfigurable analog outputs	HF32	HF33	
Output 1		Can be made to correspond to any parameter		
	Factory default parameter	Relative humidity or dew / frost poir	Relative humidity or dew / frost point	
	Factory default scale	0100 %RH or -5050 °C DP or -	-50100 °F DP	
Ou	tput 2	Can be made to correspond to any parameter		
	Factory default parameter	Temperature		
	Factory default scale	050 °C or 0 100 °F		
Ou	tput 1 and Output 2			
	Signal type	420 mA	020 mA 4 20 mA 0 1 V 0 5 V 0 10 V (user configurable)	
	User configurable scaling limits	-999.99 9999.99 engineering un	its	
	Maximum offset at bottom of signal range	no offset	01V signal range: 10 mV 05V signal range: 50 mV 010V signal range: 100 mV 020mA signal range: 0.2 mA 420mA signal range: no offset	
	Short circuit tolerant	Yes		
	Maximum external load	500 Ω	500 Ω (current output)	
	Minimum external load	0 Ω	1 kΩ (01 V output) 5 kΩ (05 V output) 10 kΩ (010 V output) 0 Ω (current output)	

Digital interface (service connector)	HF32	HF33
Interface type	UART (Universal Asynchronous Receiver Transmitter)	
Maximum service cable length	5 m (16.4 ft)	

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 24 of 27

General specifications	HF32	HF33	
Optional display (S and R configurations only)	LC, 1 or 2 decimals resolution, no backlight, trend indication	LC, 1 or 2 decimals resolution, with backlight and trend indication	
Probe material	Polycarbonate, except typ	Polycarbonate, except type R and S	
Probe dust filter material	Polyethylene, except type	Polyethylene, except type R and S	
Housing material	ABS	ABS	
Housing protection grade	IP 65, except type R and S	IP 65, except type R and S	
Physical dimensions	See Models	See Models	
Weight	90 g (3.1 oz)	90 g (3.1 oz)	


Conformity with standards	HF32	HF33
CE / EMC immunity	EMC Directive 2004/108/EG : EN 61000-6-1 : 2001, EN 61000-6-2 : 2005 EN 61000-6-3 : 2005, EN 61000-6-4 : 2001 + A11	
Solder type	Lead free (RoHS directive)	
Fire protection class	Corresponds to UL94-HB	
FDA / GAMP directives	compatible	

Environmental limits	HF32	HF33
Storage and transit	-50…+70 °C / -20…+70 °C (models with display) 0…100 %RH, non condensing	
Operating limits at electronics	-40 … +60 °C / -1060 °C (models with display) 0100 %RH, non condensing	
Temperature limits at probe	-40+60 °C	
Maximum humidity at sensor	100 %RH	
Maximum air velocity at probe	20 m/s (3,935 ft /min), except type R and S	
Critical environments	Humidity sensor: as per DV04-14.0803.02 – Critical chemicals	

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 25 of 27

10.2 Dew point accuracy

The HF3 can be configured to calculate either the dew point or frost point based on the measurement of relative humidity and temperature. The accuracy of this conversion varies, depending on the humidity and temperature conditions as shown in the graph below:

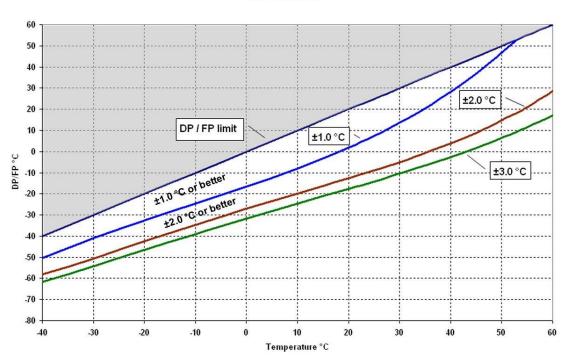

Example: at a temperature of 10 °C, a dew point value of 0 °C is measured with an accuracy of \pm 1.0 °C or better.

DP/FP Accucary

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 26 of 27

11 Accessories

For accessories and parts such as the HW4 configuration software, service cables, calibration accessories and spare dust filters, please see document **E-M-HC2-accessories**

12 Supporting documents

Document File Name	Contents	
E-M-HC2-accessories	Accessories and parts for probes, indicators and transmitters	
E-T-AC3000-DF-V1	AirChip 3000 Description and Main Functions	
E-M-HW4v3-DIR	List of the HW4 manuals	
E-M-HW4v3-Main	HW4 software version 3: General instructions and functions common to all devices	
E-M-HW4v3-F2-002	HW4 software version 3: HF3 transmitters and hygrostats Device configuration and AirChip 3000 functions	
E-M-HW4v3-A2-001	HW4 software version 3: Probe Adjustment function AirChip 3000 devices	
E-M-HW4v3-DR-001	HW4 software version 3: Data Recording Function AirChip 3000 Devices	
E-M-AC3000-CP	AirChip 3000 Communication Protocol	
E-M-CalBasics	Temperature and humidity adjustment basics Instructions for using the ROTRONIC humidity standards	
E-T-HumiDefs	Humidity Definitions	

Note: All document file names have an extension corresponding to the document release number (example of a first release: E-M-HW4v3-Main_10). This extension is not shown in the above table.

E-M-HF3-V1_23	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroFlex HF3 Transmitters: User Guide	Instruction Manual
	Document Type
Document title	Page 27 of 27

13 Document releases

Doc. Release	Date	Notes
_20	Apr. 11, 2009	Original release
_21	Jun. 18, 2010	Updated document for HW4 software v.3
_22	Oct. 28, 2011	Updated this document regarding the model of service cable to be used with 2-wire and 3-wire models.
_23	Jan. 13. 2014	HF34 removed (discontinued) Update for firmware v3.0 Specification of power supply updated Offset of analog outputs updated Drawing of terminal block updated