


310 Series Analog Meters

Legacy Analog Meters delivering quality and precision for over 70 years

Features:

- 18 Ranges and Functions
- AC/DC Voltage Measurement to 1200V (3018, 3022)
- 3022 and 3067 are designed for the telephone industry and feature a polarity switch
- Measures 20,000 ohms per volt DC and 5,000 ohms per volt AC
- Diode overload protection against damage to the meter movements caused by accidental overloads
- The fuse and batteries can be easily replaced by removing the back cover
- Small enough to be carried in your tool box, glove compartment, brief case, or shirt pocket with all the versatility and performance of larger, more expensive bench-size models
- Includes test leads, alligator clips and batteries
- Drop resistant high impact case
- Fused Resistance ranges
- 3-year warranty

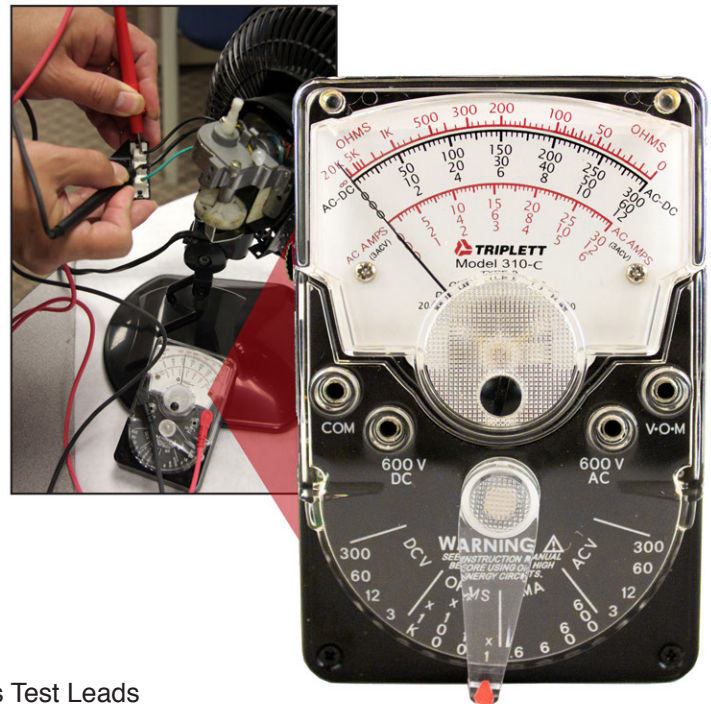

Ordering Information:

3018	Model 310 Analog Meter
3022	Model 310-C Analog Meter
3067	Model 310-TEL Analog Meter
79-153	42" Universal Mini Banana Test Leads
79-695	42" Universal Mini Banana to Angled Bed of Nails Test Leads

310 Series Analog Meters

Legacy Analog Meters delivering quality and precision for over 70 years

Specifications

	Model 310 (PN 3018)	Model 310-C (PN 3022)	Model 310-TEL (PN 3067)	Accuracy
	Range	Range	Range	
Total Ranges	18	18	16	
AC Voltage	3V, 12V, 60V, 300V, 1200V (5k Ω /Volt)	3V, 12V, 60V, 300V, 600V (15k Ω /Volt)	3V, 15V, 60V, 300V (5k Ω /Volt)	$\pm 4\%$ FS
DC Voltage	3V, 12V, 60V, 300V, 1200V (20k Ω /Volt)	3V, 12V, 60V, 300V, 600V (20k Ω /Volt)	3V, 15V, 60V, 300V (20k Ω /Volt)	$\pm 3\%$ FS
DC Current	0.6mA, 6mA, 60mA, 600mA	0.6mA, 6mA, 60mA, 600mA	0.6mA, 6mA, 60mA, 600mA	$\pm 3\%$ FS
Resistance	20k Ω , 200k Ω , 2M Ω , 20M Ω	20k Ω , 200k Ω , 2M Ω , 20M Ω	20k Ω , 200k Ω , 2M Ω , 20M Ω	$\pm 3\%$
Polarity reversing	—	Switchable	Switchable	
Fuse	Littlefuse 217.063, 1/6A, 250V, 5 x 20mm	Littlefuse 217.063, 1/6A, 250V, 5 x 20mm	Littlefuse 217.063, 1/6A, 250V, 5 x 20mm	
Dimensions	2.75 x 1.3 x 4.25" (69.8 x 33 x 108mm)	2.75 x 1.3 x 4.25" (69.8 x 33 x 108mm)	2.75 x 1.3 x 4.25" (69.8 x 33 x 108mm)	
Weight	7.2 oz. (204g)	7.2 oz. (204g)	7.2 oz. (204g)	